The Harman Kardon Model hk350i

AM/FM/Stereo FM Solid State Receiver

Technical Manual

harman/kardon

PRECAUTIONS

1. Always disconnect the chassis from power line when soldering. Turning the power switch OFF is not enough. Power line leakage passing through the heating element may destroy the transistors.

2. Never attempt to do any work on the transistor amplifiers without first disconnecting the AC line cord and waiting until the power supply filter capacitors have discharged.

3. Replacement for output and driver transistors, if necessary, must be made from the same beta group as the original type.

4. If one output transistor burns out (open or short) always remove all the output transistors in that channel and check the bias adjustment, the control and other parts in the network with an ohmmeter before inserting a new transistor. All transistors in one channel will be destroyed if the base biasing circuit is open on the emitter end.

5. When mounting a replacement power transistor, be sure that the bottom of the flange, the mica insulators and the surface of the heat sink are free of foreign matter, for they may cause transistor failure.

6. Silicon grease must be applied between the transistor and the mica insulator, and between the mica insulator and the heat sink for better heat conduction.

7. Fuses must be replaced with size and type indicated. Use of other types can expose components to destructive current levels.

ALIGNMENT PROCEDURES

AM ALIGNMENT

Instruments: 1. AM Signal Generator modulated with 400Hz at 30%.
2. Oscilloscope
3. AC V.T.V.M.

Notes: 1. Set function selector switch to AM position.
2. Connect signal source to a loop placed to radiate signals into AM antenna loop stick (L251).

Step	Signal Source	Connect Output Meter To	Dial Setting	Adjust	Adjust For
1	455kHz	VTVM and oscilloscope to TP1 and ground	Quiet point on band	T251, T252, T253	Maximum output on VTVM and at the same time clean wave form on oscilloscope
2	540kHz	Same as above	540kHz	L252	Same as above
3	1600kHz	Same as above	1600kHz	TC252	Same as above
4	Repeat steps 2 and 3 for optimum sensitivity				
5	600kHz	VTVM and oscilloscope to TP1 and ground	Tune for signal	L251	Maximum output on VTVM and at the same time clean wave form on oscilloscope
6	1400kHz	Same as above	Same as above	TC251	Same as above
7	Repeat steps 5 and 6 for optimum sensitivity				

ALIGNMENT PROCEDURES

FM ALIGNMENT

Instruments: 1. FM Signal Generator modulated with 1000Hz at 100% (75kHz).
2. Center Zero Meter
3. Distortion Meter
4. AC V.T.V.M.

Notes: 1. Set function selector switch to AUTO FM position.
2. Set muting switch to OFF (button in) position.
3. Connect signal source to FM antenna terminals.
4. Set signal weak to obtain an exact tuning point when tuning.

Step	Signal Source	Connect Output Meter To	Dial Setting	Adjust	Adjust For
1		VTVM to tape out jack	Quiet point on band	T101	Maximum noise on VTVM
2		Center zero meter to TP2 and TP3	Same as above	T201(A)	Indicating "0" on center zero meter
3		VTVM to tape out jack	Same as above	T201(B)	Minimum noise on VTVM
4	88MHz 6dBf (1μV)	Same as above	88MHz	L105	Maximum output on VTVM
5	108MHz 6dBf (1μV)	Same as above	108MHz	TC103	Same as above
6	Repeat steps 4 and 5 for optimum sensitivity				
7	90MHz 6dBf (1μV)	VTVM to tape out jack	Tune for signal	L102, L103	Maximum output on VTVM
8	106MHz 6dBf (1μV)	Same as above	Same as above	TC101, TC102	Same as above
9	Repeat steps 7 and 8 for optimum sensitivity				
10	98MHz 65dBf (970μV)	Distortion meter to tape out jack	Tune for signal	T201(B)	Minimum reading on distortion meter
11	Repeat step 2 (DC balance adjustment) once again.				

MUTING SENSITIVITY ADJUSTMENT

Instruments: 1. FM Signal Generator modulated with 1000Hz at 100% (75kHz).
2. AC V.T.V.M.

Notes: 1. Set function selector switch to AUTO FM position.
2. Set muting switch to ON (button out) position.
3. Connect signal source to FM antenna terminals.
4. Turn VR355 to clockwise fully.

Signal Source	Connect Output Meter To	Dial Setting	Adjust	Adjust For
98MHz 30dBf (16μV)	AC VTVM to tape out jack	98MHz	VR355	Turn VR355 to counter-clockwise till needle deflection on VTVM

ALIGNMENT PROCEDURES

SIGNAL STRENGTH INDICATOR ADJUSTMENT

Instrument: FM Signal Generator modulated with 1000Hz at 100% (75kHz).
Notes: 1. Set function selector switch to AUTO FM position.
2. Connect signal source to FM antenna terminals.
3. Set signal weak to obtain an exact tuning point when tuning.

Step	Signal Source	Dial Setting	Adjust	Adjust For
1	98MHz 24dBf (8μV)	98MHz	VR354	"1" of signal strength display LEDs lights
2	98MHz 85dBf (9.7mV)		VR352	All signal strength display LEDs lights
3	Repeat step 1 once again.			

MPX ADJUSTMENT

Instruments: 1. FM Signal Generator modulated with 1000Hz at 100% (75kHz).
2. Frequency Counter
Notes: 1. Set function selector switch to AUTO FM position.
2. Connect signal source to FM antenna terminals.

Signal Source	Connect Output Meter To	Dial Setting	Adjust	Adjust For
98MHz 65dBf (970μV)	Frequency Counter to TP4 and ground	98MHz	VR302	76kHz

STEREO FM INDICATOR ADJUSTMENT

Instrument: FM Stereo Signal Generator modulated with 1000Hz at 100% (75kHz).
Notes: 1. Set function selector switch to AUTO FM position.
2. Connect signal source to FM antenna terminals.
3. Set main signal ON and pilot signal (9%) ON of FM stereo signal generator.

Signal Source	Dial Setting	Adjust	Adjust For
98MHz 36dBf (30μV)	98MHz	VR353	Stereo FM indicator LED lights to just light

SEPARATION ADJUSTMENT

Instruments: 1. FM Stereo Signal Generator modulated with 1000Hz at 100% (75kHz).
(L + R = 45% L − R = 45% 19kHz = 9%)
2. AC V.T.V.M.

Notes: 1. Set function selector switch to AUTO FM position.
2. Set blend control to STEREO position.
3. Connect signal source to FM antenna terminals.
4. Set signal weak to obtain an exact tuning point when tuning.

Step	Signal Source	Connect Output Meter To	Dial Setting	Adjust	Adjust For
1	Set Lch signal ON at FM stereo signal generator				
2	98MHz 65dBf (970μV)	VTVM to Rch tape out jack	98MHz	VR301, VR303	Minimum output on VTVM
3	Set Rch signal ON at FM stereo signal generator				
4	98MHz 65dBf (970μV)	VTVM to Lch tape out jack	98MHz	VR301, VR303	Minimum output on VTVM

IDLING CURRENT ADJUSTMENT

Instrument: DC V.T.V.M.
Notes: 1. Set function selector switch to AUX position.
2. Set volume control to minimum position.

Step	Connect Output Meter To	Adjust	Adjust For
1	DC VTVM to TP5(+) and TP6(−)	VR404	33mV
2	DC VTVM to TP7(+) and TP8(−)	VR403	33mV

DC VOLTAGE BALANCE ADJUSTMENT

Instrument: DC V.T.V.M.
Notes: 1. Set function selector switch to AUX position.
2. Set volume control to minimum position.
3. Press in speaker 1 push button to ON (button in) position.

Step	Connect Output Meter To	Adjust	Adjust For
1	DC VTVM to Lch terminal of speaker system 1	VR402	0V ±60mV
2	DC VTVM to Rch terminal of speaker system 1	VR401	0V ±60mV

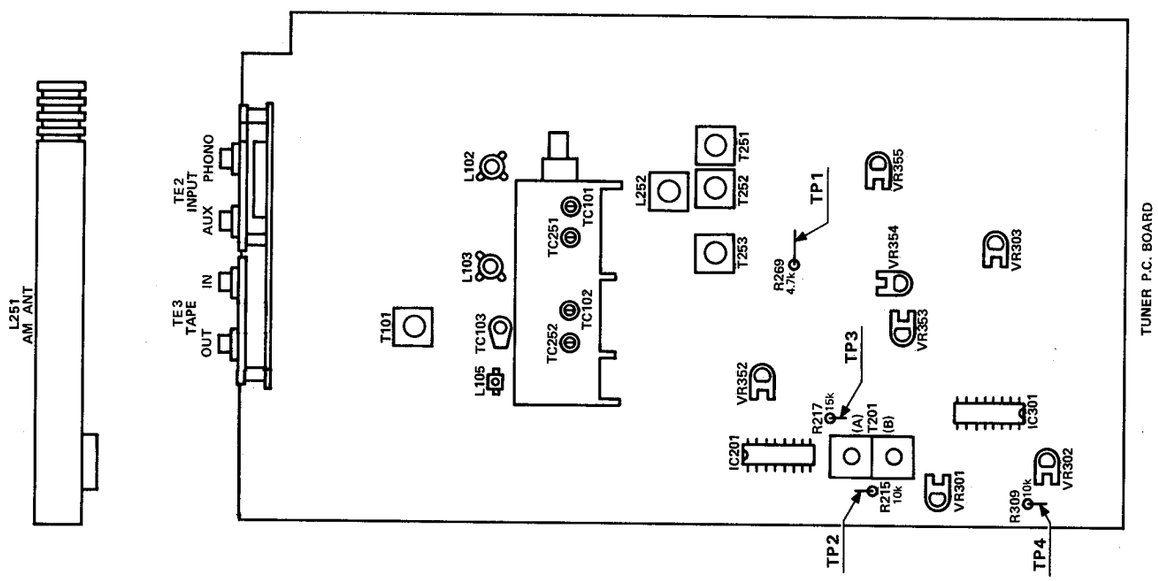

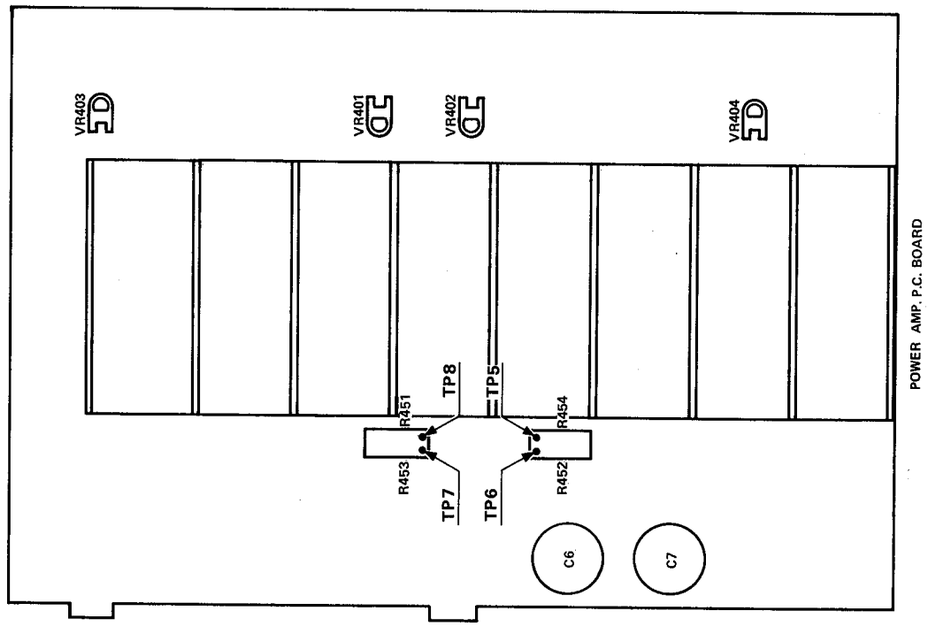

Fig. 1—Alignment Points Location

ALIGNMENT PROCEDURES

SEPARATION ADJUSTMENT

Instruments: 1. FM Stereo Signal Generator modulated with 1000Hz at 100% (75kHz).
(L + R = 45% L − R = 45% 19kHz = 9%)
2. AC V.T.V.M.

Notes: 1. Set function selector switch to AUTO FM position.
2. Set blend control to STEREO position.
3. Connect signal source to FM antenna terminals.
4. Set signal weak to obtain an exact tuning point when tuning.

Step	Signal Source	Connect Output Meter To	Dial Setting	Adjust	Adjust For
1	Set Lch signal ON at FM stereo signal generator				
2	98MHz 65dBf (970μV)	VTVM to Rch tape out jack	98MHz	VR301, VR303	Minimum output on VTVM
3	Set Rch signal ON at FM stereo signal generator				
4	98MHz 65dBf (970μV)	VTVM to Lch tape out jack	98MHz	VR301, VR303	Minimum output on VTVM

IDLING CURRENT ADJUSTMENT

Instrument: DC V.T.V.M.

Notes: 1. Set function selector switch to AUX position.
2. Set volume control to minimum position.

Step	Connect Output Meter To	Adjust	Adjust For
1	DC VTVM to TP5(+) and TP6(−)	VR404	33mV
2	DC VTVM to TP7(+) and TP8(−)	VR403	33mV

DC VOLTAGE BALANCE ADJUSTMENT

Instrument: DC V.T.V.M.

Notes: 1. Set function selector switch to AUX position.
2. Set volume control to minimum position.
3. Press in speaker 1 push button to ON (button in) position.

Step	Connect Output Meter To	Adjust	Adjust For
1	DC VTVM to Lch terminal of speaker system 1	VR402	0V ±60mV
2	DC VTVM to Rch terminal of speaker system 1	VR401	0V ±60mV

ALIGNMENT PROCEDURES

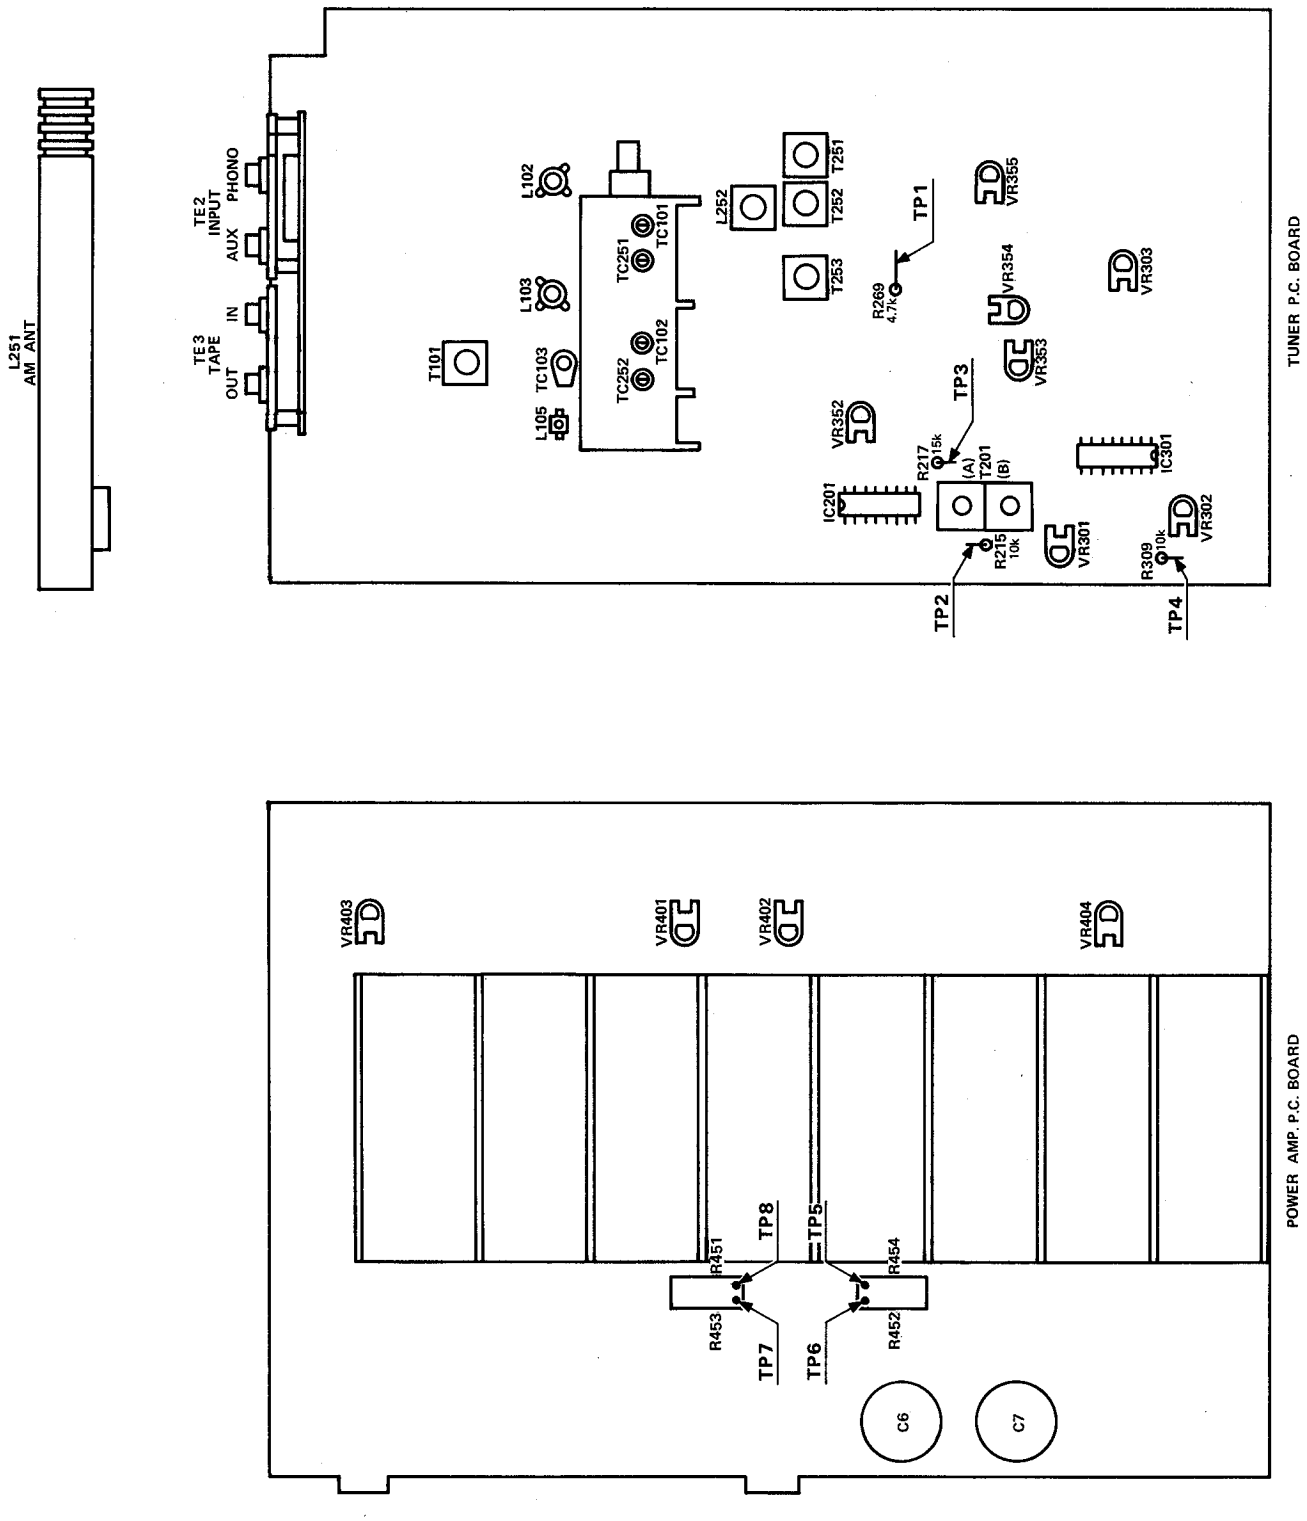

Fig. 1—Alignment Points Location

SCHEMATIC DIAGRAM

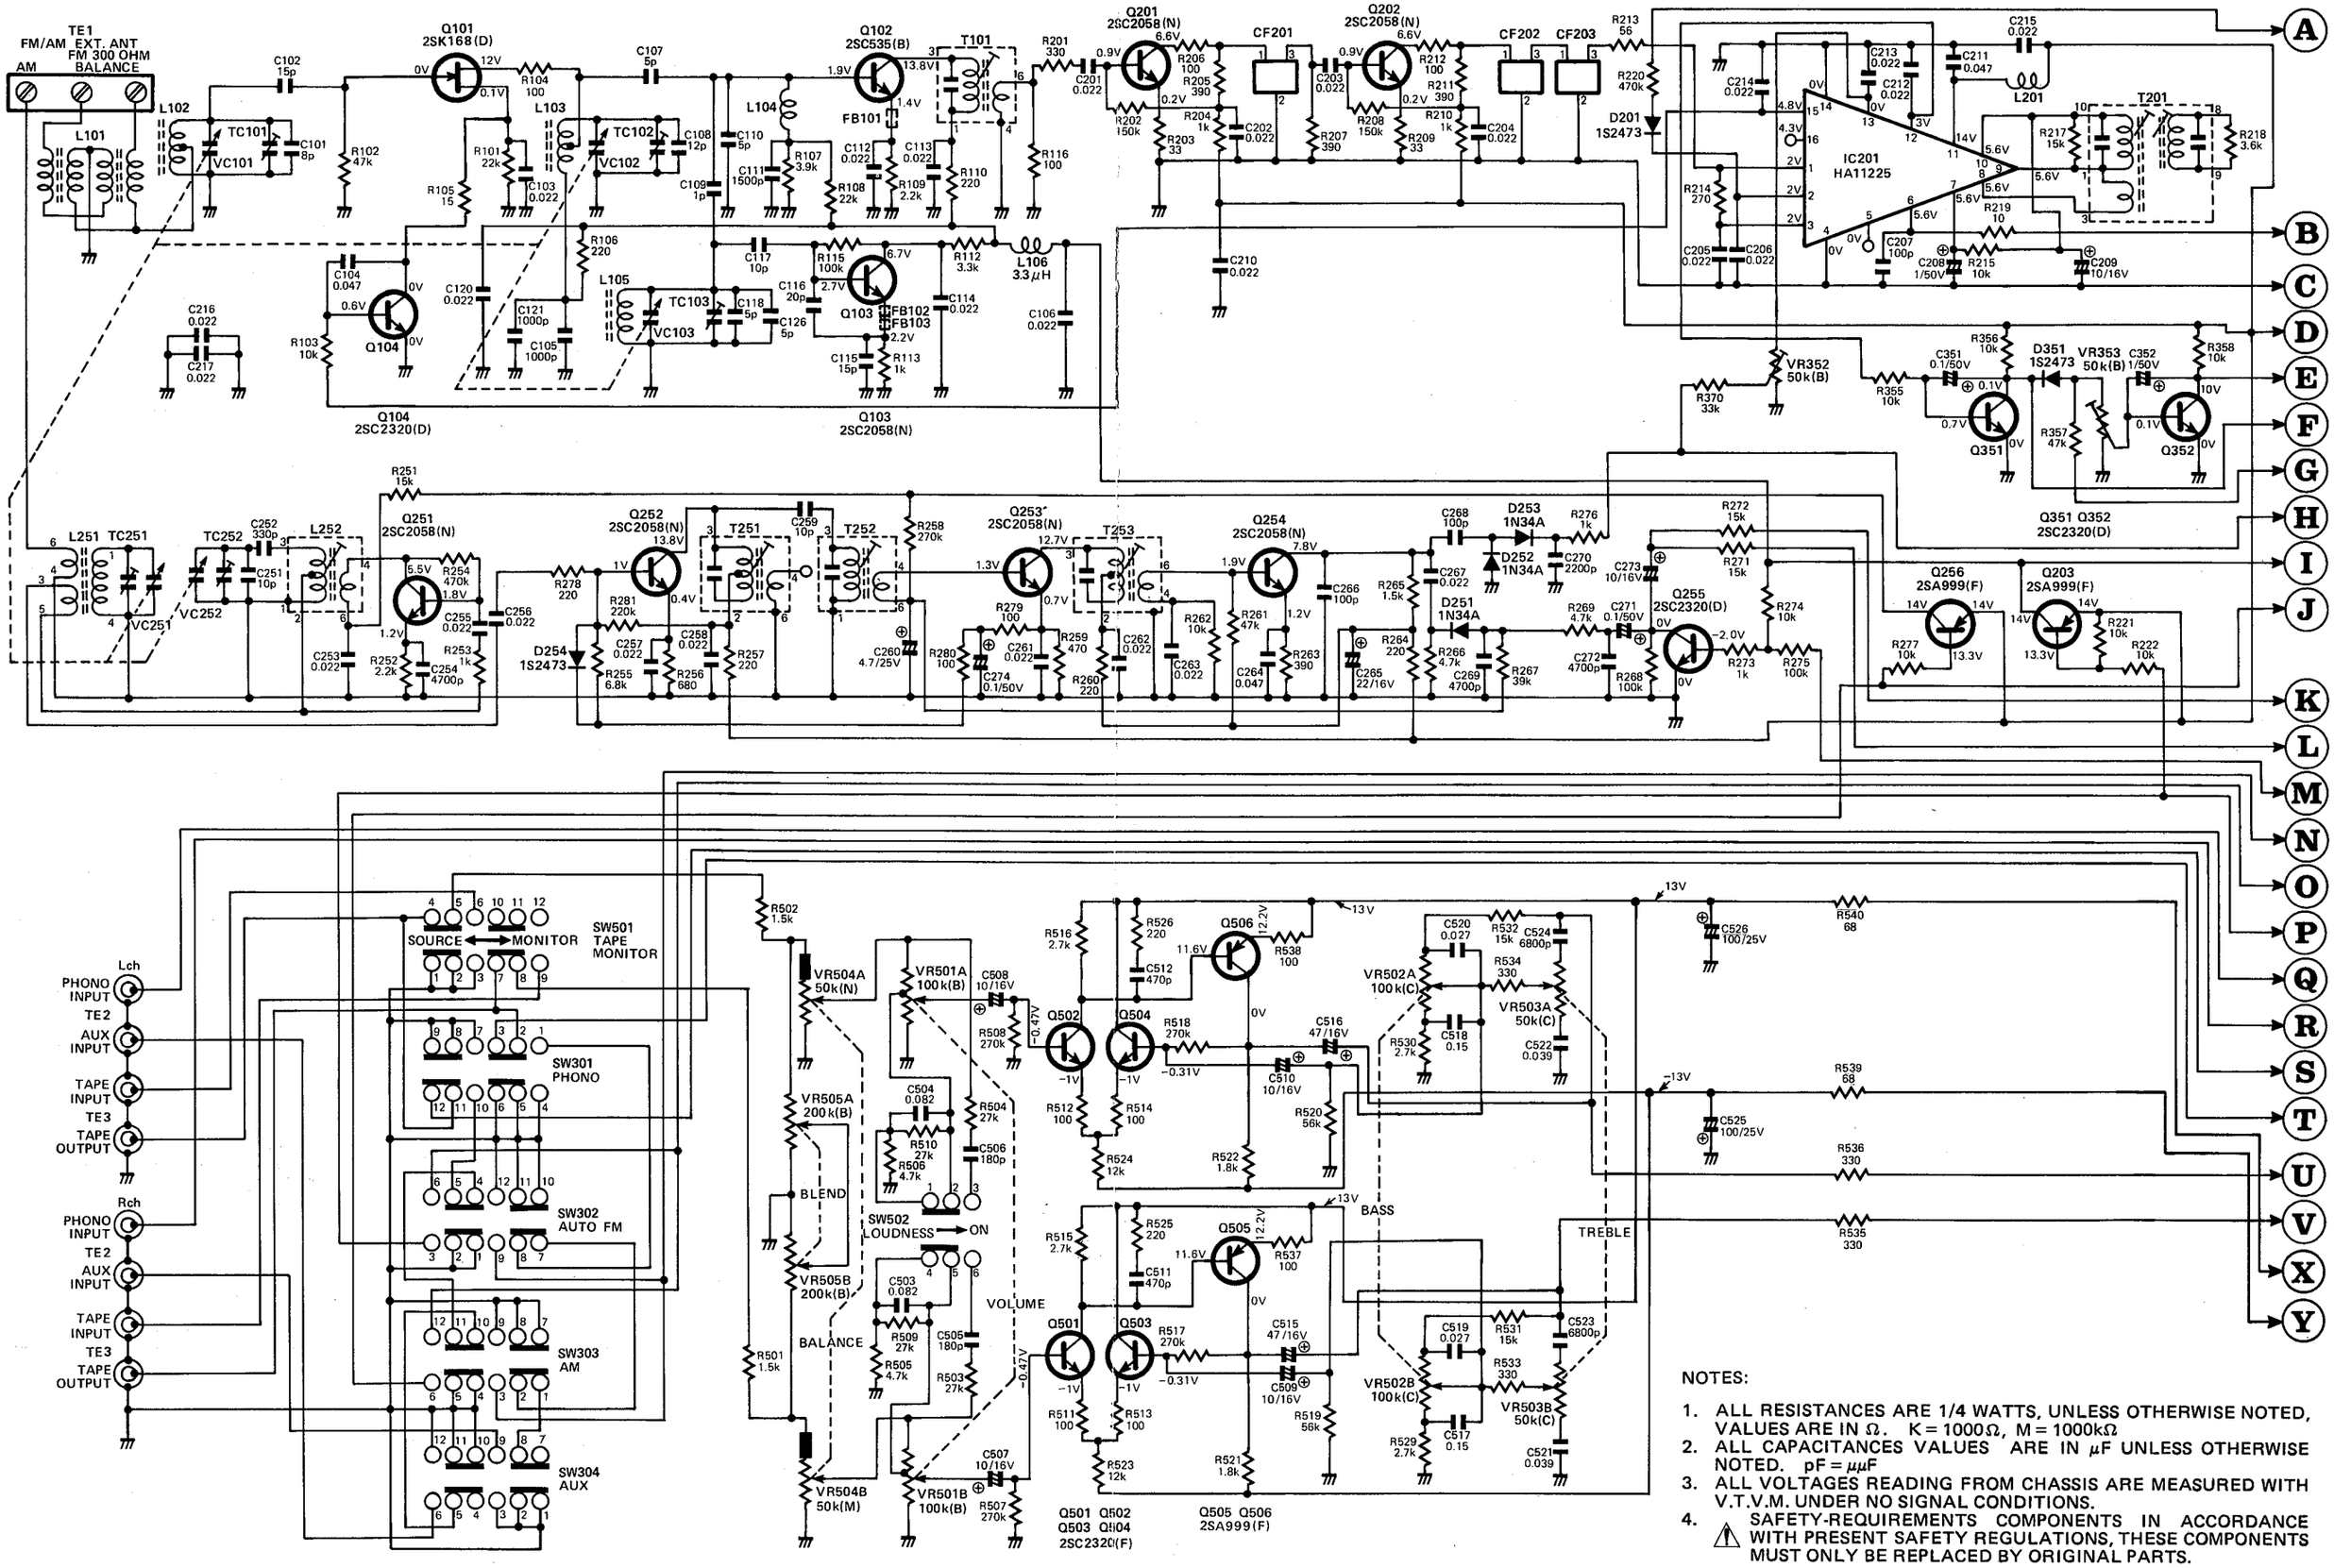

NOTES:

1. ALL RESISTANCES ARE 1/4 WATTS, UNLESS OTHERWISE NOTED, VALUES ARE IN Ω. K = 1000Ω, M = 1000kΩ
2. ALL CAPACITANCES VALUES ARE IN μF UNLESS OTHERWISE NOTED. pF = μμF
3. ALL VOLTAGES READING FROM CHASSIS ARE MEASURED WITH V.T.V.M. UNDER NO SIGNAL CONDITIONS.
4. ⚠ SAFETY-REQUIREMENTS COMPONENTS IN ACCORDANCE WITH PRESENT SAFETY REGULATIONS, THESE COMPONENTS MUST ONLY BE REPLACED BY ORIGINAL PARTS.

SCHEMATIC DIAGRAM

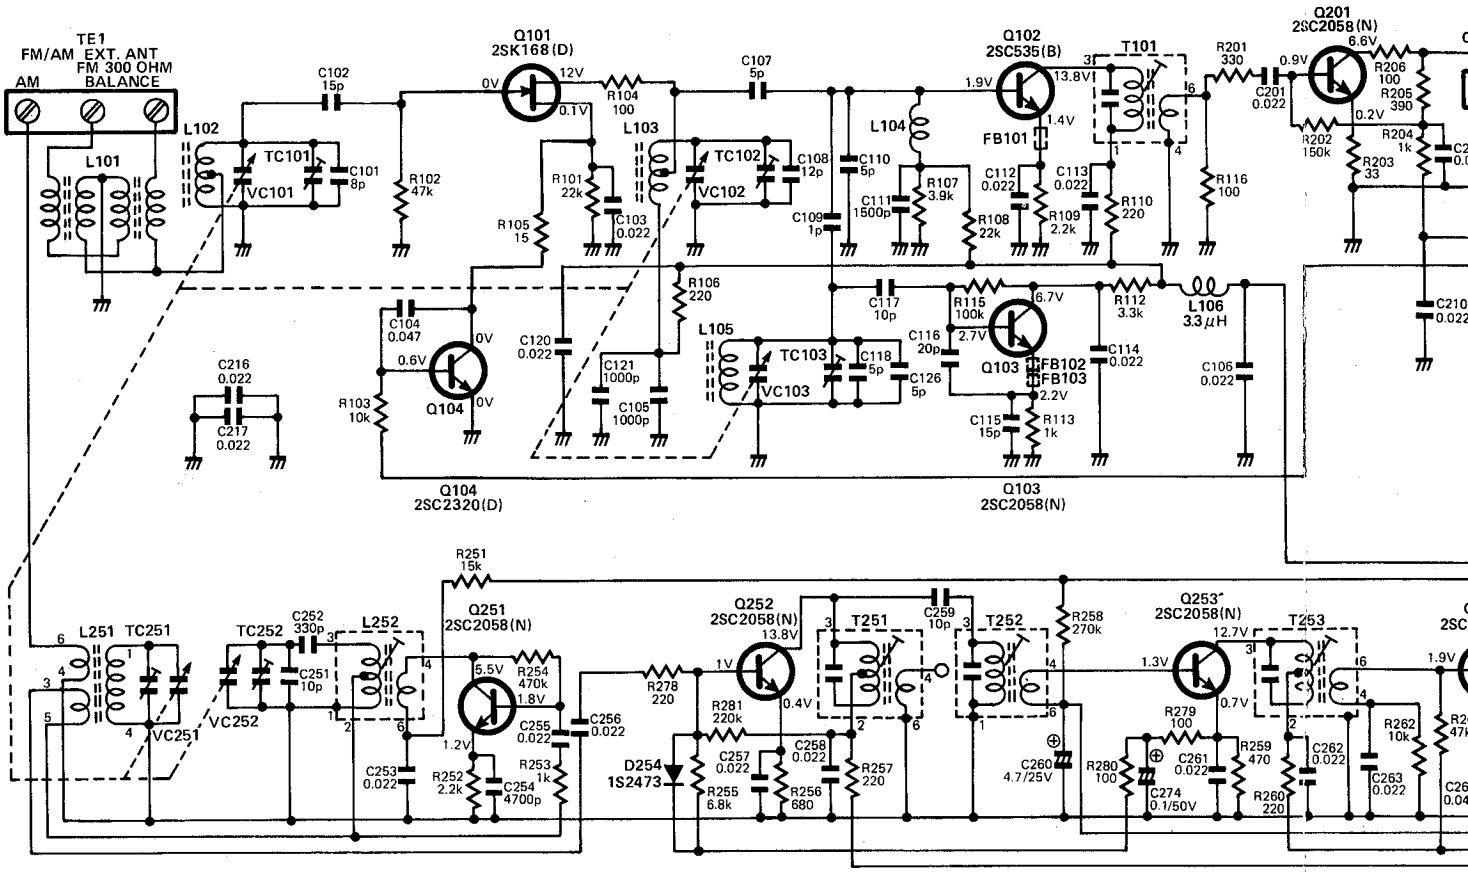

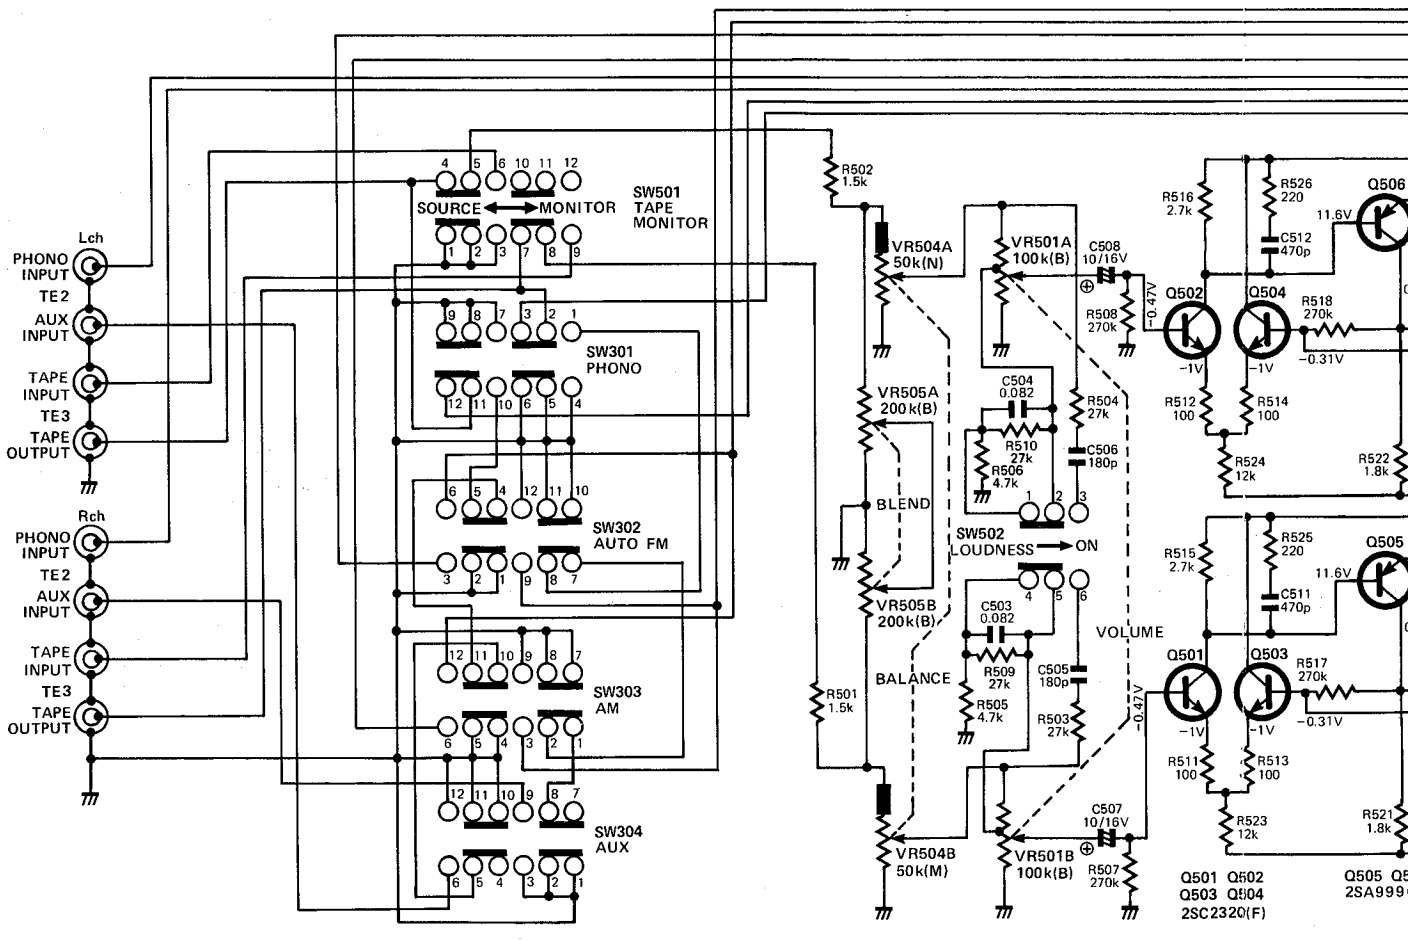

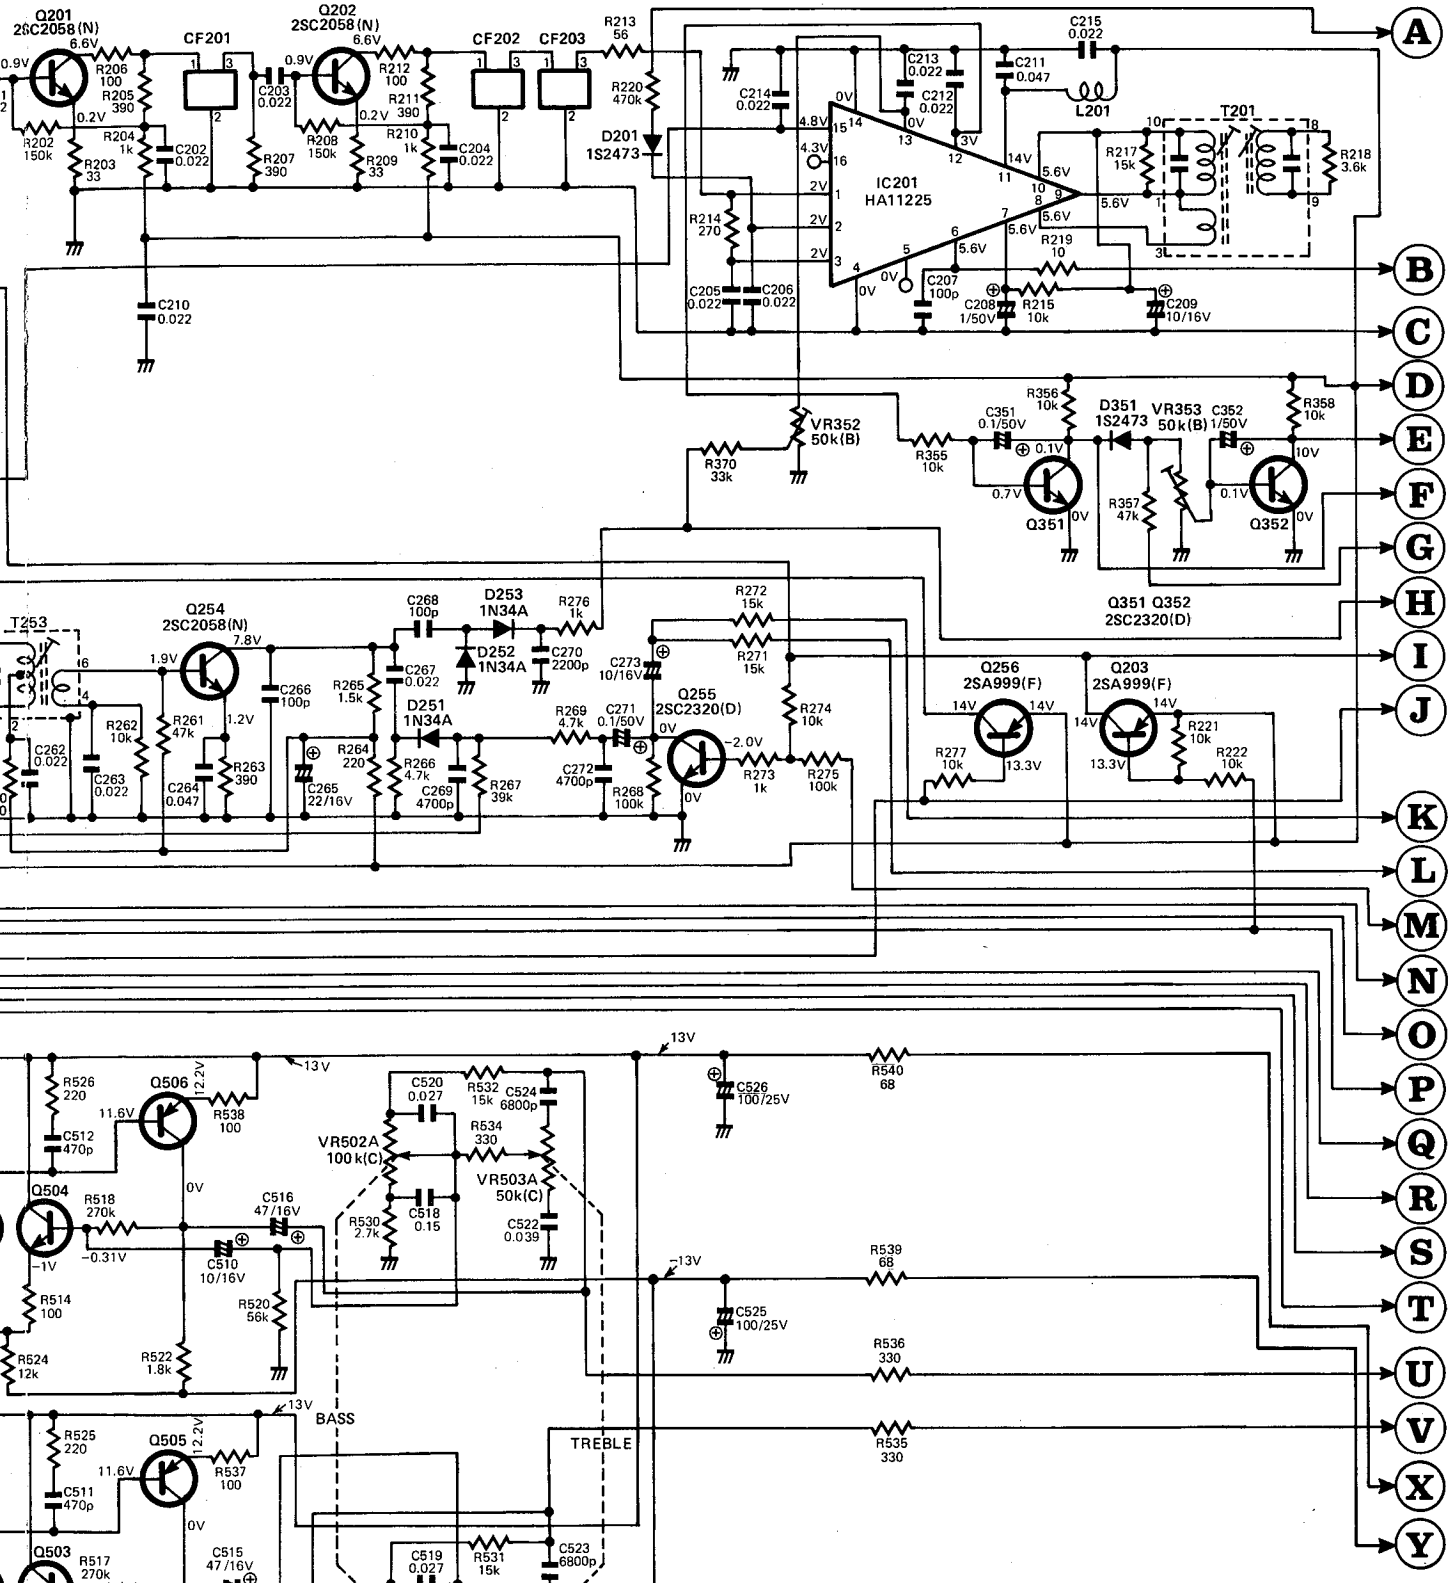

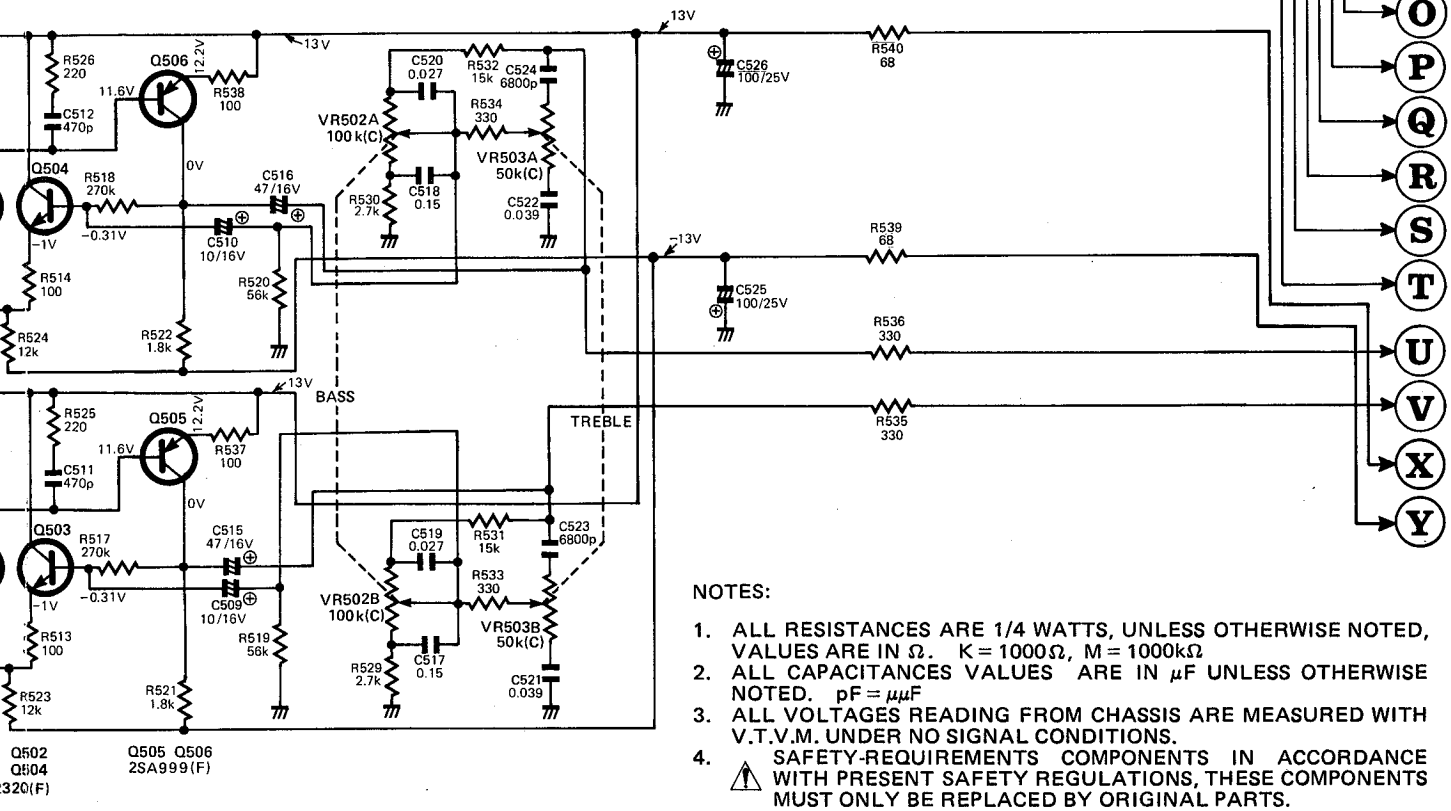

NOTES:

1. ALL RESISTANCES ARE 1/4 WATTS, UNLESS OTHERWISE NOTED, VALUES ARE IN Ω. K = 1000Ω, M = 1000kΩ
2. ALL CAPACITANCES VALUES ARE IN μF UNLESS OTHERWISE NOTED. pF = μμF
3. ALL VOLTAGES READING FROM CHASSIS ARE MEASURED WITH V.T.V.M. UNDER NO SIGNAL CONDITIONS.
4. ⚠ SAFETY-REQUIREMENTS COMPONENTS IN ACCORDANCE WITH PRESENT SAFETY REGULATIONS, THESE COMPONENTS MUST ONLY BE REPLACED BY ORIGINAL PARTS.

SCHEMATIC DIAGRAM

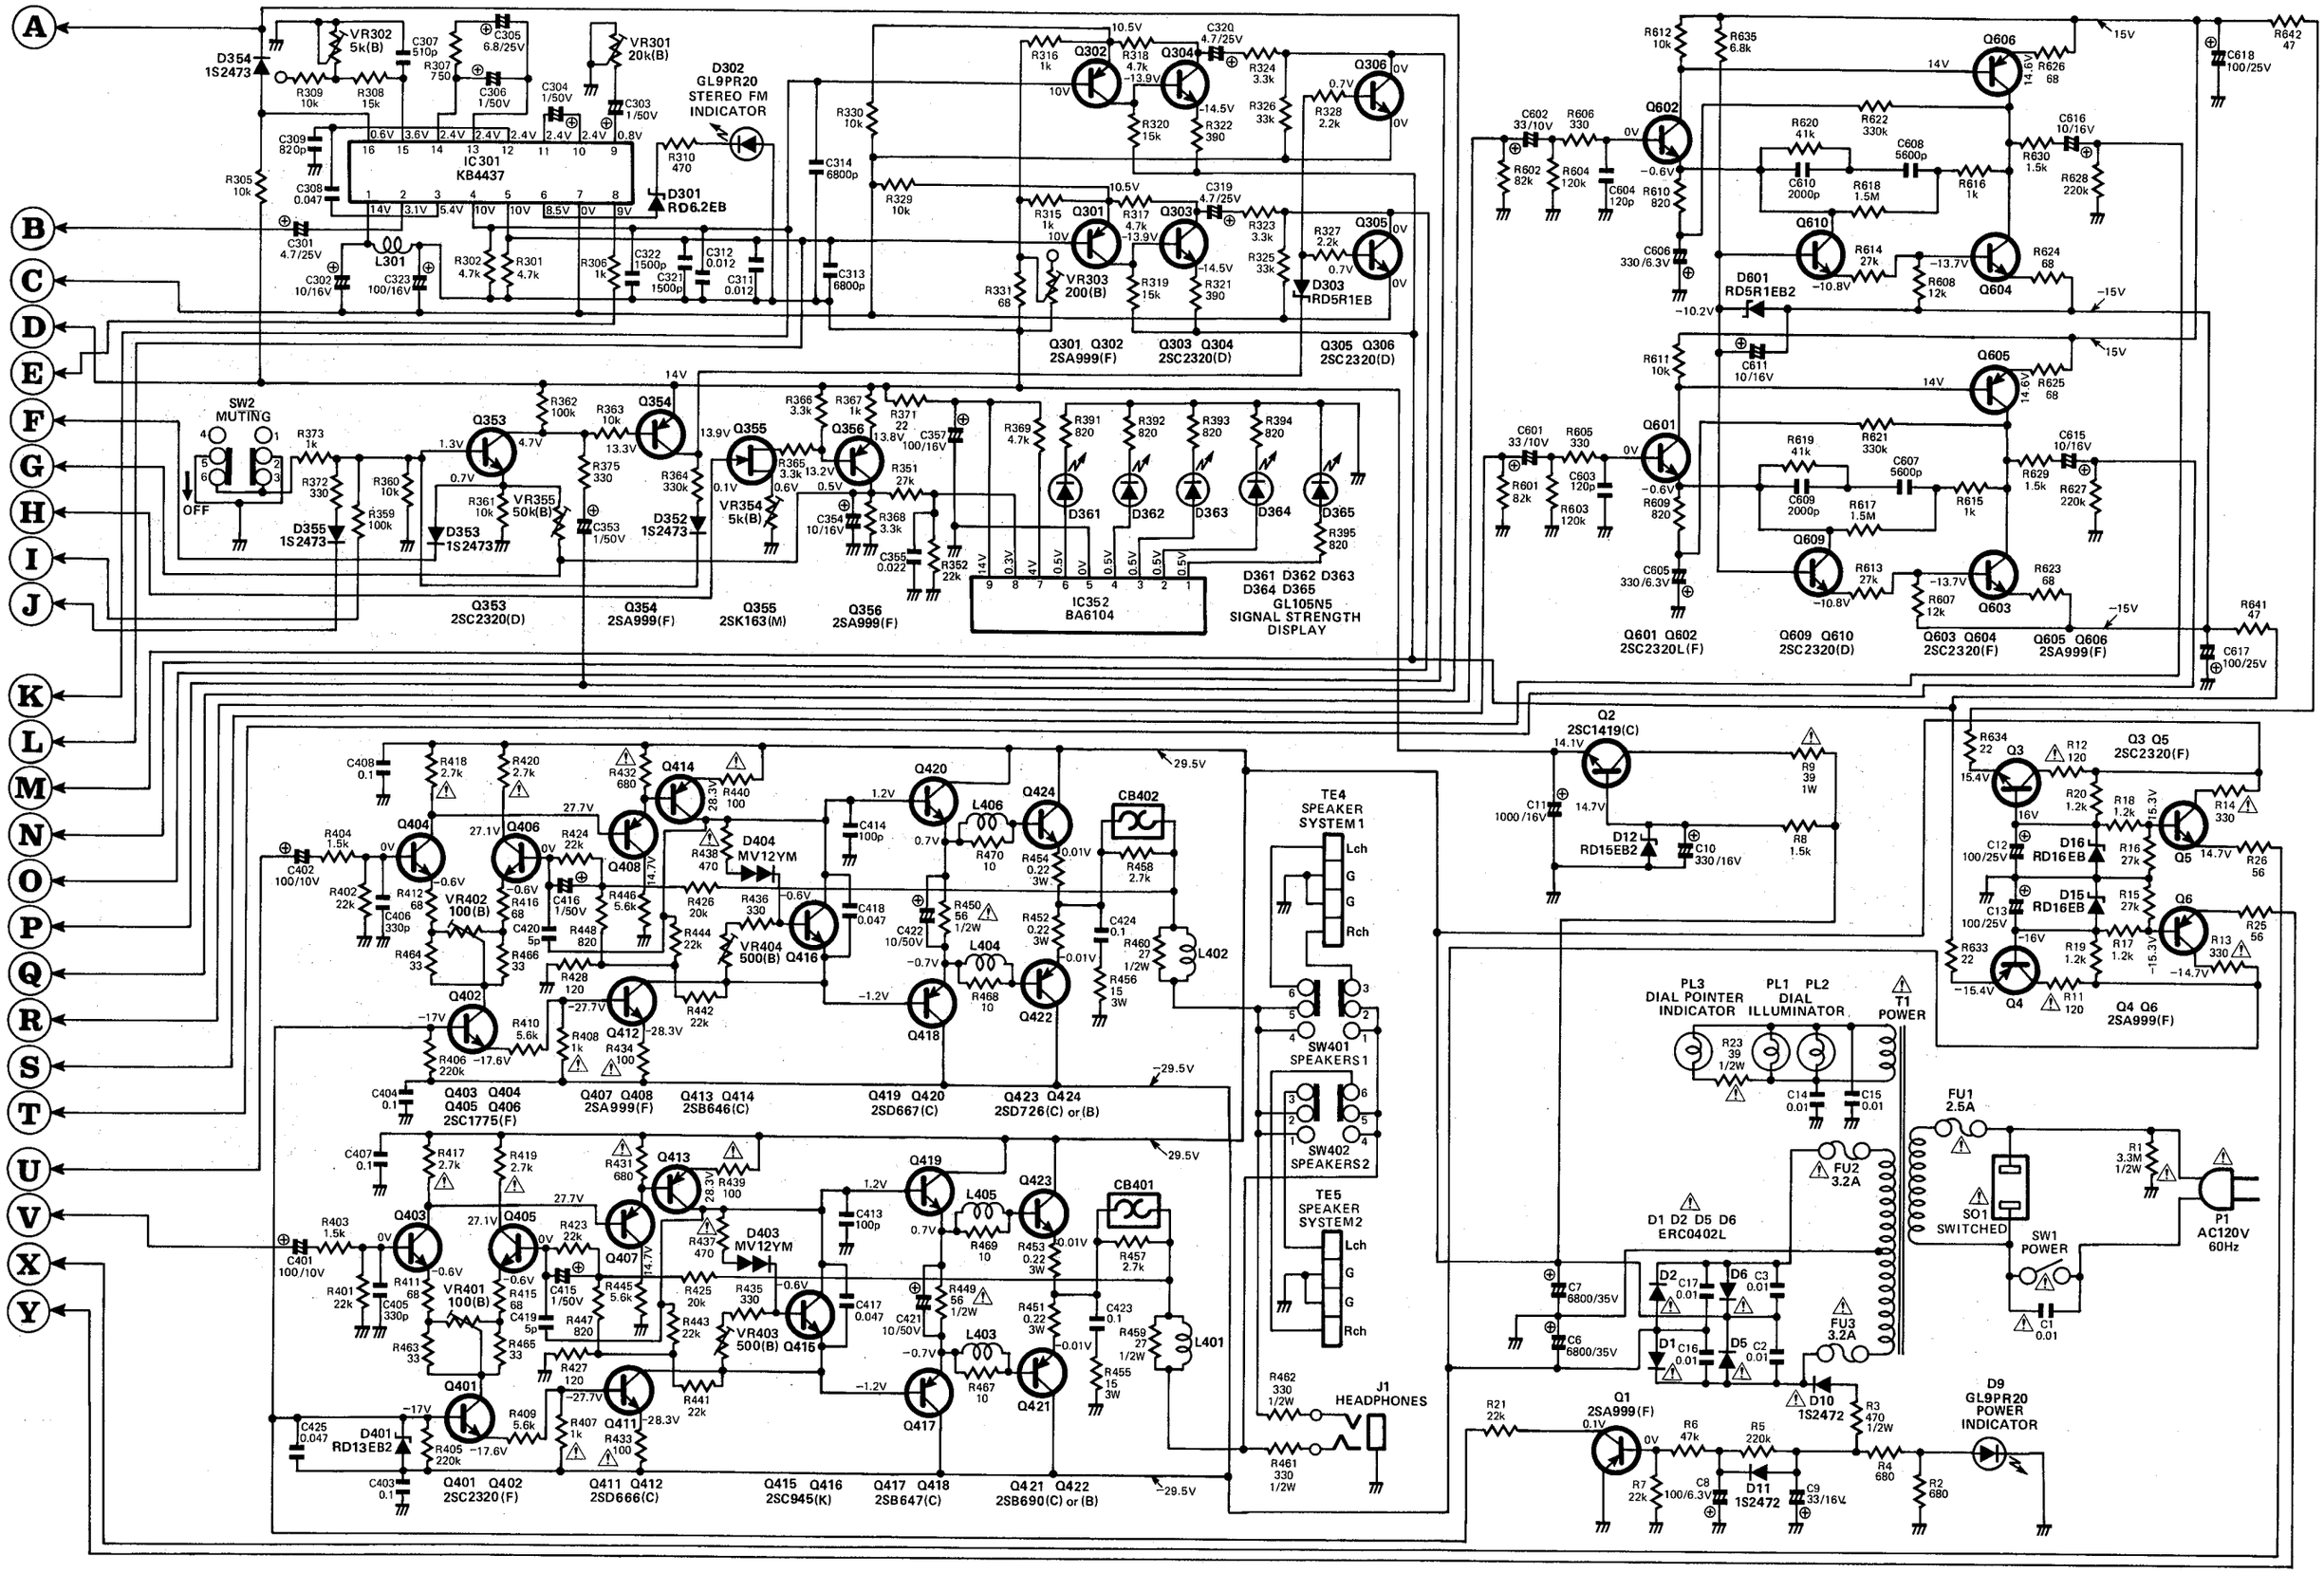

SCHEMATIC DIAGRAM

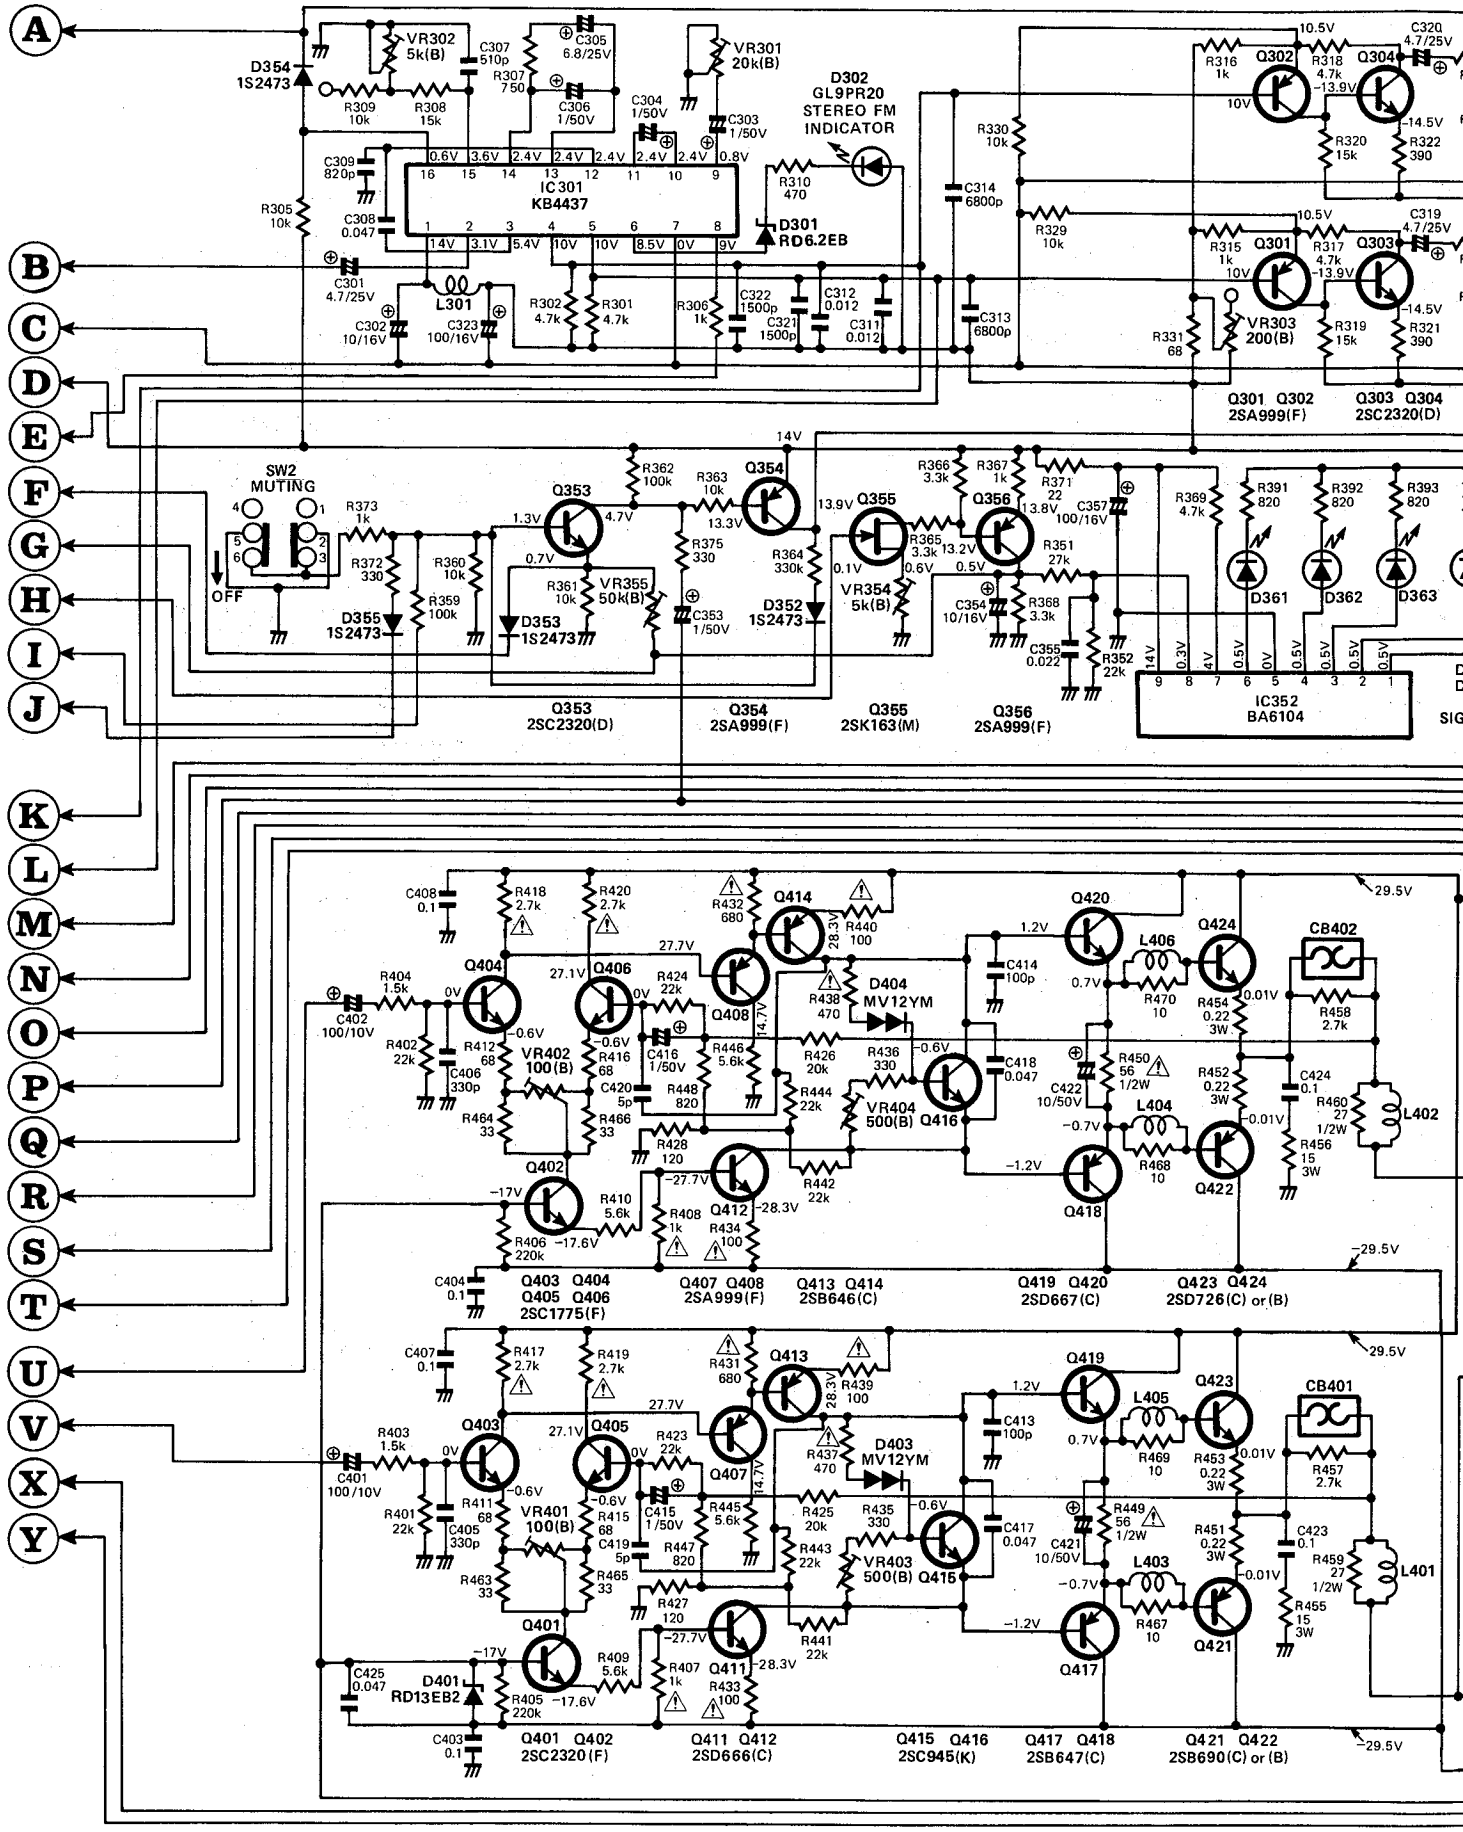

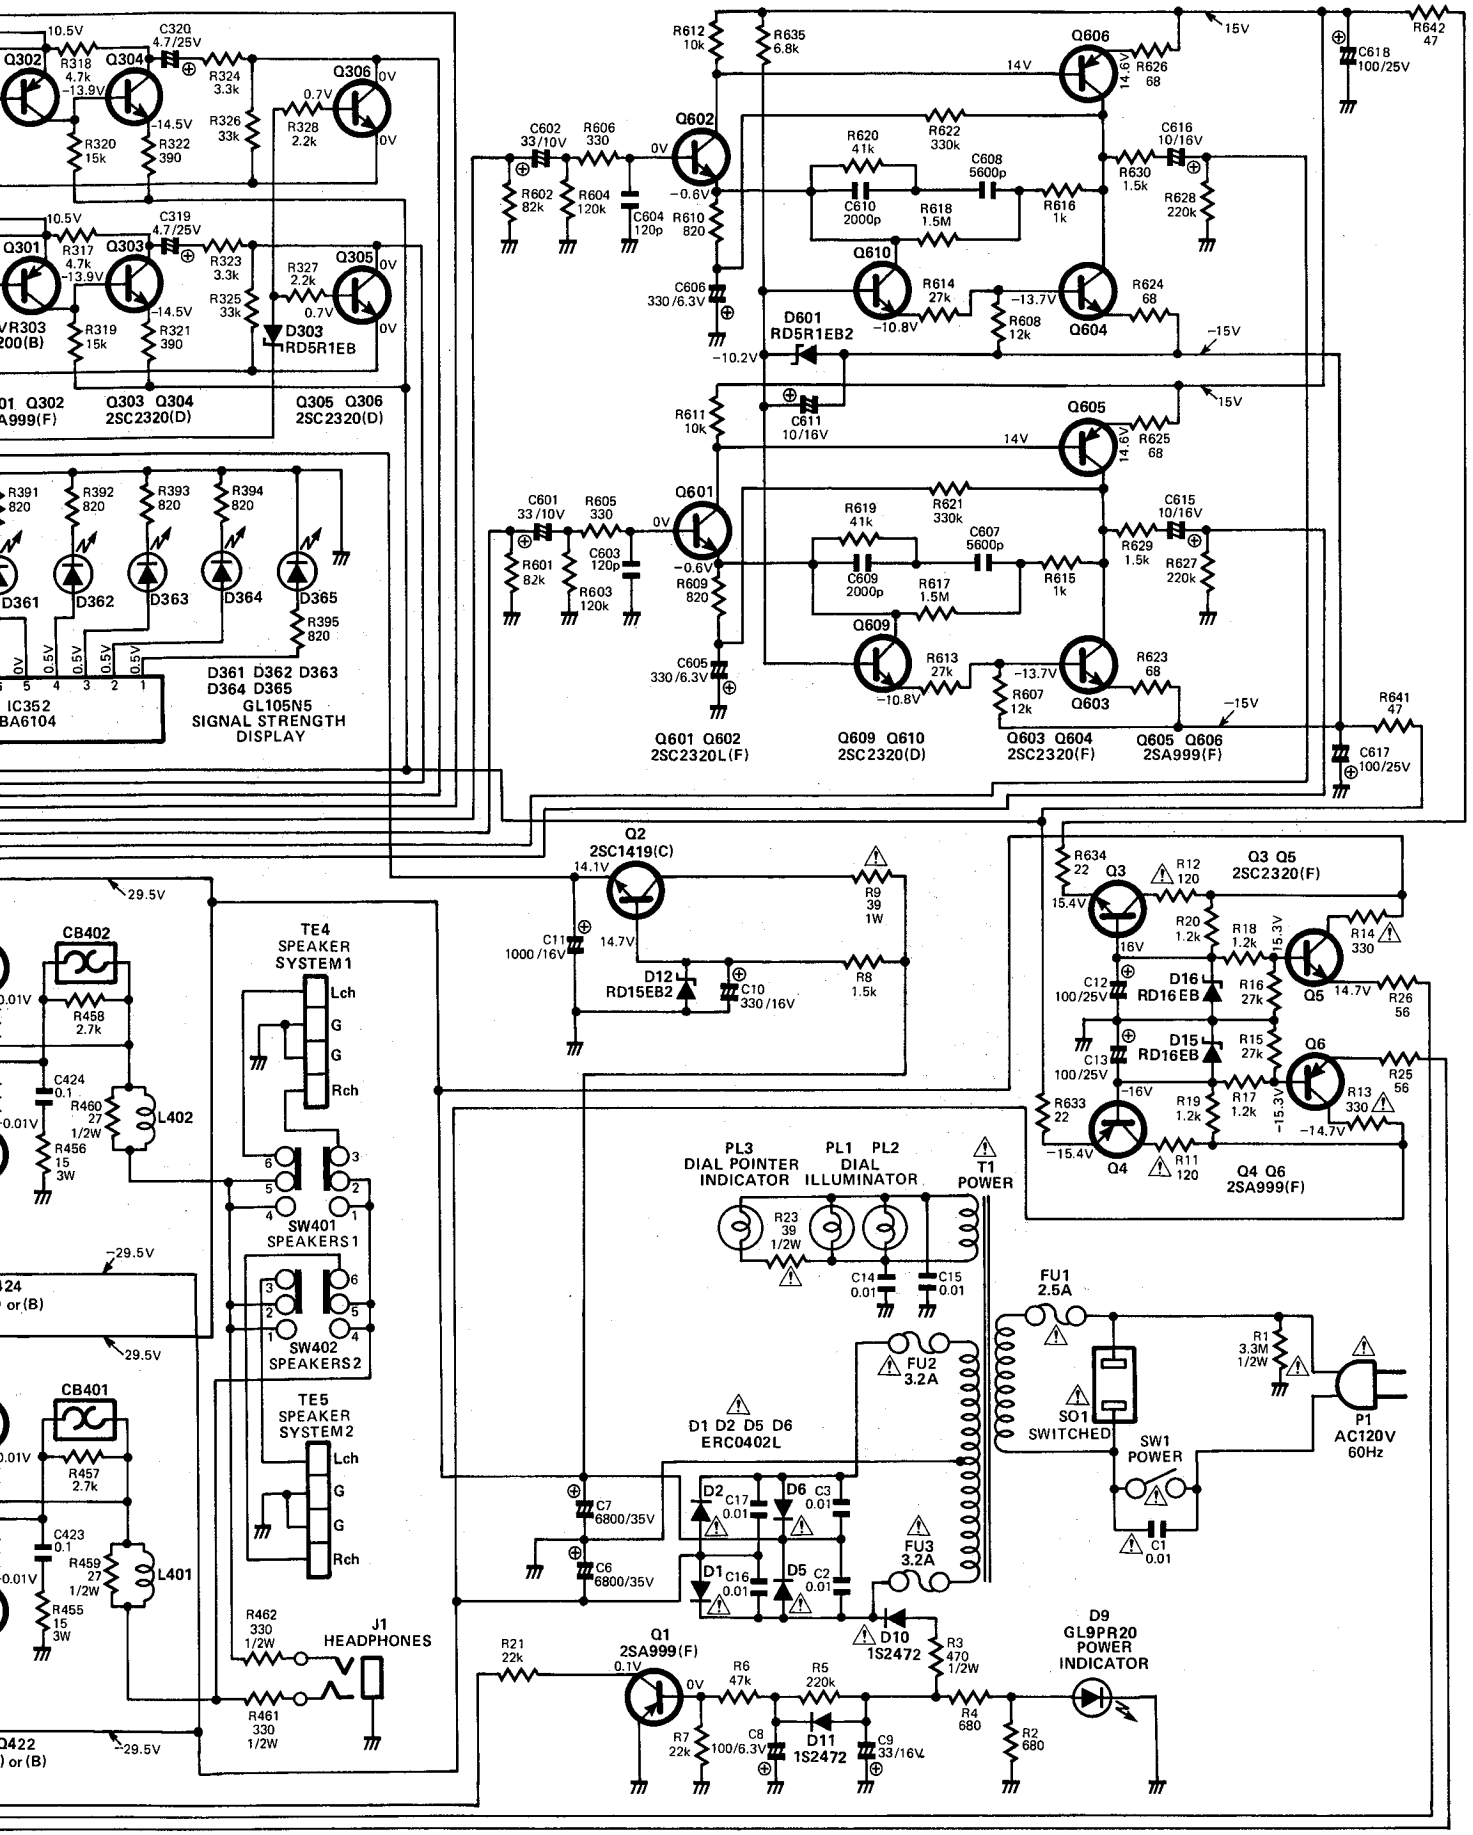
Q302
Q304
Q306
Q301
Q303
Q305
D303
RD5R1EB
Q303 Q304
2SC2320(D)
Q305 Q306
2SC2320(D)
D361
D362
D363
D364
D365
IC352
BA6104
D361 D362 D363
D364 D365
GL105N5
SIGNAL STRENGTH
DISPLAY
Q602
Q610
Q604
Q606
Q605
Q601
Q609
Q603
D601
RD5R1EB2
Q601 Q602
2SC2320L(F)
Q609 Q610
2SC2320(D)
Q603 Q604
2SC2320(F)
Q605 Q606
2SA999(F)
Q2
2SC1419(C)
D12
RD15EB2
Q3 Q5
2SC2320(F)
D16
RD16EB
D15
RD16EB
Q5
Q6
Q4
Q4 Q6
2SA999(F)
CB402
CB401
TE4
SPEAKER
SYSTEM1
TE5
SPEAKER
SYSTEM2
SW401
SPEAKERS1
SW402
SPEAKERS2
L402
L401
J1
HEADPHONES
PL3
DIAL POINTER
INDICATOR
PL1 PL2
DIAL
ILLUMINATOR
T1
POWER
FU1
2.5A
FU2
3.2A
FU3
3.2A
SO1
SWITCHED
SW1
POWER
P1
AC120V
60Hz
D1 D2 D5 D6
ERC0402L
D10
1S2472
D11
1S2472
Q1
2SA999(F)
D9
GL9PR20
POWER
INDICATOR

TUNER P.C. BOARD

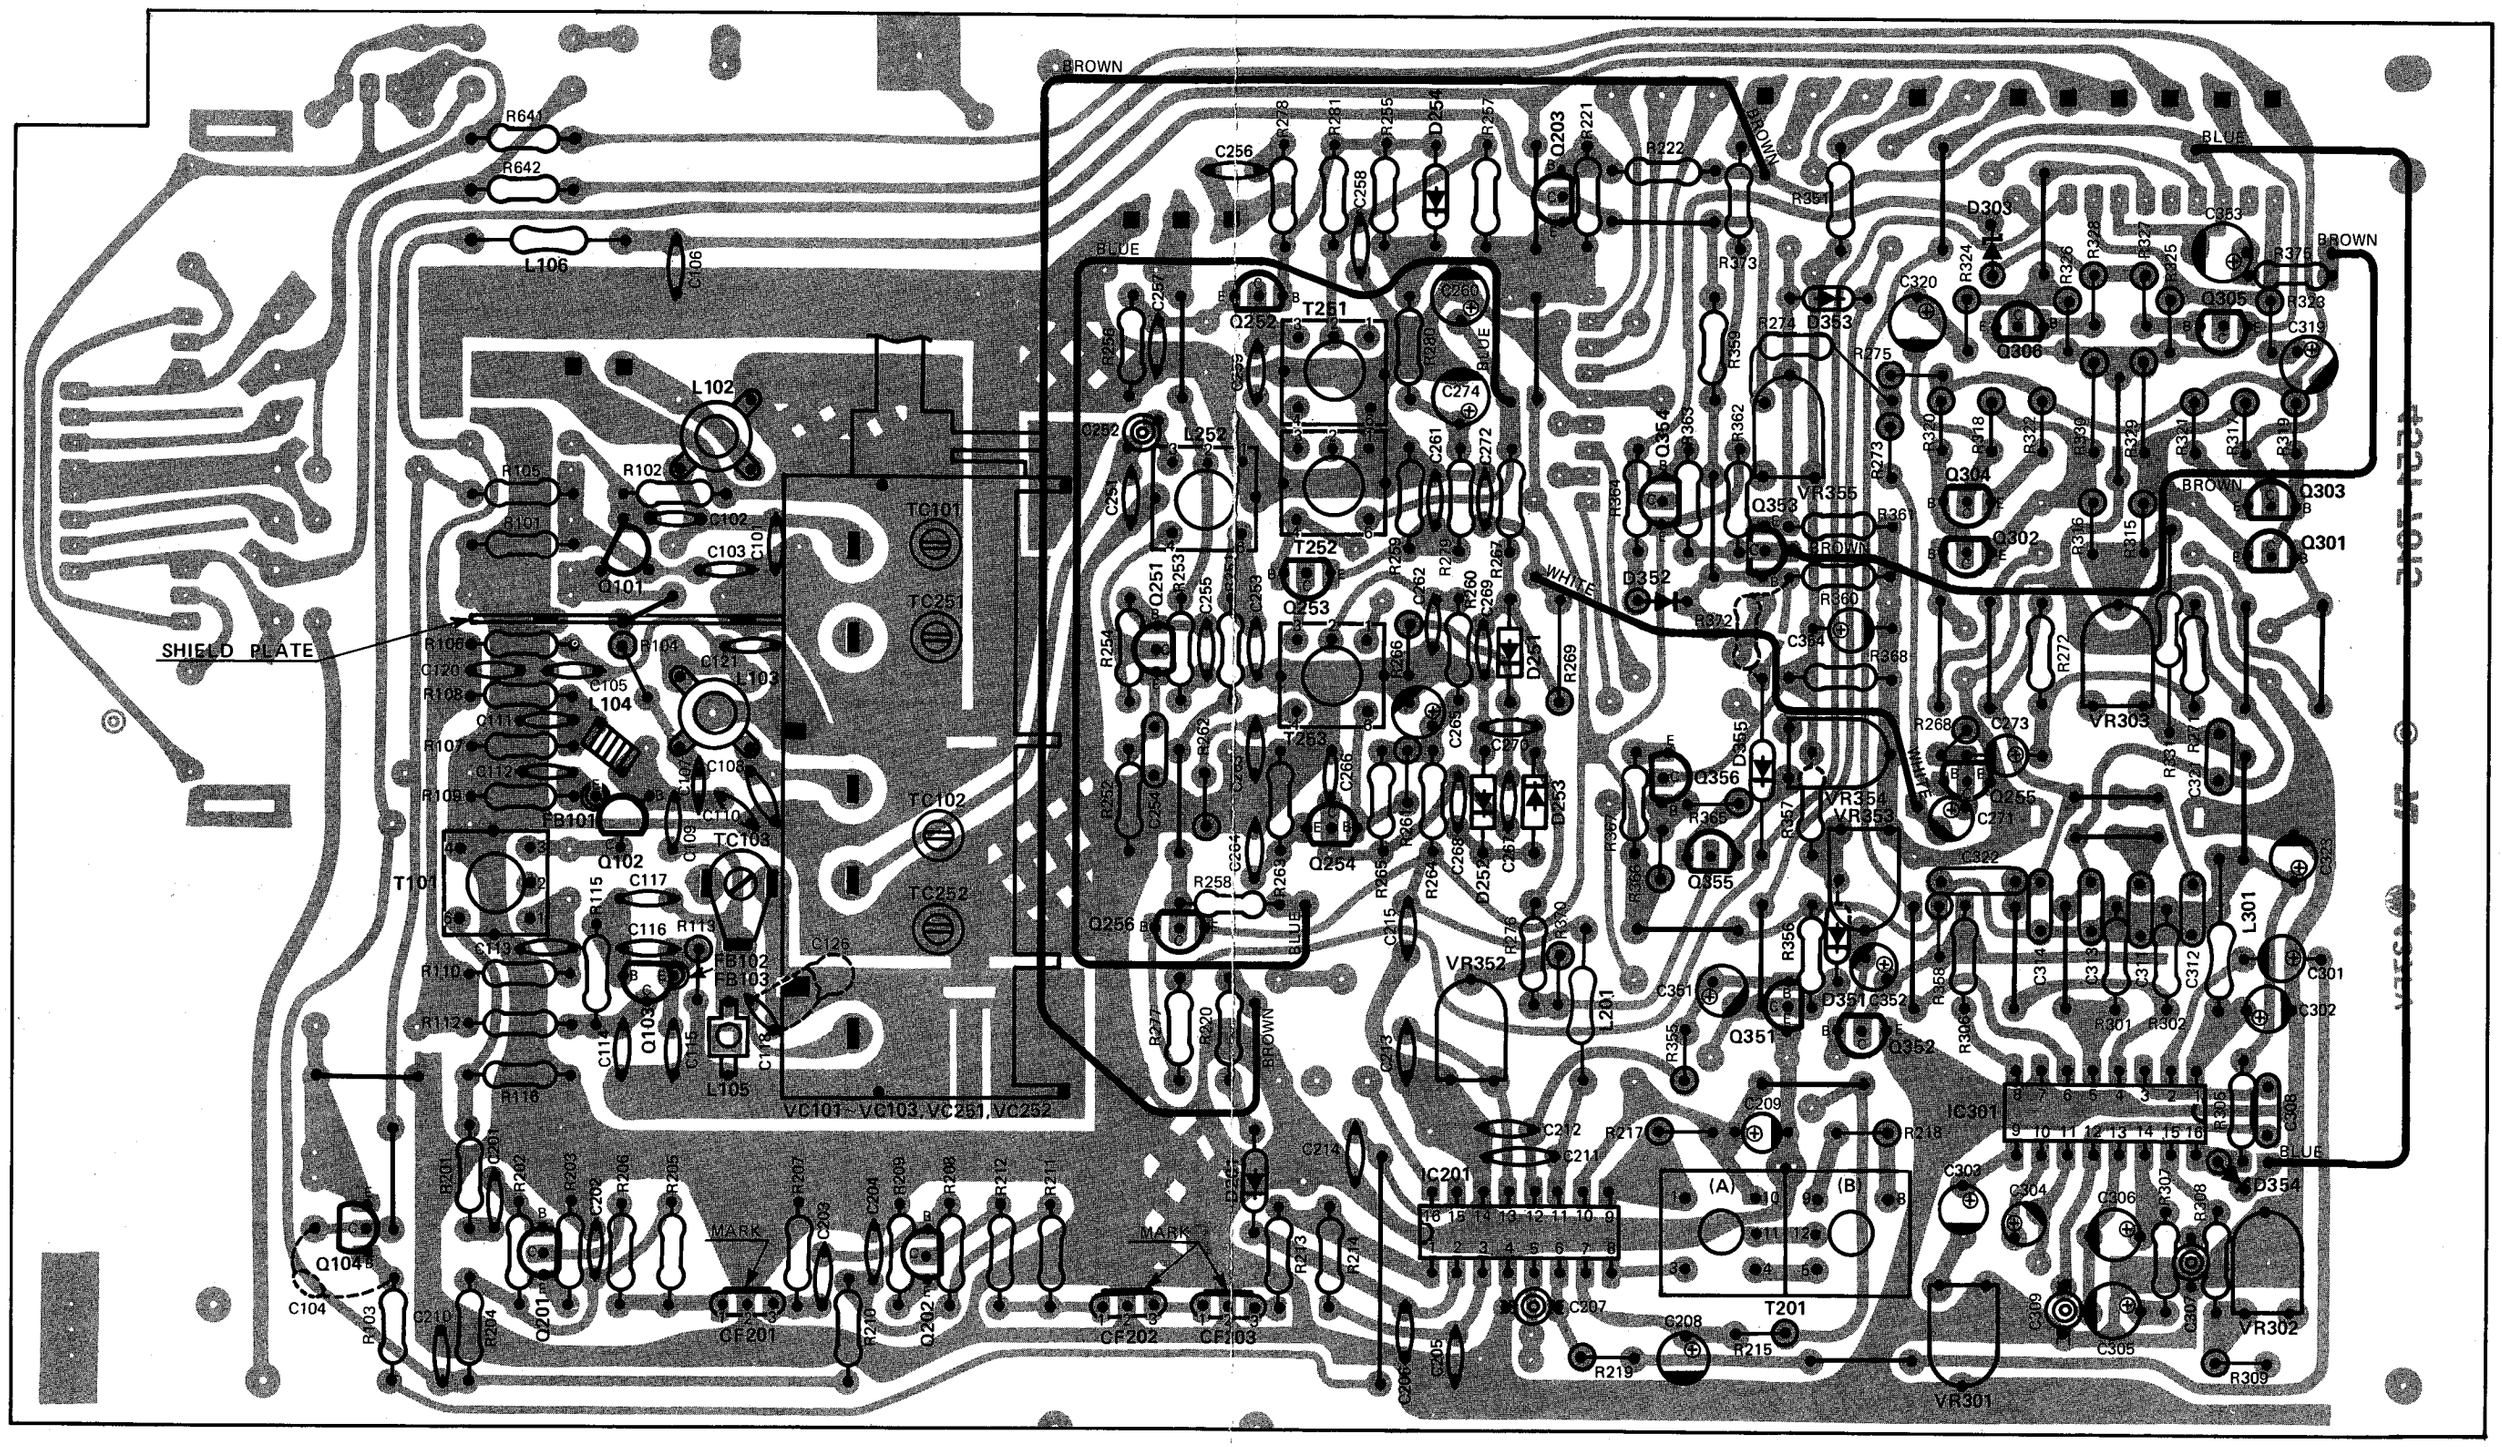

TUNER P.C. BOARD

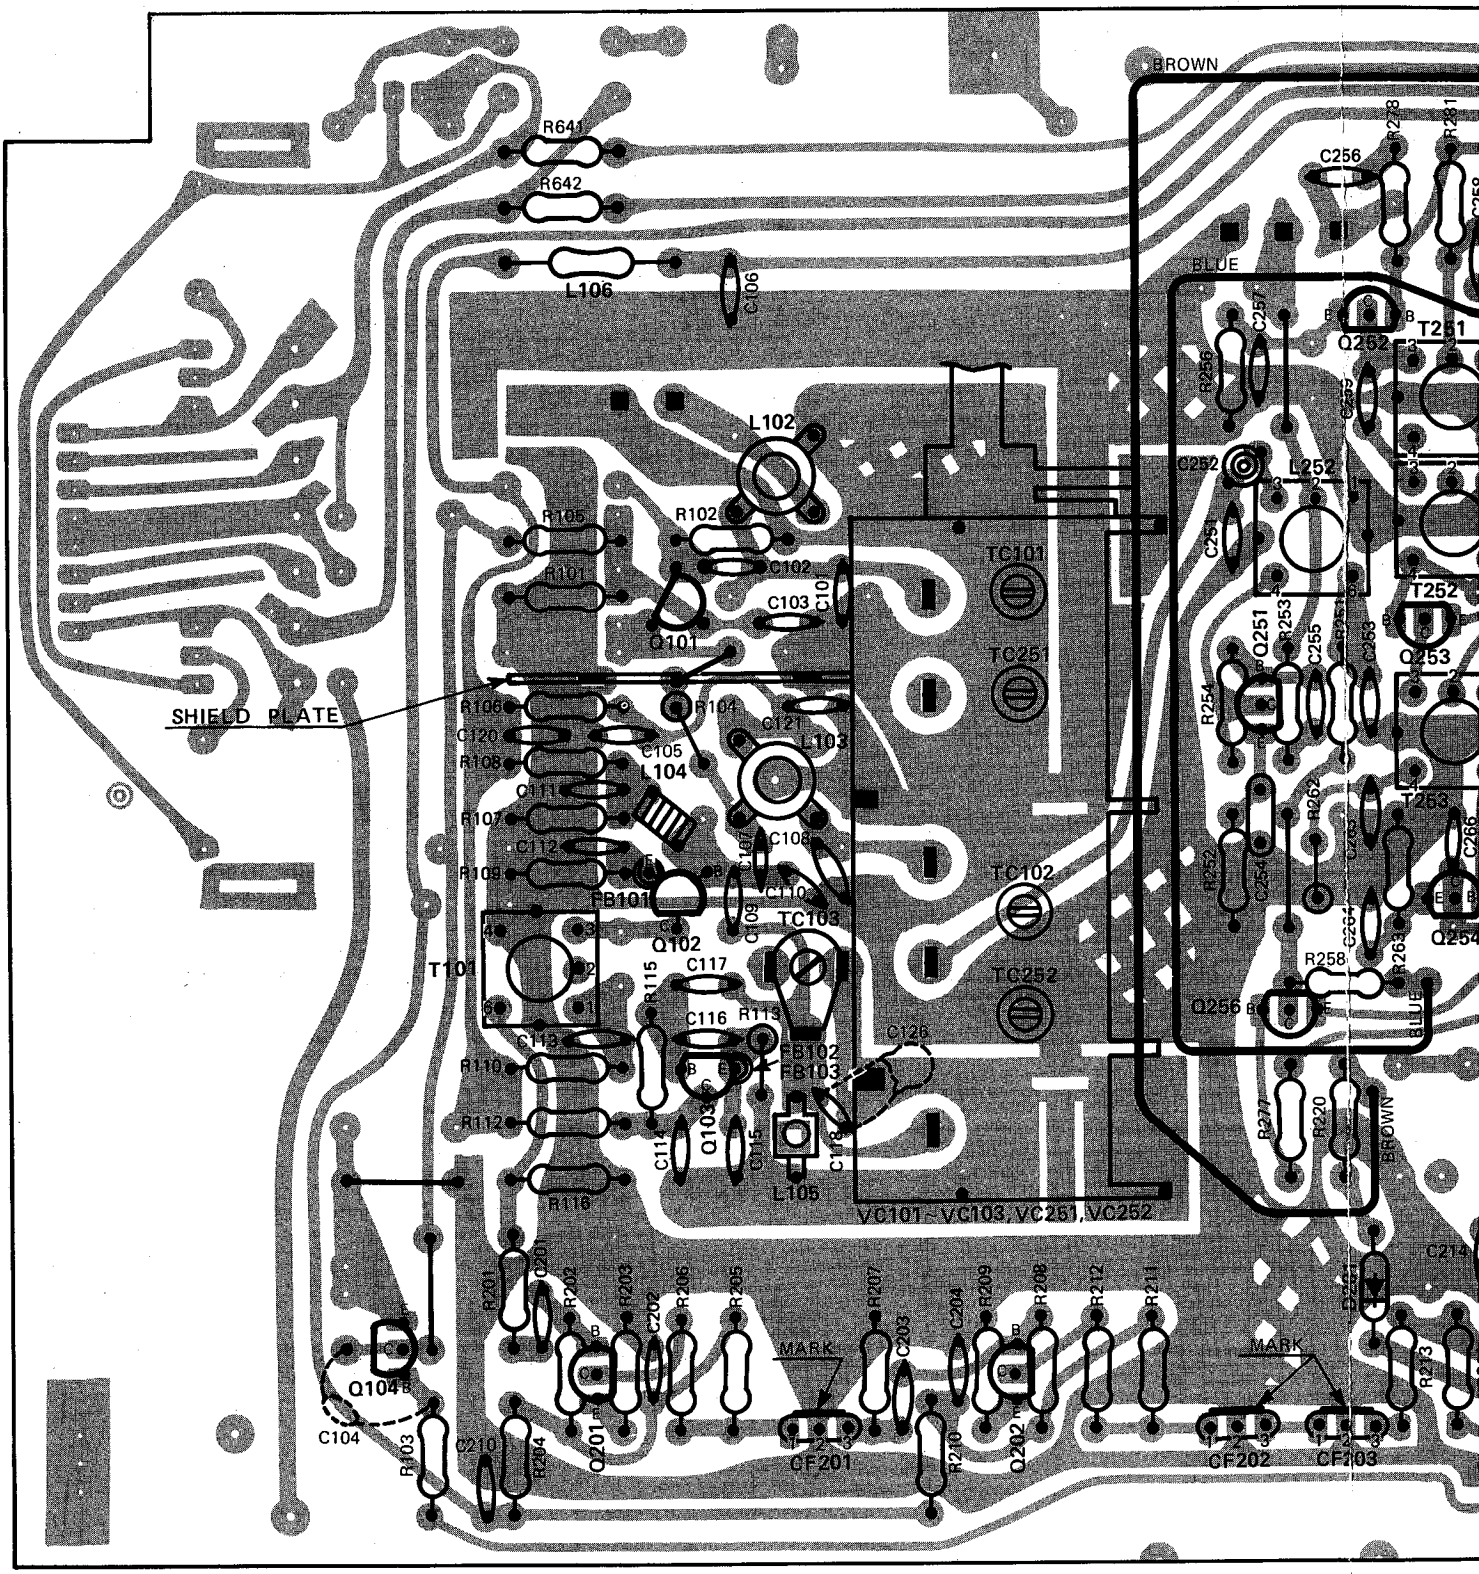

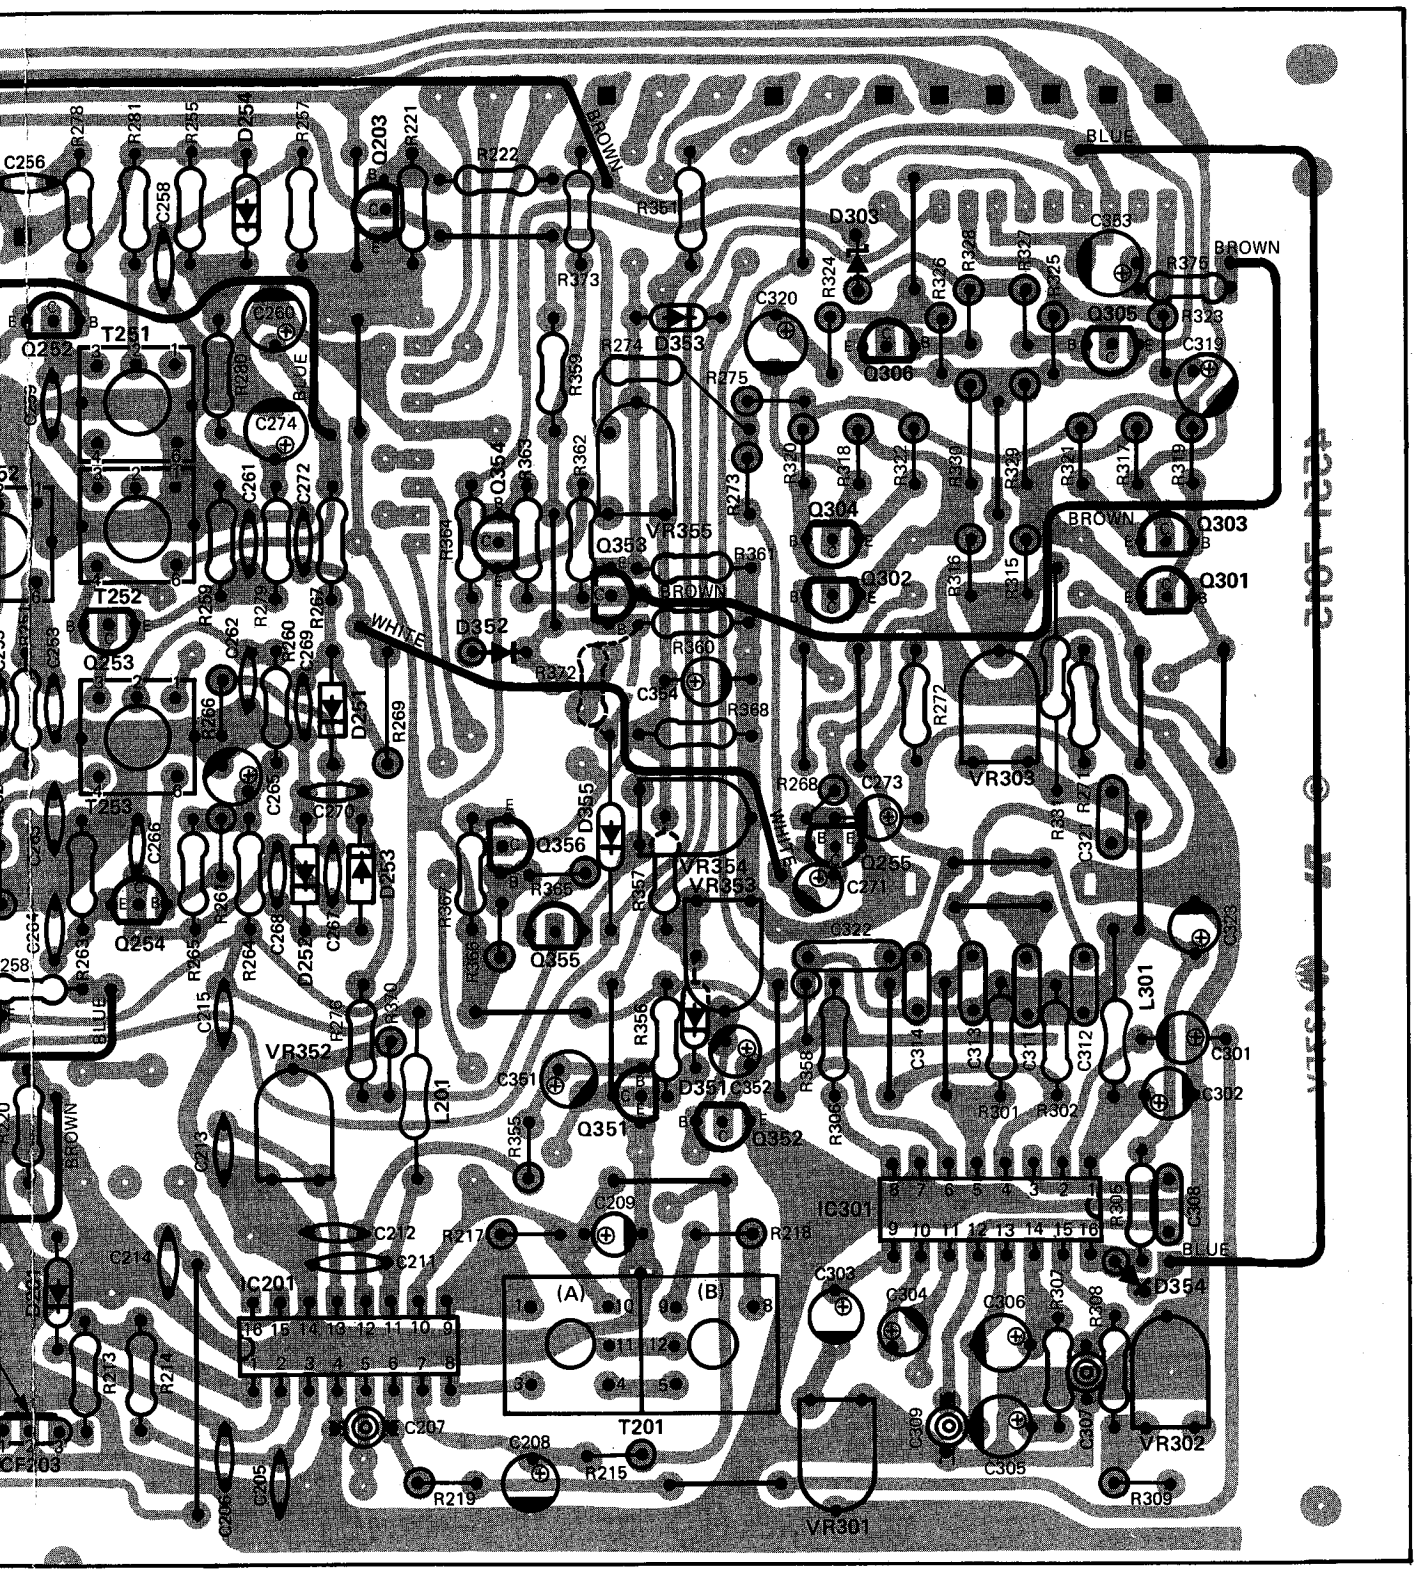
C256
R258
R261
R255
D254
R257
Q203
R221
R222
BROWN
R351
D303
BLUE
C303
R324
R326
R325
BROWN
R323
R328
C319
Q305
Q306
C320
R274
D353
R275
R359
R362
R273
R320
R318
R327
R316
R317
R313
Q304
Q303
Q301
BROWN
R315
Q302
VR355
Q358
R361
BROWN
R360
C354
R368
R272
R268
C273
VR303
R271
C322
C271
Q255
VR354
VR353
C323
L301
C301
C302
C312
C313
C314
R301
R302
C322
R357
R358
R306
C352
D351
Q352
Q351
C351
R355
C209
R217
R218
C212
C211
C214
IC201
IC301
C303
C304
C306
R304
R308
C308
R305
BLUE
D354
C309
C307
C305
VR302
R309
R219
C208
R215
T201
VR301
C207
C205
C206
R213
R214
CF203
R220
BROWN
C213
C215
VR352
R216
L201
R356
D352
WHITE
R364
R363
Q354
R369
Q353
T251
Q252
C260
C274
C261
C272
T252
Q253
C262
R260
R269
C269
D251
T253
C265
C270
C266
C263
Q254
R263
R265
R264
C264
C268
D252
D253
R267
R266
R262
R259
C259
C253
C258
C257
R254
R253
R252
R251
R228
R229
R231
R232
R233
R234
R235
R236
R237
R238
R239
R240
R241
R242
R243
R244
R245
R246
R247
R248
R249
R250
R223
R224
R225
R226
R227
R210
R211
R212
R207
R208
R209
R202
R203
R204
R205
R206
R201
R301
R302
R303
R304
R305
R306
R307
R308
R309
R310
R311
R312
R313
R314
R315
R316
R317
R318
R319
R320
R321
R322
R323
R324
R325
R326
R327
R328
R329
R330
R331
R332
R333
R334
R335
R336
R337
R338
R339
R340

TUNER P.C. BOARD

Ref. No.	Part No.	Description
	RESISTORS	
VR301	5101-20371913	Variable Resistor, 20kΩ
VR302, 354	5101-50271913	Variable Resistor, 5kΩ
VR303	5101-20171913	Variable Resistor, 200Ω
VR352, 353, 355	5101-50371913	Variable Resistor, 50kΩ
	CAPACITORS, ELECTROLYTIC	
C208, 352, 353	5345-105-50	1μF +75%–10% 50V
C209, 273, 302, 354	5345-106-16	10μF +50%–10% 16V
C260	5345-475-25	4.7μF +50%–10% 25V
C265	5345-226-16	22μF +50%–10% 16V
C271, 274, 351	5345-104F0212	0.1μF ±20% 50V
C301, 319, 320	5345-475D0212	4.7μF ±20% 25V
C303, 304, 306	5345-105F0212	1μF ±20% 50V
C305	5345-685D0212	6.8μF ±20% 25V
C323	5345-107-16	100μF +50%–10% 16V
VC101, 102, 103, 251, 252	5315-718	5-Gang Variable Capacitor (w/Trimmers TC101, 102, 251, 252)
TC103	5371-55	Trimmer Capacitor
	INTEGRATED CIRCUITS	
IC201	5652-HA11225	HA11225 FM IF Amp. & FM Det.
IC301	5652-KB4437	KB4437 FM Multiplex
	TRANSISTORS	
Q101	5616-2SK168(D	F.E.T., 2SK168(D) FM RF Amp.
Q102	5613-535(B)	2SC535(B) FM Mixer
Q103	5613-2058(N)	2SC2058(N) FM Osc.
Q104	5613-2320(D)	2SC2320(D) FM AGC Switching
Q201, 202	5613-2058(D)	2SC2058(N) FM IF Amp.
Q203	5611-999(F)	2SA999(F) FM Voltage Supply
Q251	5613-2058(N)	2SC2058(N) AM Osc.
Q252	5613-2058(N)	2SC2058(N) AM Mixer
Q253, 254	5613-2058(N)	2SC2058(N) AM IF Amp.
Q255	5613-2320(D)	2SC2320(D) AM Signal Switching
Q256	5611-999(F)	2SA999(F) AM Voltage Supply
Q301, 302	5611-999(F)	2SA999(F) } MPX Output Amp.
Q303, 304	5613-2320(D)	2SC2320(D) }
Q305, 306	5613-2320(D)	2SC2320(D) FM Muting
Q351, 352	5613-2320(D)	2SC2320(D) Stereo FM Indicator Control
Q353	5613-2320(D)	2SC2320(D) } FM Muting
Q354	5611-999(F)	2SA999(F) }
Q355	5616-2SK163(M	F.E.T., 2SK163(M) } Signal Strength Display Level Amp.
Q356	5611-999(F)	2SA999(F) }
	DIODES	
D201, 254, 351, 352, 353, 354, 355,	5631-1S2473	1S2473
D251, 252, 253	5631-1N34A	1N34A
D303	5635-RD5R1EB	Zener, RD5.1EB
	COILS	
L102	5943-70125	FM RF
L103	5643-70225	FM RF
L104	5991-7065	FM IF Trap
L105	5942-70215	FM Osc.
L106	5995-3R3225	RF Choke
L201	5995-101225	RF Choke
L252	5923-70327	AM Osc.
L301	5995-100225	RF Choke
	TRANSFORMERS	
T101	5563-0027	FM IF
T201	5574-7023	Quadrature Det.
T251, 252	5553-0097	AM IF
T253	5553-0087	AM IF
	MISCELLANEOUS	
CF201, 202, 203	5671-7117Z	Ceramic Filter, FM IF
FB101, 102, 103	5597-4	Ferrite Bead, Q102 & Q103

RECTIFIER P.C. BOARD

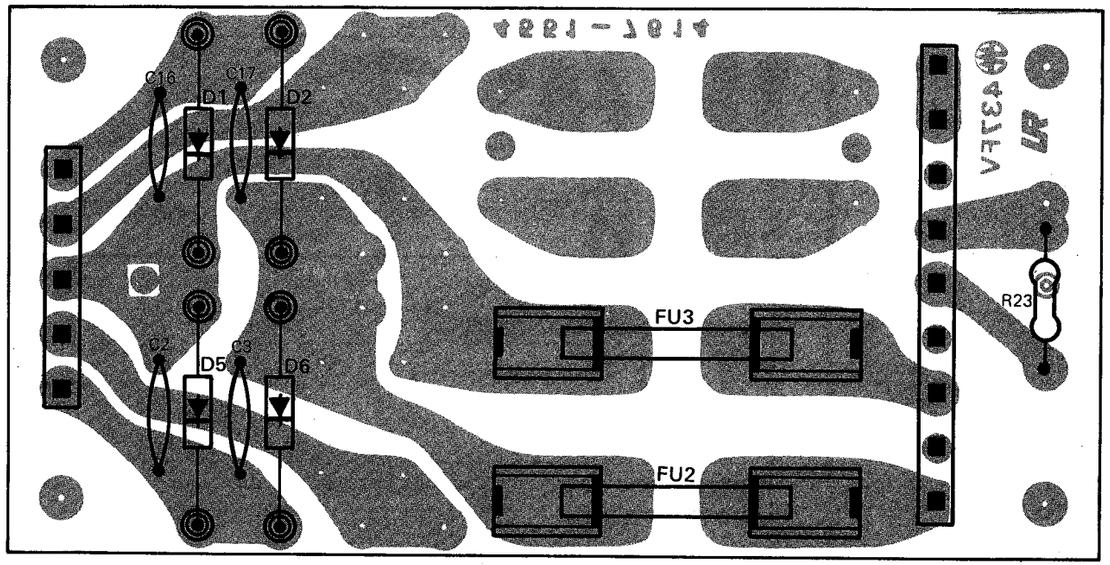

Ref. No.	Part No.	Description
D1, 2, 5, 6	5632-ERC0402L	Diode, ERC0402L
R23	5102-3905114	Resistor, 39Ω ±5% 1/2W Fuse
FU2, 3	5732-322028	Fuse, 3.2A 125V

LED DISPLAY P.C. BOARD

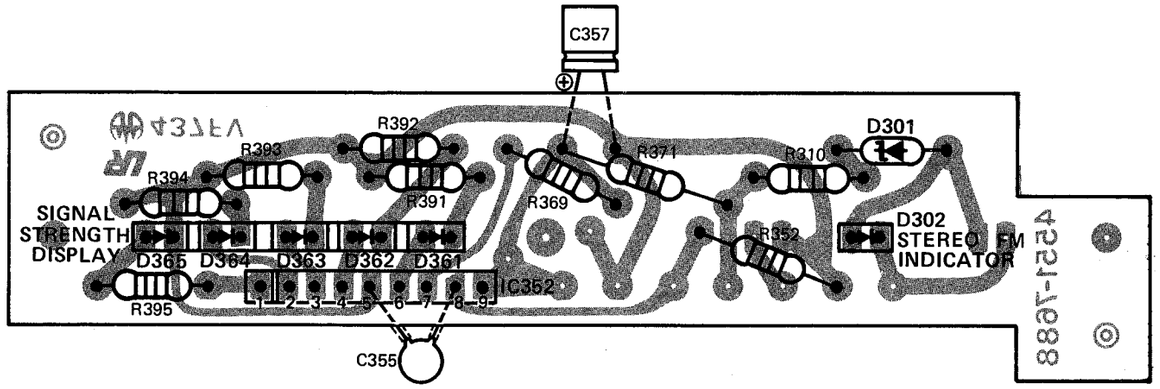

Ref. No.	Part No.	Description
IC352	5652-BA6104	Integrated Circuit, BA6104 Signal Strength Display Driver
D301	5635-RD6R2EB	Zener Diode, RD6.2EB
D302	5637-GL9PR20	Light Emitting Diode, GL9PR20 Stereo FM Indicator
D361, 362, 363, 364, 365	5637-GL105N5	LED Display Assembly, GL105N5 Signal Strength Display
C357	5345-107-16	Capacitor, 100μF +50%–10% 16V Electrolytic

TUNER P.C. BOARD

Ref. No.	Part No.	Description
	RESISTORS	
VR301	5101-20371913	Variable Resistor, 20kΩ
VR302, 354	5101-50271913	Variable Resistor, 5kΩ
VR303	5101-20171913	Variable Resistor, 200Ω
VR352, 353, 355	5101-50371913	Variable Resistor, 50kΩ
	CAPACITORS, ELECTROLYTIC	
C208, 352, 353	5345-105-50	1μF +75%–10% 50V
C209, 273, 302, 354	5345-106-16	10μF +50%–10% 16V
C260	5345-475-25	4.7μF +50%–10% 25V
C265	5345-226-16	22μF +50%–10% 16V
C271, 274, 351	5345-104F0212	0.1μF ±20% 50V
C301, 319, 320	5345-475D0212	4.7μF ±20% 25V
C303, 304, 306	5345-105F0212	1μF ±20% 50V
C305	5345-685D0212	6.8μF ±20% 25V
C323	5345-107-16	100μF +50%–10% 16V
VC101, 102, 103, 251, 252	5315-718	5-Gang Variable Capacitor (w/Trimmers TC101, 102, 251, 252)
TC103	5371-55	Trimmer Capacitor
	INTEGRATED CIRCUITS	
IC201	5652-HA11225	HA11225 FM IF Amp. & FM Det.
IC301	5652-KB4437	KB4437 FM Multiplex
	TRANSISTORS	
Q101	5616-2SK168(D	F.E.T., 2SK168(D) FM RF Amp.
Q102	5613-535(B)	2SC535(B) FM Mixer
Q103	5613-2058(N)	2SC2058(N) FM Osc.
Q104	5613-2320(D)	2SC2320(D) FM AGC Switching
Q201, 202	5613-2058(D)	2SC2058(N) FM IF Amp.
Q203	5611-999(F)	2SA999(F) FM Voltage Supply
Q251	5613-2058(N)	2SC2058(N) AM Osc.
Q252	5613-2058(N)	2SC2058(N) AM Mixer
Q253, 254	5613-2058(N)	2SC2058(N) AM IF Amp.
Q255	5613-2320(D)	2SC2320(D) AM Signal Switching
Q256	5611-999(F)	2SA999(F) AM Voltage Supply
Q301, 302	5611-999(F)	2SA999(F) } MPX Output Amp.
Q303, 304	5613-2320(D)	2SC2320(D) } MPX Output Amp.
Q305, 306	5613-2320(D)	2SC2320(D) FM Muting
Q351, 352	5613-2320(D)	2SC2320(D) Stereo FM Indicator Control
Q353	5613-2320(D)	2SC2320(D) } FM Muting
Q354	5611-999(F)	2SA999(F) } FM Muting
Q355	5616-2SK163(M	F.E.T., 2SK163(M) } Signal Strength Display Level Amp.
Q356	5611-999(F)	2SA999(F) } Signal Strength Display Level Amp.
	DIODES	
D201, 254, 351, 352, 353, 354, 355,	5631-1S2473	1S2473
D251, 252, 253	5631-1N34A	1N34A
D303	5635-RD5R1EB	Zener, RD5.1EB
	COILS	
L102	5943-70125	FM RF
L103	5643-70225	FM RF
L104	5991-7065	FM IF Trap
L105	5942-70215	FM Osc.
L106	5995-3R3225	RF Choke
L201	5995-101225	RF Choke
L252	5923-70327	AM Osc.
L301	5995-100225	RF Choke
	TRANSFORMERS	
T101	5563-0027	FM IF
T201	5574-7023	Quadrature Det.
T251, 252	5553-0097	AM IF
T253	5553-0087	AM IF
	MISCELLANEOUS	
CF201, 202, 203	5671-7117Z	Ceramic Filter, FM IF
FB101, 102, 103	5597-4	Ferrite Bead, Q102 & Q103

RECTIFIER P.C. BOARD

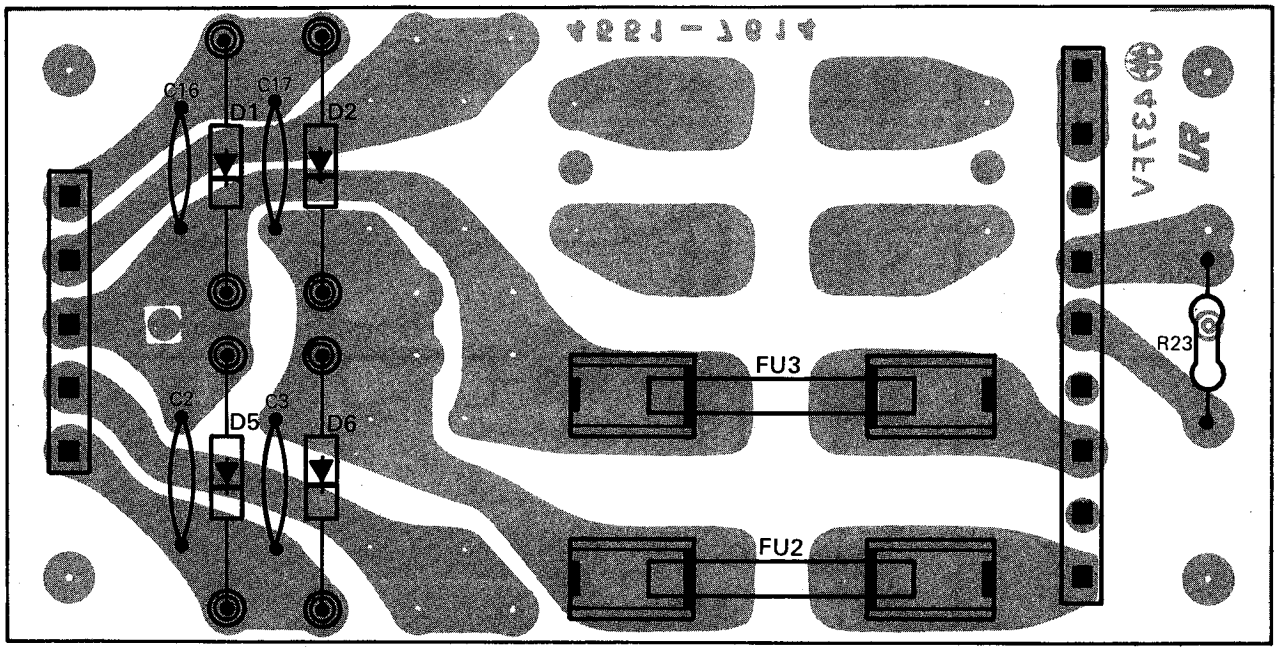

Ref. No.	Part No.	Description
D1, 2, 5, 6	5632-ERC0402L	Diode, ERC0402L
R23	5102-3905114	Resistor, 39Ω ±5% 1/2W Fuse
FU2, 3	5732-322028	Fuse, 3.2A 125V

LED DISPLAY P.C. BOARD

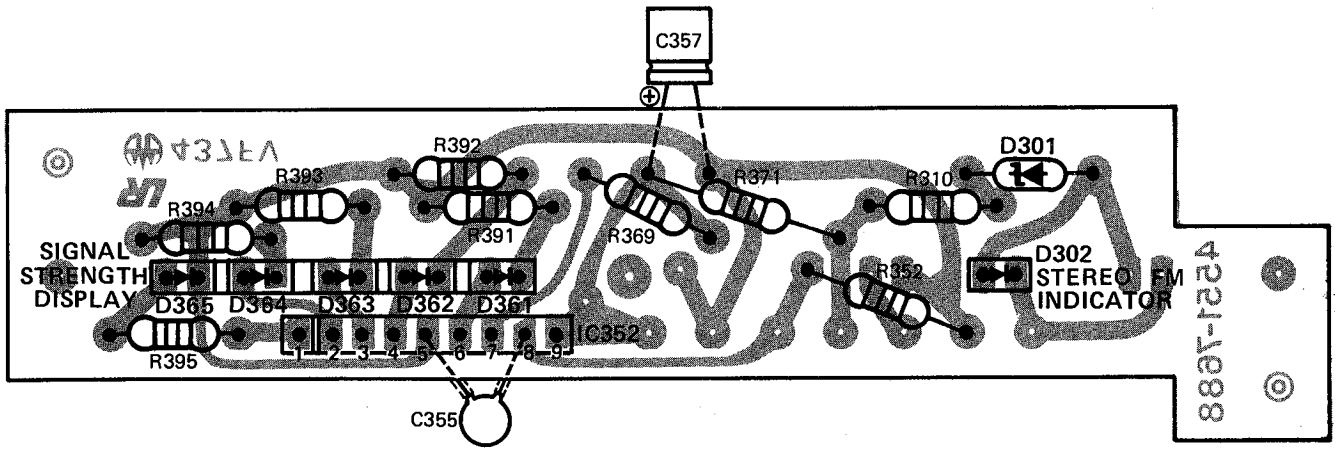

Ref. No.	Part No.	Description
IC352	5652-BA6104	Integrated Circuit, BA6104 Signal Strength Display Driver
D301	5635-RD6R2EB	Zener Diode, RD6.2EB
D302	5637-GL9PR20	Light Emitting Diode, GL9PR20 Stereo FM Indicator
D361, 362, 363, 364, 365	5637-GL105N5	LED Display Assembly, GL105N5 Signal Strength Display
C357	5345-107-16	Capacitor, 100μF +50%–10% 16V Electrolytic

POWER AMP. P.C. BOARD

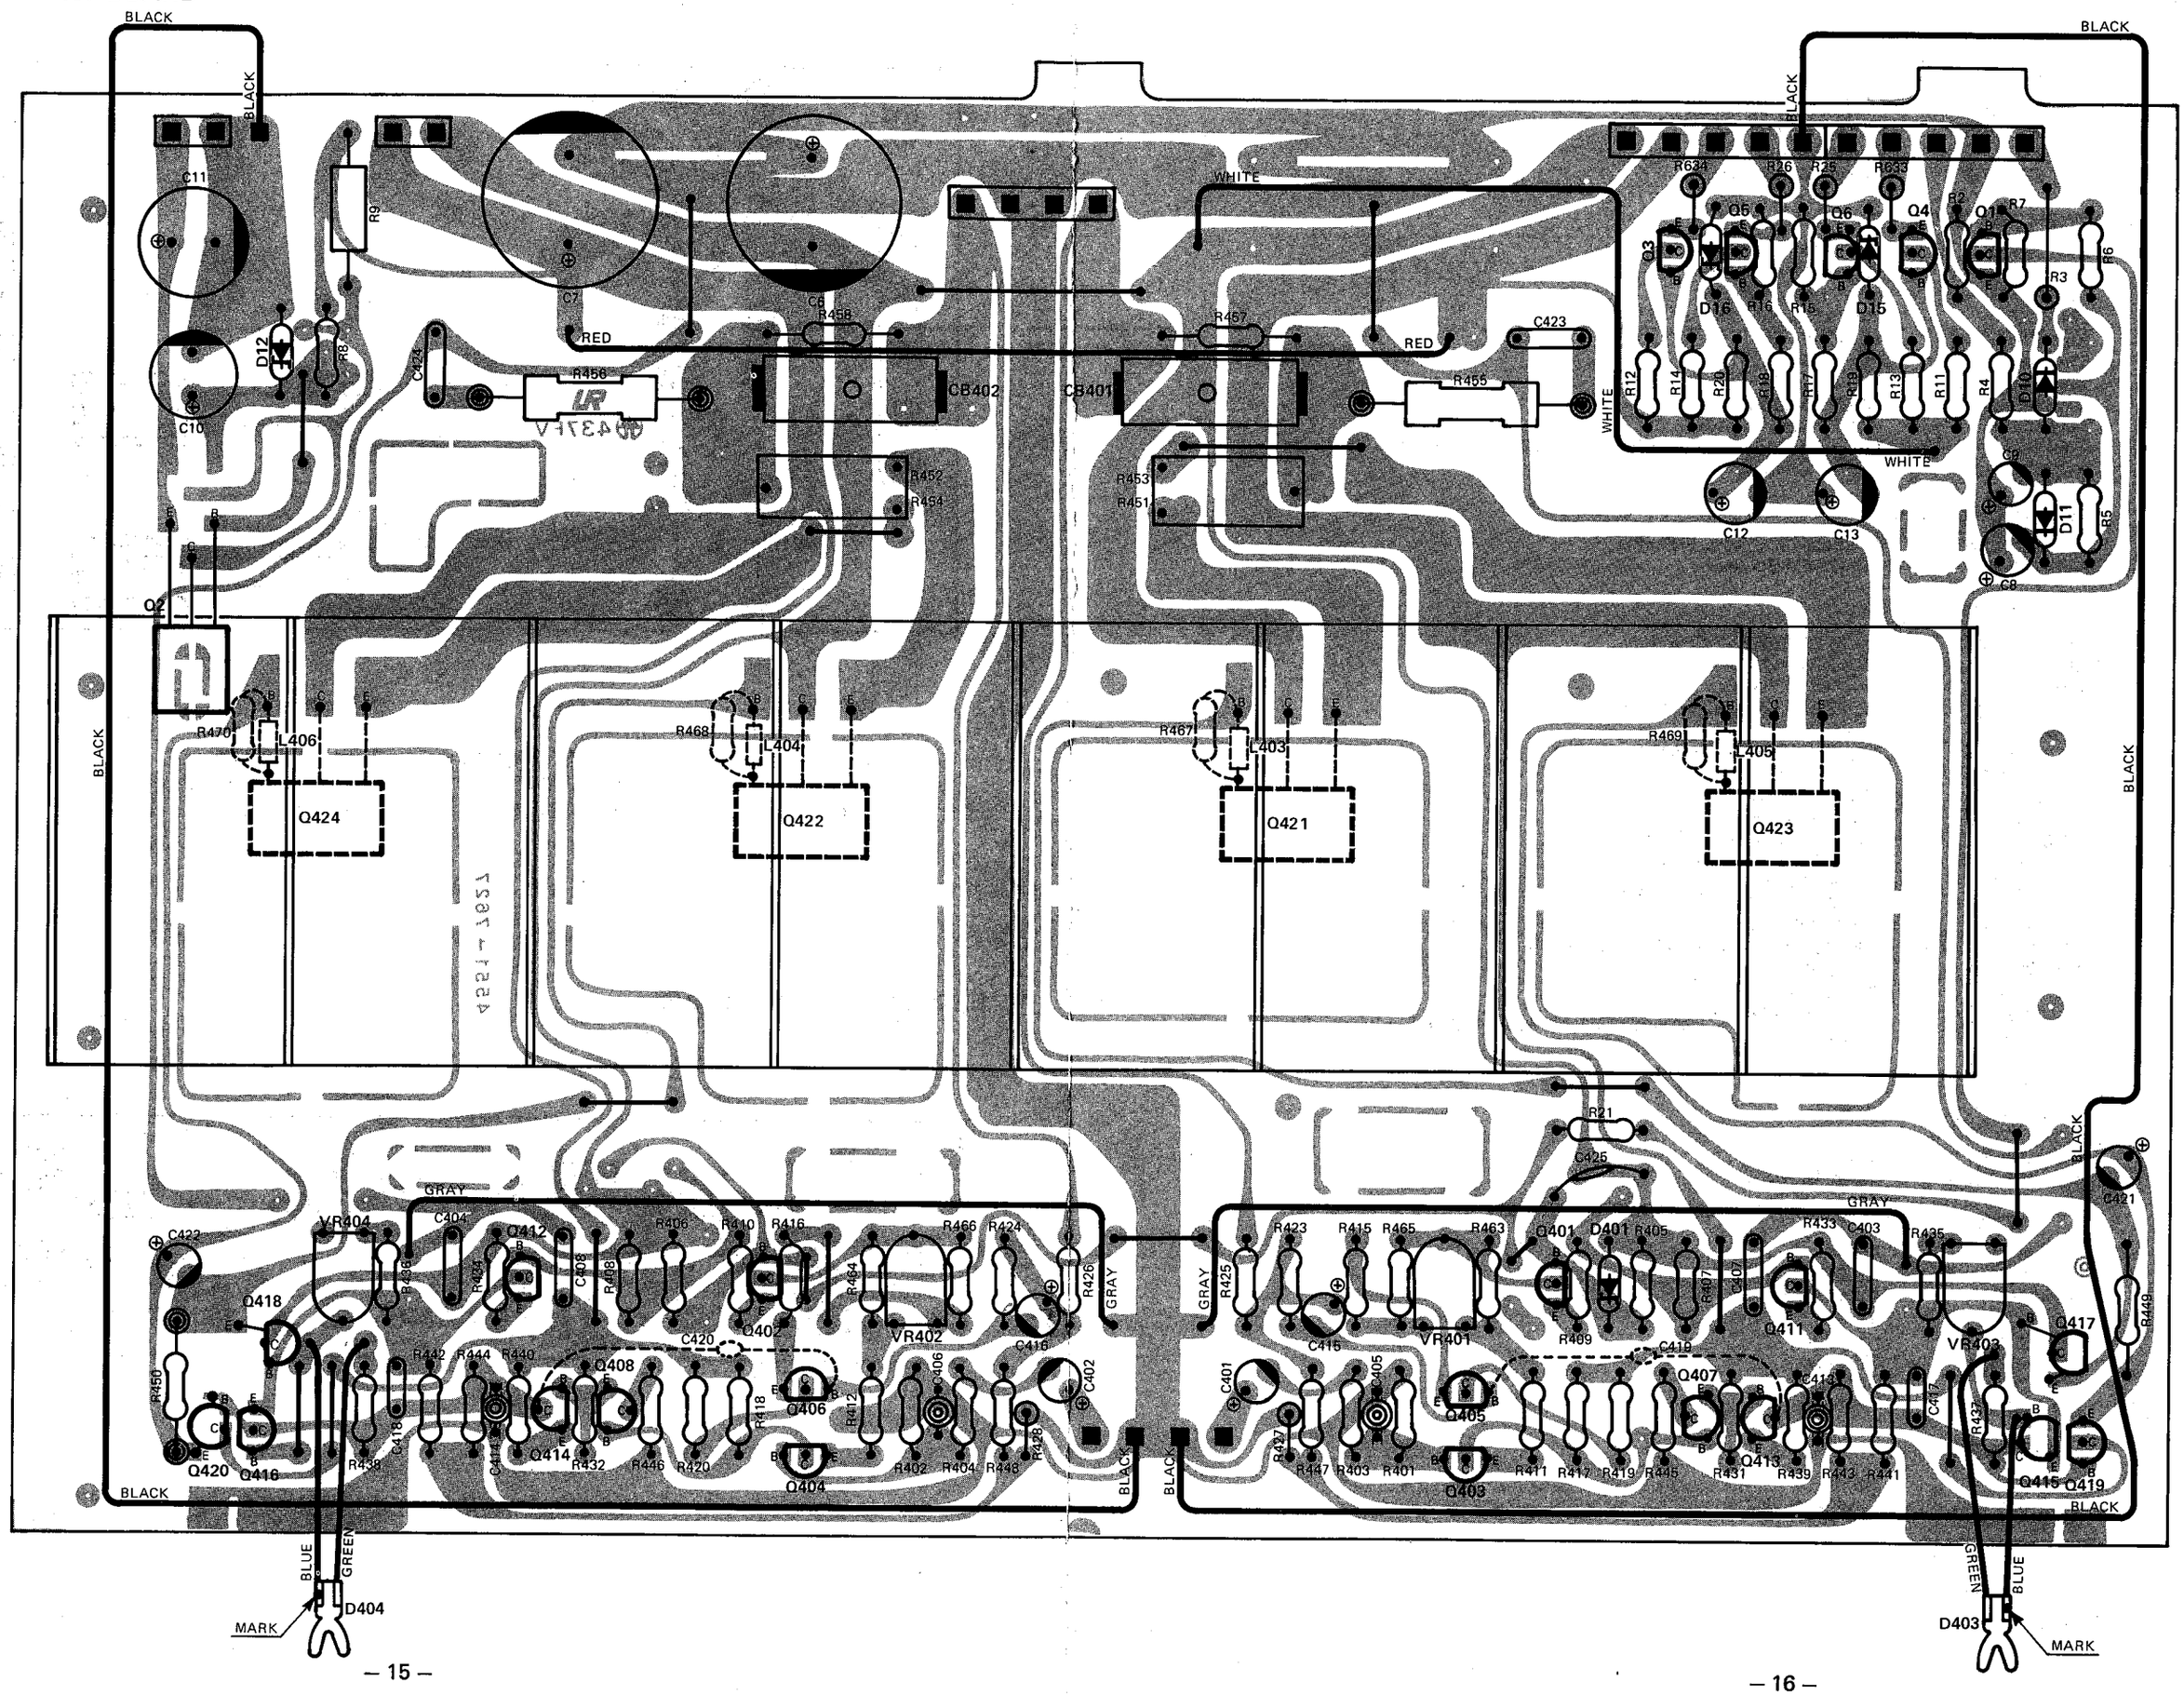

POWER AMP. P.C. BOARD

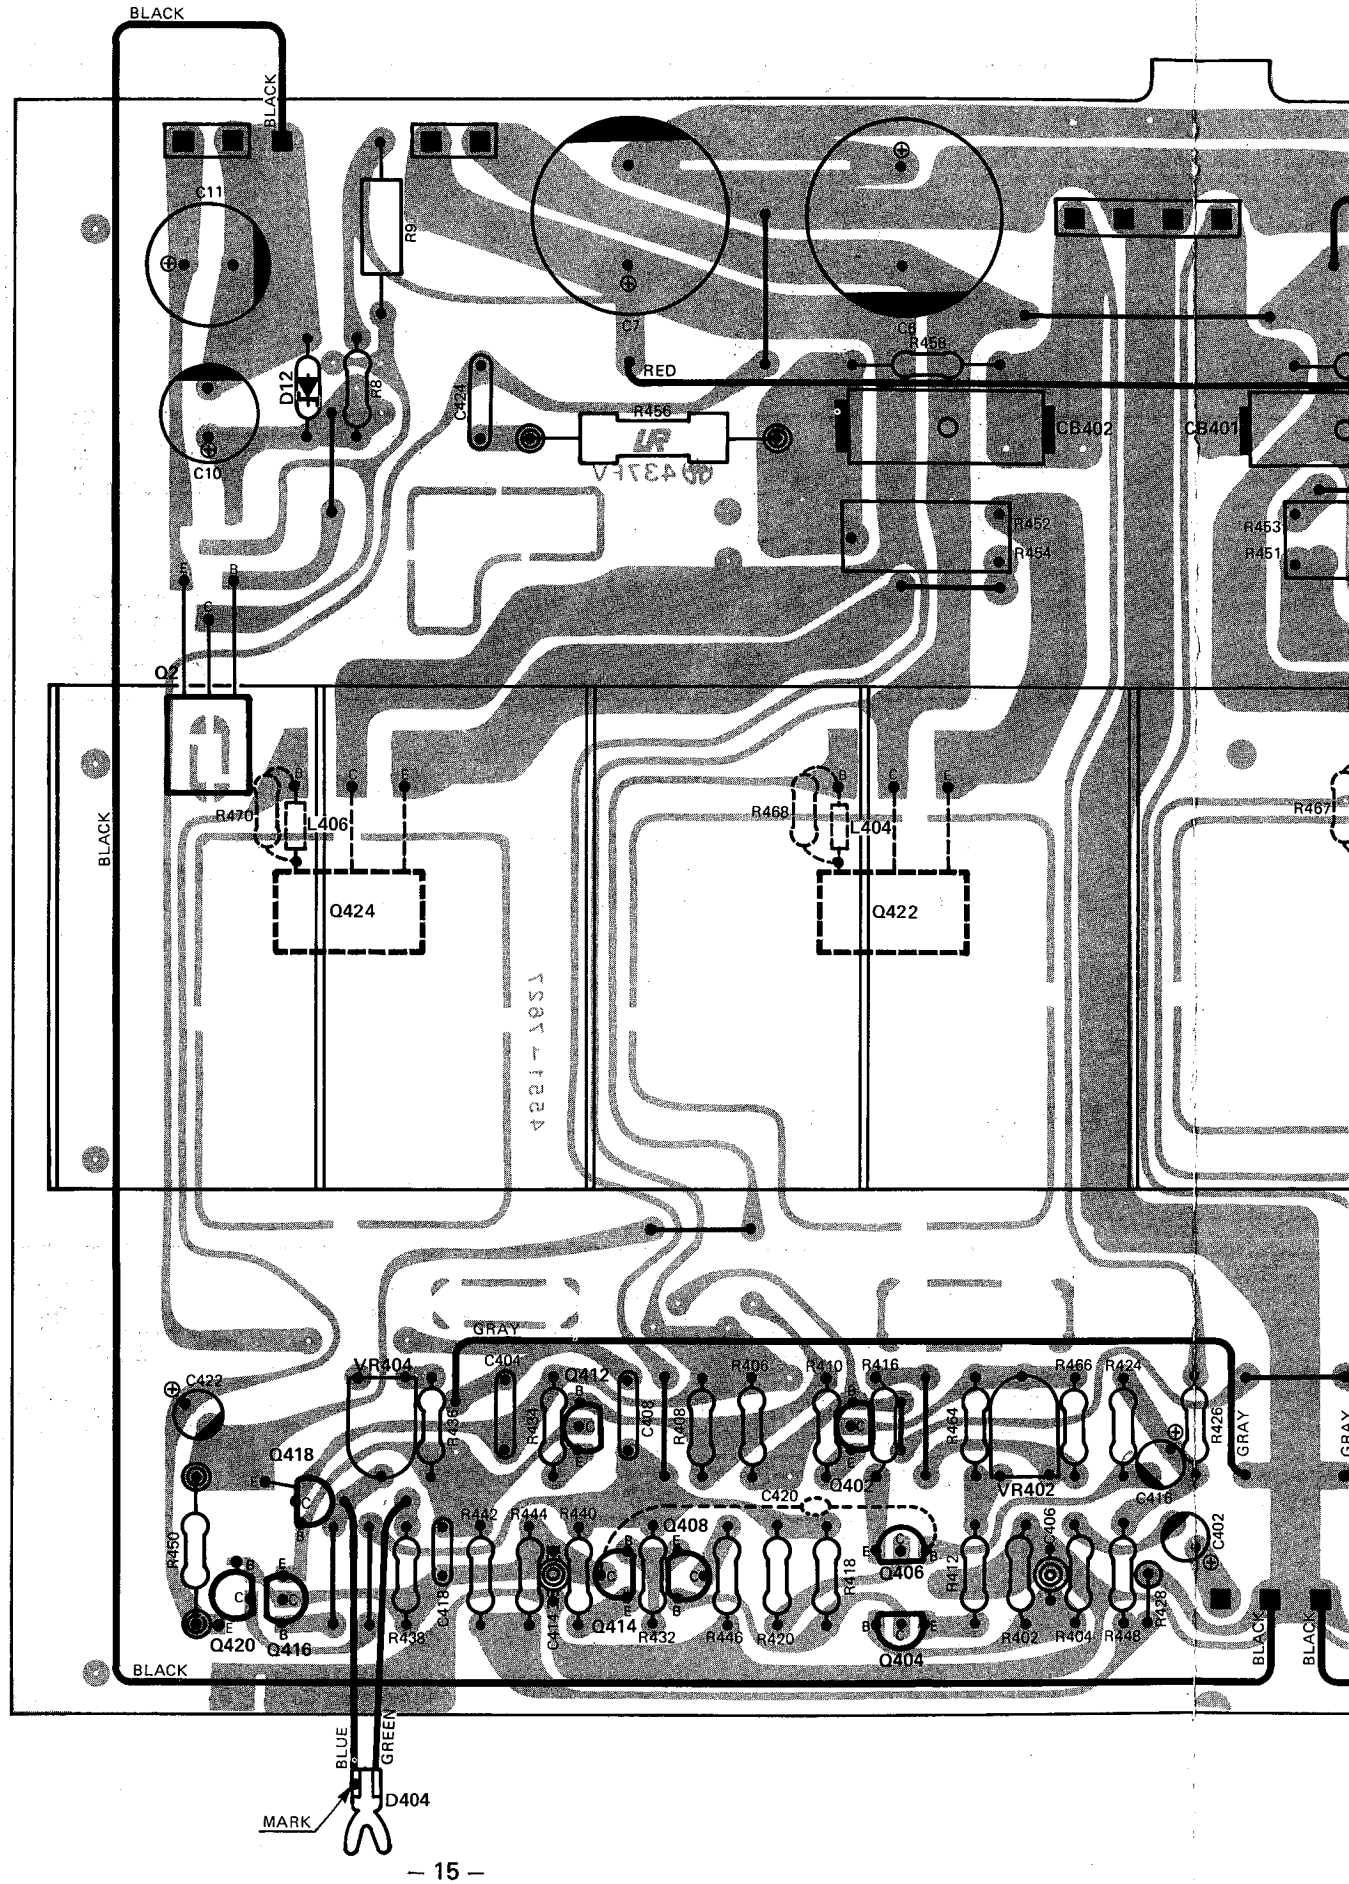

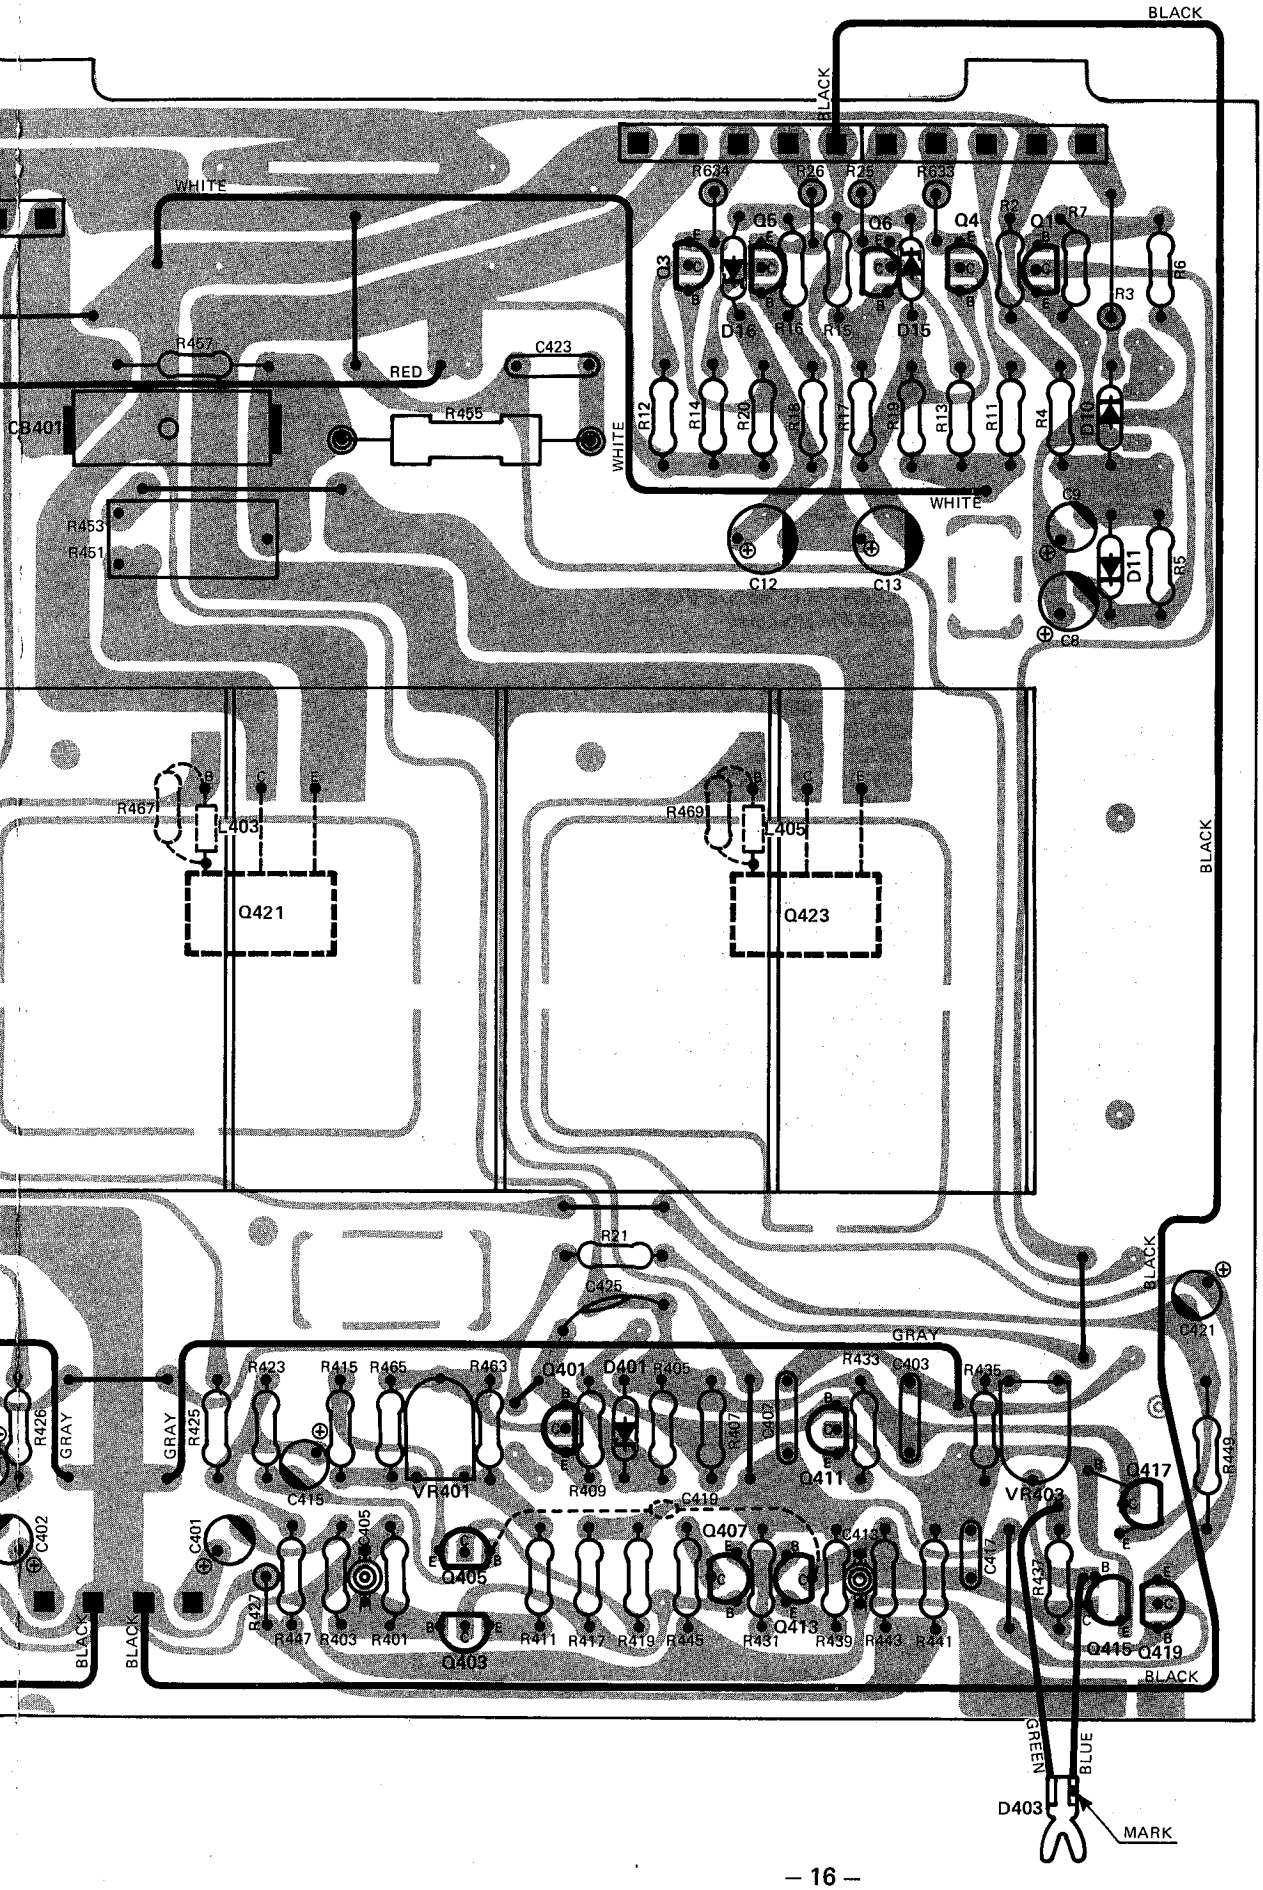
BLACK
WHITE
R634
R26
R25
R633
Q5
Q6
Q4
Q1
Q3
R7
R6
R3
D16
D15
R457
C423
RED
CB401
R455
WHITE
R12
R14
R20
R18
R17
R19
R13
R11
R4
D10
R453
R451
C12
C13
C9
D11
R5
C8
R467
L403
Q421
R469
L405
Q423
BLACK
R21
C425
GRAY
C421
R423
R415
R465
R463
Q401
D401
R405
R433
C403
R435
R426
GRAY
R425
GRAY
C415
VR401
R409
C419
Q411
VR403
Q417
R449
C402
C401
C405
Q405
Q407
C411
C413
C417
R427
R447
R403
R401
Q403
R411
R417
R419
R445
R431
R439
R443
R441
R437
Q415
Q419
BLACK
BLACK
BLACK
GREEN
BLUE
D403
MARK

POWER AMP. P.C. BOARD

Ref. No.	Part No.	Description
	RESISTORS	
R9	5102-3905711	39Ω ±5% 1W Fuse
R11, 12	5102-1214713	120Ω ±2% 1/4W Fuse
R13, 14	5102-3314713	330Ω ±2% 1/4W Fuse
R407, 408	5102-1024713	1kΩ ±2% 1/4W Fuse
R417, 418, 419, 420	5102-2724713	2.7kΩ ±2% 1/4W Fuse
R431, 432	5102-6814713	680Ω ±2% 1/4W Fuse
R433, 434, 439, 440	5102-1014713	100Ω ±2% 1/4W Fuse
R437, 438	5102-4714713	470Ω ±2% 1/4W Fuse
R449, 450	5102-5605114	56Ω ±5% 1/2W Fuse
R451/453, 452/454	5273-R22672	0.22Ω ±10% 3W×2 Special Dual
VR401, 402	5101-10171913	Variable Resistor, 100Ω
VR403, 404	5101-50171913	Variable Resistor, 500Ω
	CAPACITORS, ELECTROLYTIC	
C6, 7	5341-688E0955	6800μF ±20% 35V
C8	5345-107-06	100μF +50%–10% 6.3V
C9	5345-336-16	33μF +50%–10% 16V
C10	5345-337-16	330μF +50%–10% 16V
C11	5345-108-16	1000μF +50%–10% 16V
C12, 13	5345-107-25	100μF +50%–10% 25V
C401, 402	5345-107-10	100μF +50%–10% 10V
C415, 416	5345-105-50	1μF +75%–10% 50V
C421, 422	5345-106-50	10μF +50%–10% 50V
	TRANSISTORS	
Q1	5611-999(F)	2SA999(F) Audio Muting
Q2	5613-1419(C)	2SC1419(C) Voltage Regulator
Q3, 5	5613-2320(F)	2SC2320(F) Voltage Regulator
Q4, 6	5611-999(F)	2SA999(F) Voltage Regulator
Q401, 402	5613-2320(F)	2SC2320(F) } Power Amp.
Q403, 404, 405, 406	5613-1775(F)	2SC1775(F) } Power Amp.
Q407, 408	5611-999(F)	2SA999(F) } Power Amp.
Q411, 412	5614-666(C)	2SD666(C) } Power Amp.
Q413, 414	5612-646(C)	2SB646(C) } Power Amp.
Q415, 416	5613-945(K)	2SC945(K) } Power Amp.
Q417, 418	5612-647(C)	2SB647(C) } Power Amp.
Q419, 420	5614-667(C)	2SD667(C) } Power Amp.
Q421, 422	5612-690(C)	2SB690(C)or(B) } Power Amp.
Q423, 424	5614-726(C)	2SD726(C)or(B) } Power Amp.
	DIODES	
D10, 11	5636-1S2472	1S2472
D12	5635-RD15EB2	Zener, RD15EB2
D15, 16	5635-RD16EB	Zener, RD16EB
D401	5635-RD13EB2	Zener, RD13EB2
D403, 404	5641-MV12YM	Varistor, MV12YM
	MISCELLANEOUS	
CB401, 402	4361-162014	Speaker Protector
L403, 404, 405, 406	5597-35502	Ferrite Bead

PHONO EQUALIZER P.C. BOARD

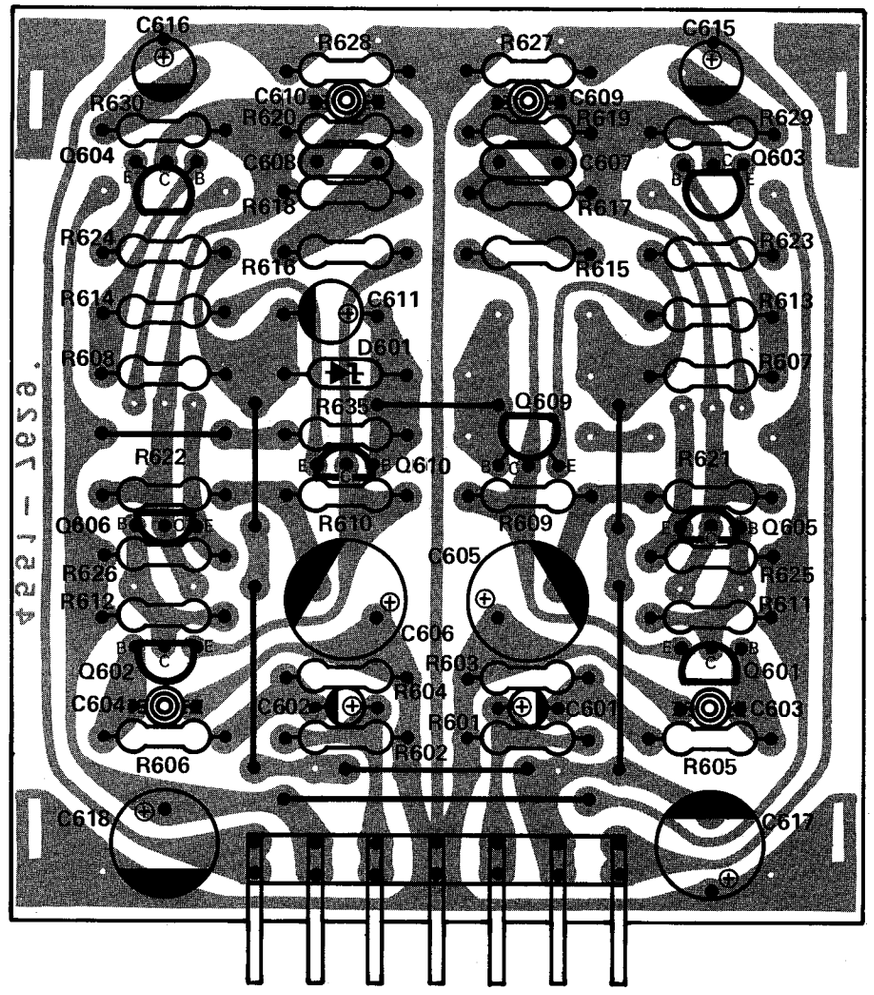

Ref. No.	Part No.	Description
	CAPACITORS, ELECTROLYTIC	
C601, 602	5345-336B0951	33μF ±20% 10V
C605, 606	5345-337-06	330μF +50%–10% 6.3V
C611	5345-106-16	10μF +50%–10% 16V
C615, 616	5345-106C0951	10μF ±20% 16V
C617, 618	5345-107-25	100μF +50%–10% 25V
	TRANSISTORS	
Q601, 602	5613-2320L(F)	2SC2320L(F) } Equalizer Amp.
Q603, 604	5613-2320(F)	2SC2320(F) } Equalizer Amp.
Q605, 606	5611-999(F)	2SA999(F) } Equalizer Amp.
Q609, 610	5613-2320(D)	2SC2320(D) } Equalizer Amp.
	DIODE	
D601	5635-RD5R1EB2	Zener, RD5.1EB2

POWER AMP. P.C. BOARD

Ref. No.	Part No.	Description
	RESISTORS	
R9	5102-3905711	39Ω ±5% 1W Fuse
R11, 12	5102-1214713	120Ω ±2% 1/4W Fuse
R13, 14	5102-3314713	330Ω ±2% 1/4W Fuse
R407, 408	5102-1024713	1kΩ ±2% 1/4W Fuse
R417, 418, 419, 420	5102-2724713	2.7kΩ ±2% 1/4W Fuse
R431, 432	5102-6814713	680Ω ±2% 1/4W Fuse
R433, 434, 439, 440	5102-1014713	100Ω ±2% 1/4W Fuse
R437, 438	5102-4714713	470Ω ±2% 1/4W Fuse
R449, 450	5102-5605114	56Ω ±5% 1/2W Fuse
R451/453, 452/454	5273-R22672	0.22Ω ±10% 3W×2 Special Dual
VR401, 402	5101-10171913	Variable Resistor, 100Ω
VR403, 404	5101-50171913	Variable Resistor, 500Ω
	CAPACITORS, ELECTROLYTIC	
C6, 7	5341-688E0955	6800μF ±20% 35V
C8	5345-107-06	100μF +50%–10% 6.3V
C9	5345-336-16	33μF +50%–10% 16V
C10	5345-337-16	330μF +50%–10% 16V
C11	5345-108-16	1000μF +50%–10% 16V
C12, 13	5345-107-25	100μF +50%–10% 25V
C401, 402	5345-107-10	100μF +50%–10% 10V
C415, 416	5345-105-50	1μF +75%–10% 50V
C421, 422	5345-106-50	10μF +50%–10% 50V
	TRANSISTORS	
Q1	5611-999(F)	2SA999(F) Audio Muting
Q2	5613-1419(C)	2SC1419(C) Voltage Regulator
Q3, 5	5613-2320(F)	2SC2320(F) Voltage Regulator
Q4, 6	5611-999(F)	2SA999(F) Voltage Regulator
Q401, 402	5613-2320(F)	2SC2320(F)
Q403, 404, 405, 406	5613-1775(F)	2SC1775(F)
Q407, 408	5611-999(F)	2SA999(F)
Q411, 412	5614-666(C)	2SD666(C)
Q413, 414	5612-646(C)	2SB646(C)
Q415, 416	5613-945(K)	2SC945(K) } Power Amp.
Q417, 418	5612-647(C)	2SB647(C)
Q419, 420	5614-667(C)	2SD667(C)
Q421, 422	5612-690(C)	2SB690(C)or(B)
Q423, 424	5614-726(C)	2SD726(C)or(B)
	DIODES	
D10, 11	5636-1S2472	1S2472
D12	5635-RD15EB2	Zener, RD15EB2
D15, 16	5635-RD16EB	Zener, RD16EB
D401	5635-RD13EB2	Zener, RD13EB2
D403, 404	5641-MV12YM	Varistor, MV12YM
	MISCELLANEOUS	
CB401, 402	4361-162014	Speaker Protector
L403, 404, 405, 406	5597-35502	Ferrite Bead

PHONO EQUALIZER P.C. BOARD

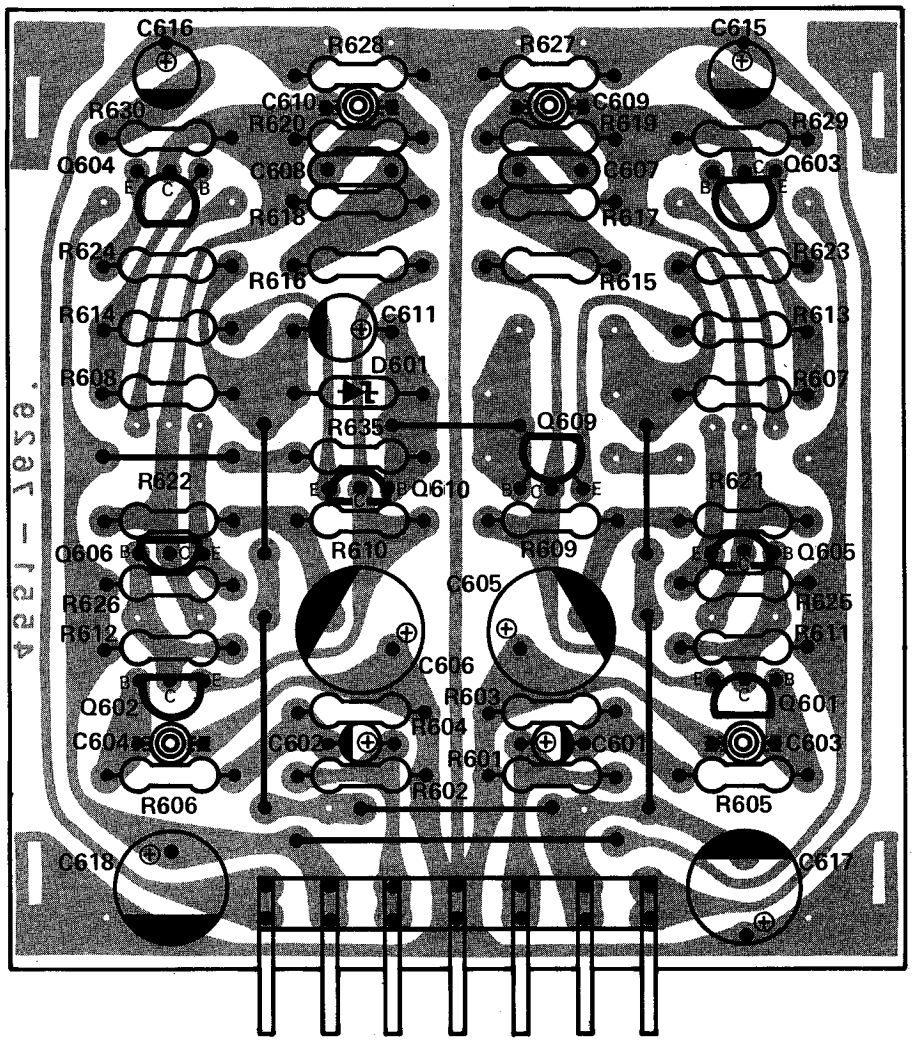

Ref. No.	Part No.	Description
	CAPACITORS, ELECTROLYTIC	
C601, 602	5345-336B0951	33μF ±20% 10V
C605, 606	5345-337-06	330μF +50%–10% 6.3V
C611	5345-106-16	10μF +50%–10% 16V
C615, 616	5345-106C0951	10μF ±20% 16V
C617, 618	5345-107-25	100μF +50%–10% 25V
	TRANSISTORS	
Q601, 602	5613-2320L(F)	2SC2320L(F) } Equalizer Amp.
Q603, 604	5613-2320(F)	2SC2320(F)
Q605, 606	5611-999(F)	2SA999(F)
Q609, 610	5613-2320(D)	2SC2320(D)
	DIODE	
D601	5635-RD5R1EB2	Zener, RD5.1EB2

TONE CONTROL P.C. BOARD

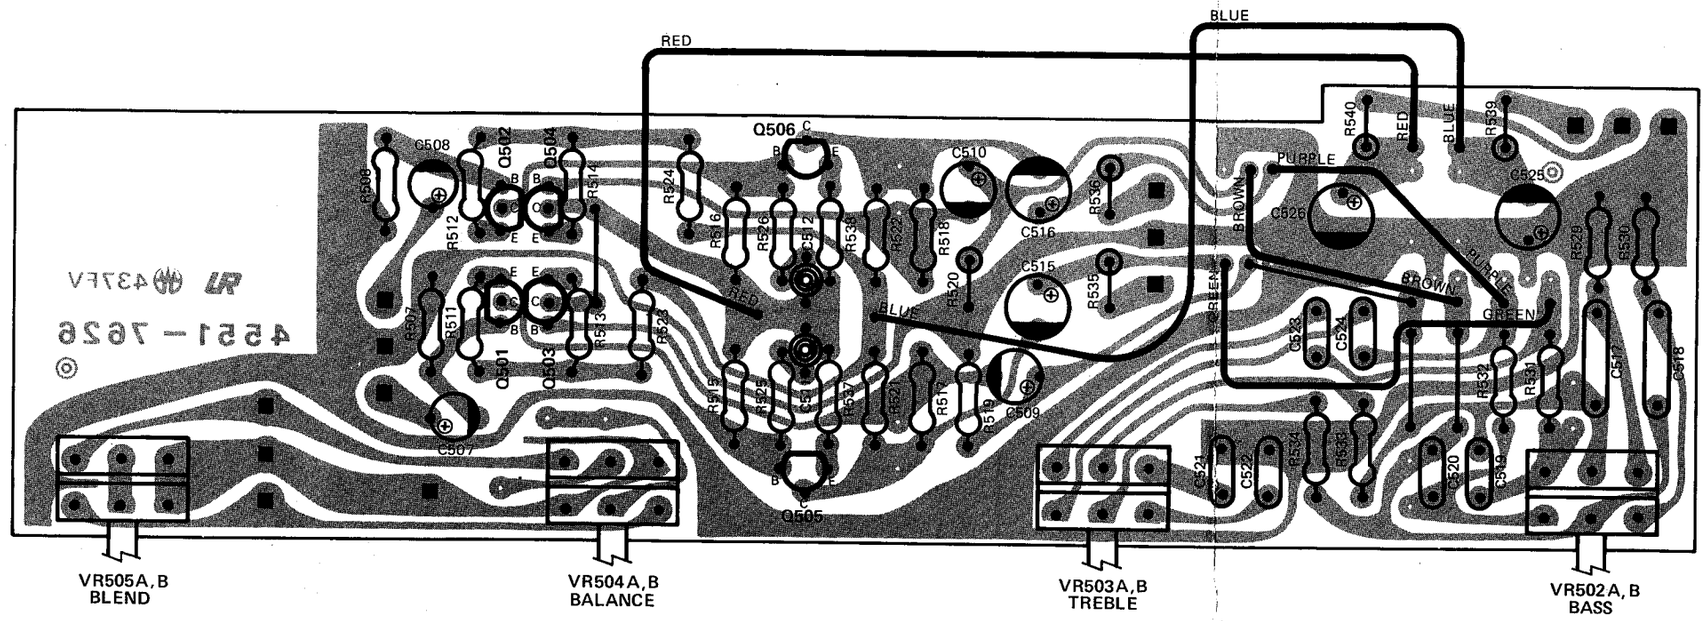

Ref. No.	Part No.	Description
	RESISTORS	
VR502A, B	5113-1047877	Variable Resistor, 100kΩ Bass Control
VR503A, B	5113-5037977	Variable Resistor, 50kΩ Treble Control
VR504A, B	5113-5038077	Variable Resistor, 50kΩ Balance Control
VR505A, B	5113-2047140	Variable Resistor, 200kΩ Blend Control
	CAPACITORS, ELECTROLYTIC	
C507, 508, 509, 510	5345-106C0951	10μF ±20% 16V
C515, 516	5345-476C0951	47μF ±20% 16V
C525, 526	5345-107-16	100μF +50%—10% 25V
	TRANSISTORS	
Q501, 502, 503, 504	5613-2320(F)	2SC2320(F) } Flat Amp./Tone Control Amp.
Q505, 506	5611-999(F)	2SA999(F) }

VOLUME CONTROL & FUNCTION P.C. BOARD

Pef. No.	Part No.	Description
VR501A, B	5116-1047343	Variable Resistor, 100kΩ Volume Control
SW301, 302, 303, 304	4431-04167357	4-Gang Push Switch, Function Selector
SW501	4431-01047694	Push Switch, Tape Monitor
SW502	4431-01027194	Push Switch, Loudness

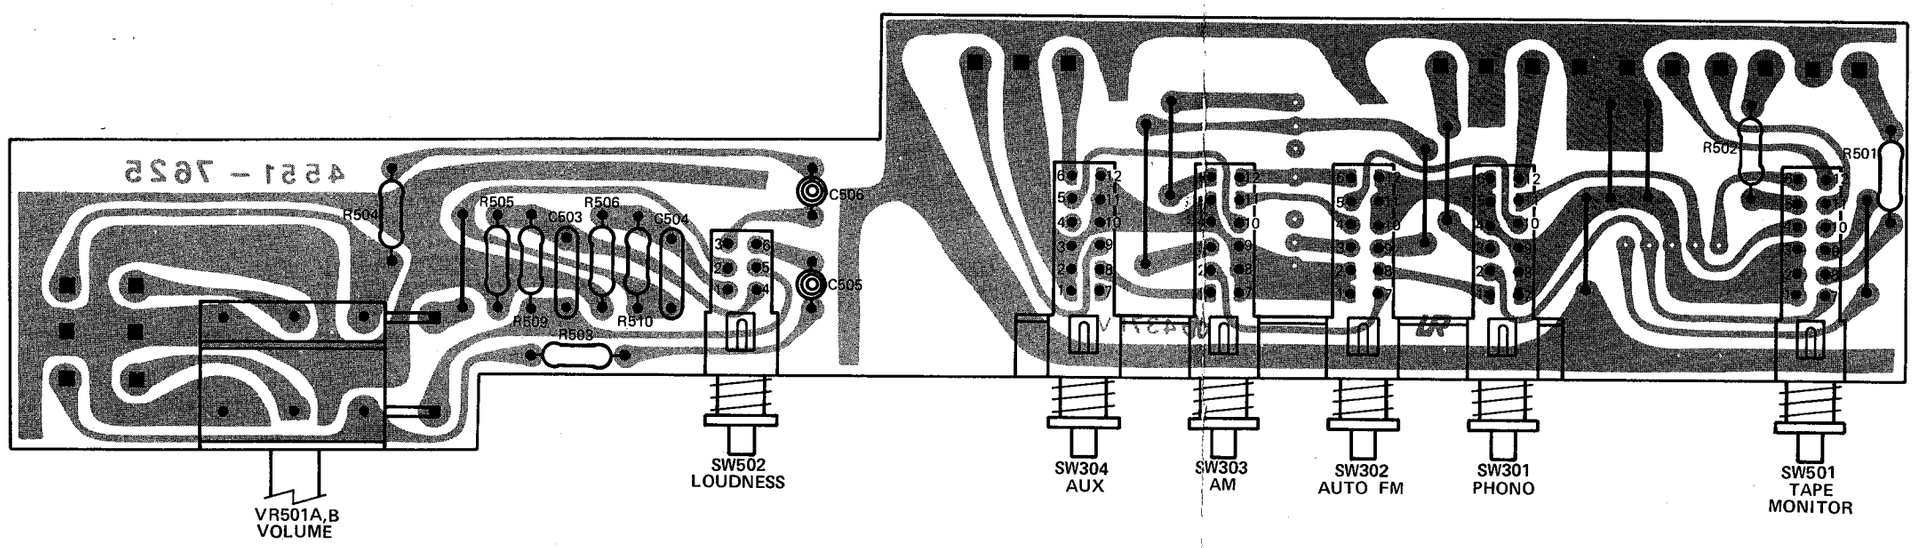

TONE CONTROL P.C. BOARD

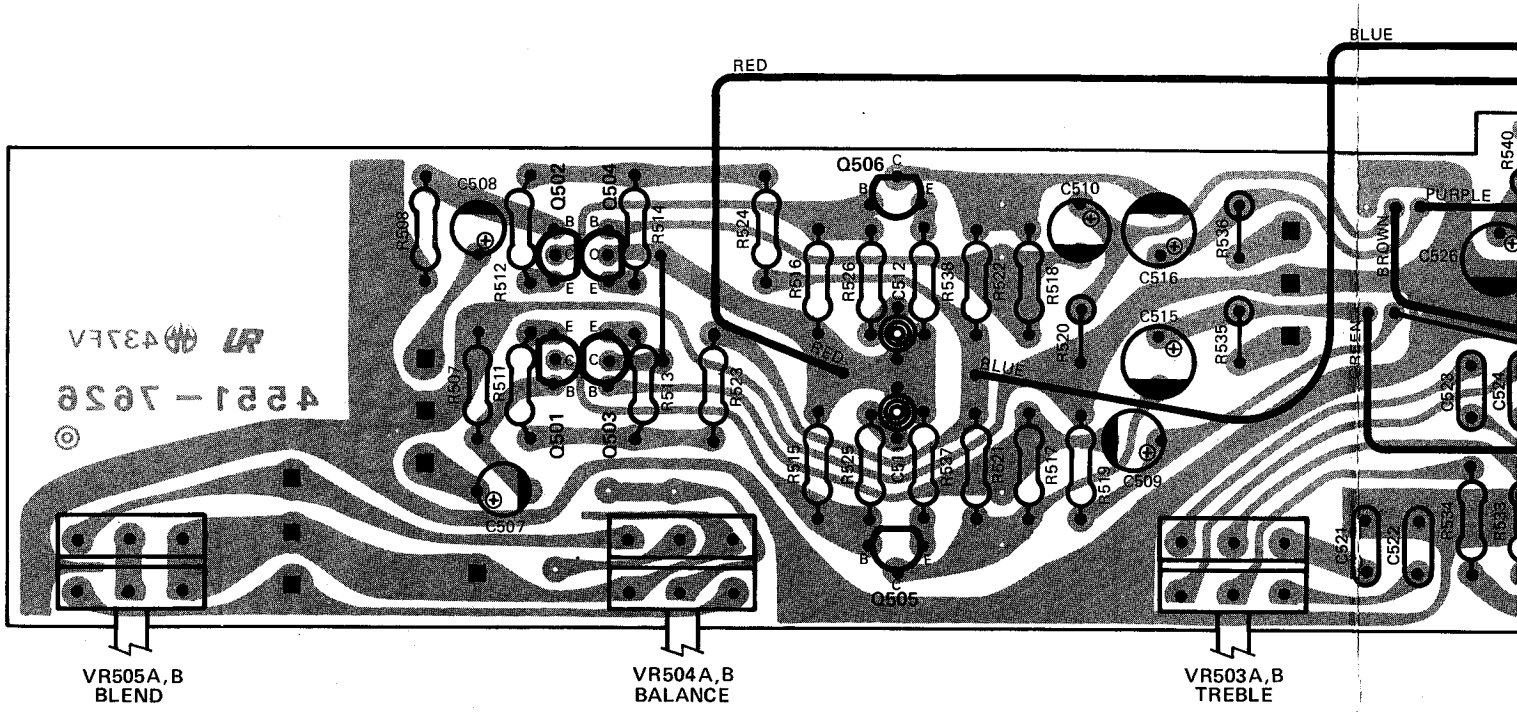

VOLUME CONTROL & FUNCTION P.C. BOARD

Pef. No.	Part No.	Description
VR501A, B	5116-1047343	Variable Resistor, 100kΩ Volume Control
SW301, 302, 303, 304	4431-04167357	4-Gang Push Switch, Function Selector
SW501	4431-01047694	Push Switch, Tape Monitor
SW502	4431-01027194	Push Switch, Loudness

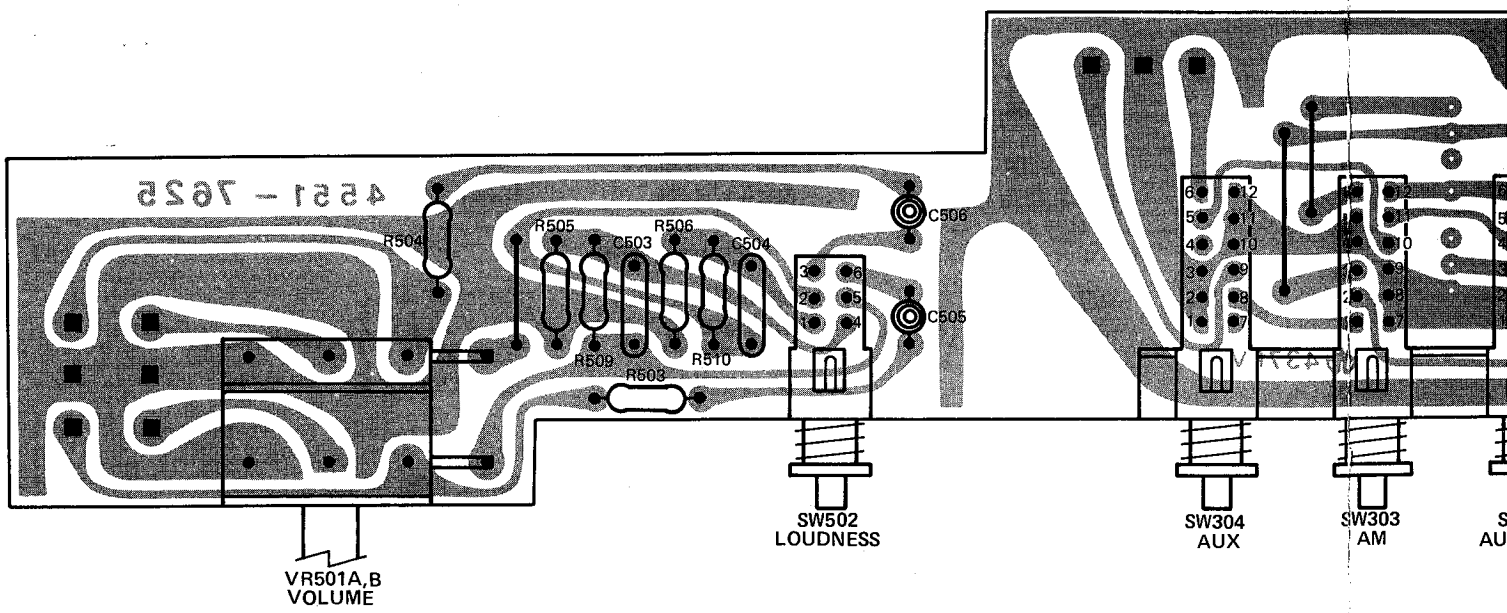

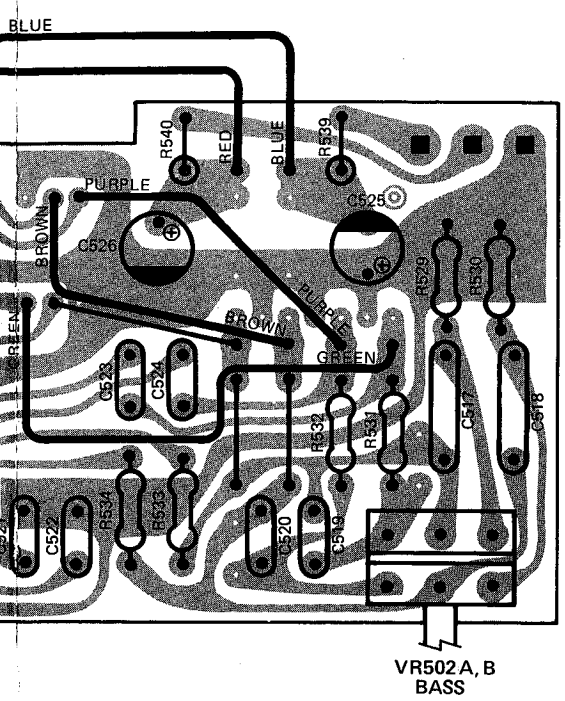

Ref. No.	Part No.	Description
	RESISTORS	
VR502A, B	5113-1047877	Variable Resistor, 100kΩ Bass Control
VR503A, B	5113-5037977	Variable Resistor, 50kΩ Treble Control
VR504A, B	5113-5038077	Variable Resistor, 50kΩ Balance Control
VR505A, B	5113-2047140	Variable Resistor, 200kΩ Blend Control
	CAPACITORS, ELECTROLYTIC	
C507, 508, 509, 510	5345-106C0951	10μF ±20% 16V
C515, 516	5345-476C0951	47μF ±20% 16V
C525, 526	5345-107-16	100μF +50%–10% 25V
	TRANSISTORS	
Q501, 502, 503, 504	5613-2320(F)	2SC2320(F) } Flat Amp./Tone Control Amp.
Q505, 506	5611-999(F)	2SA999(F) }

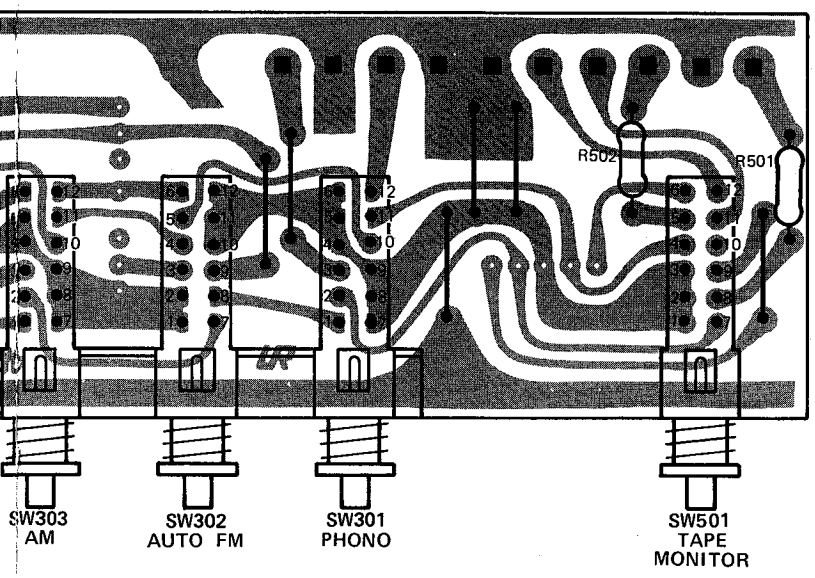

WIRING DIAGRAM

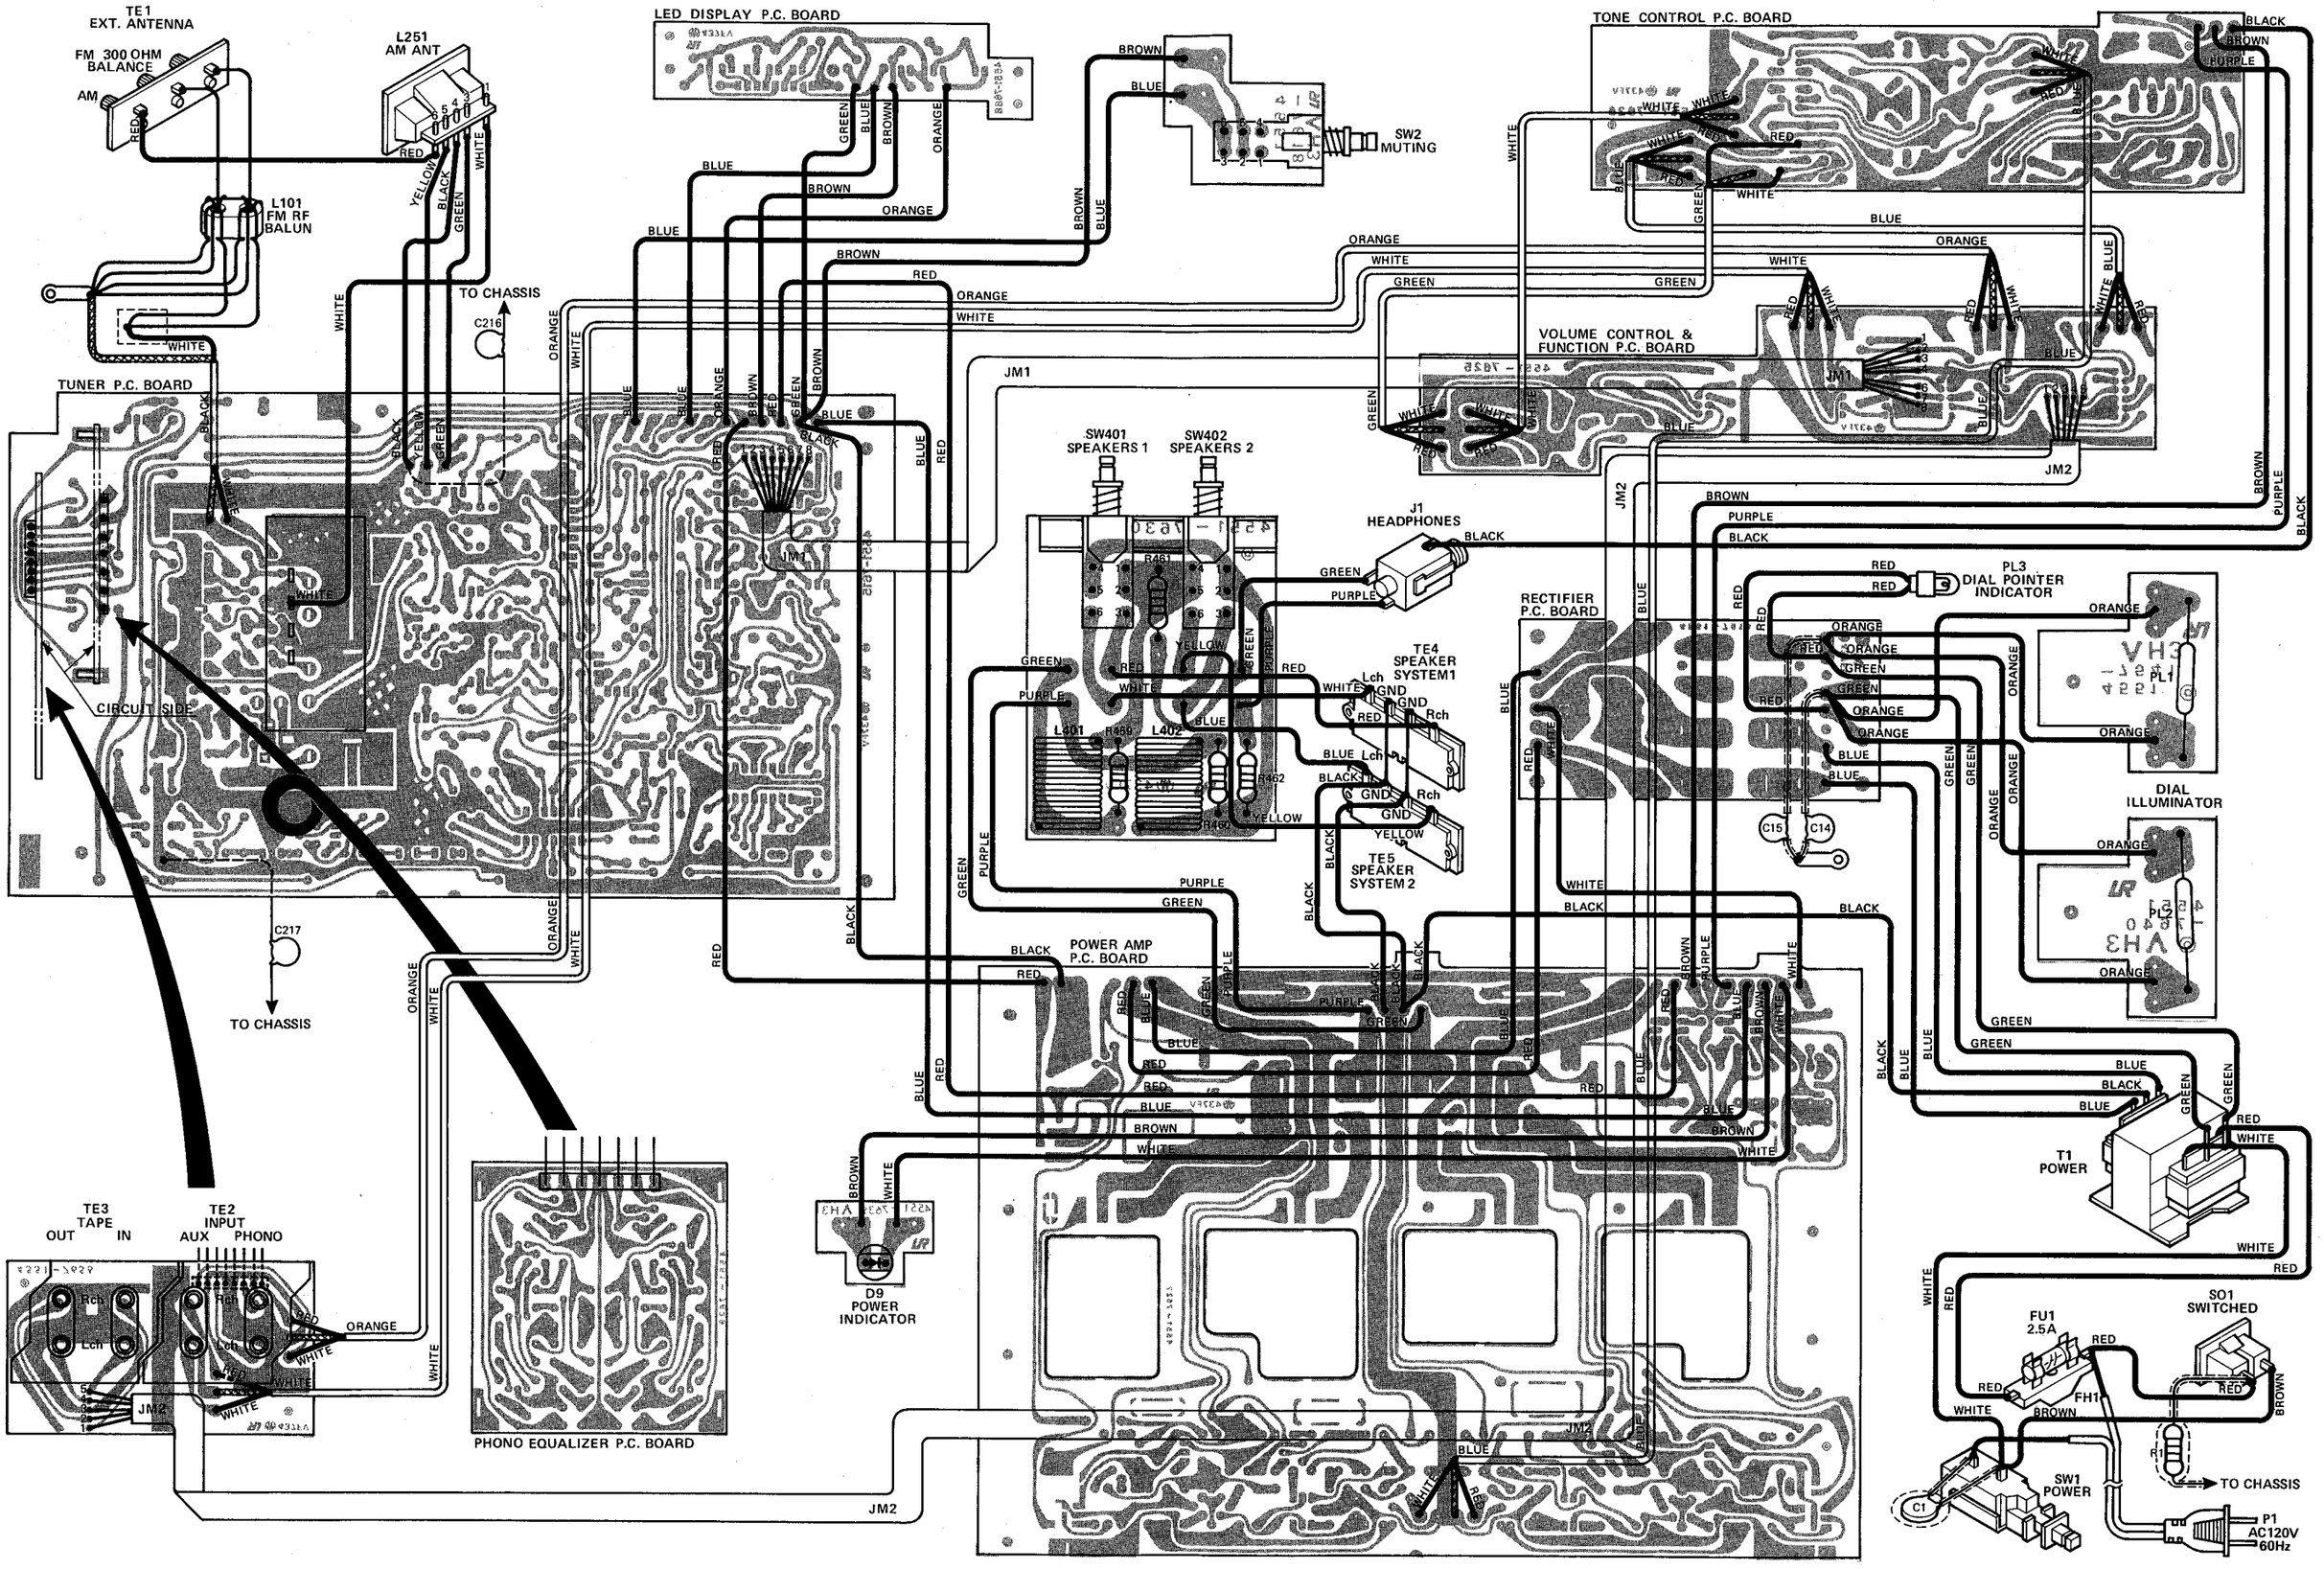

WIRING DIAGRAM

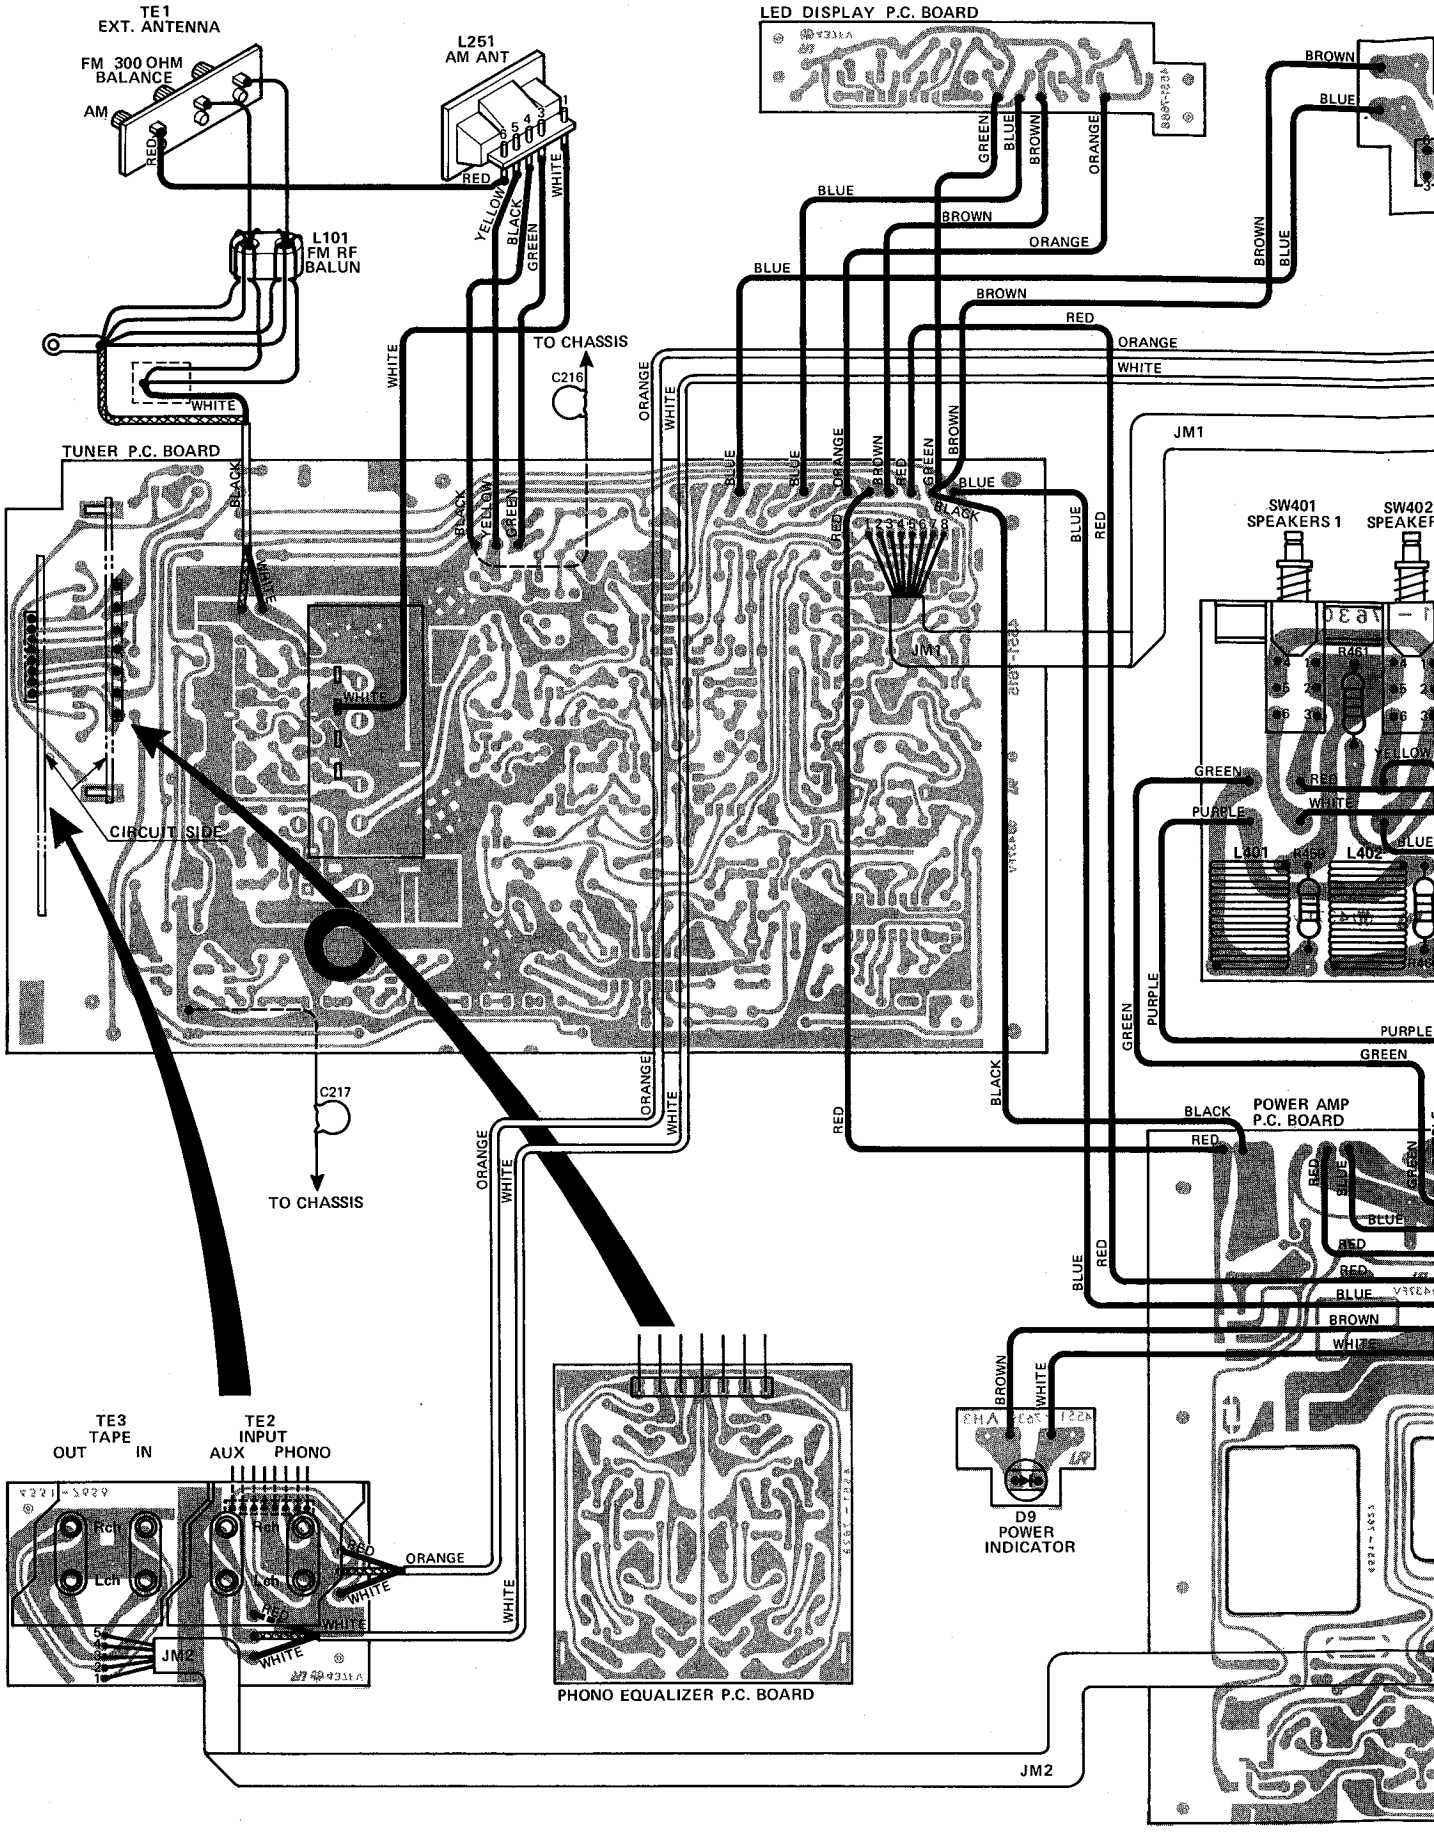

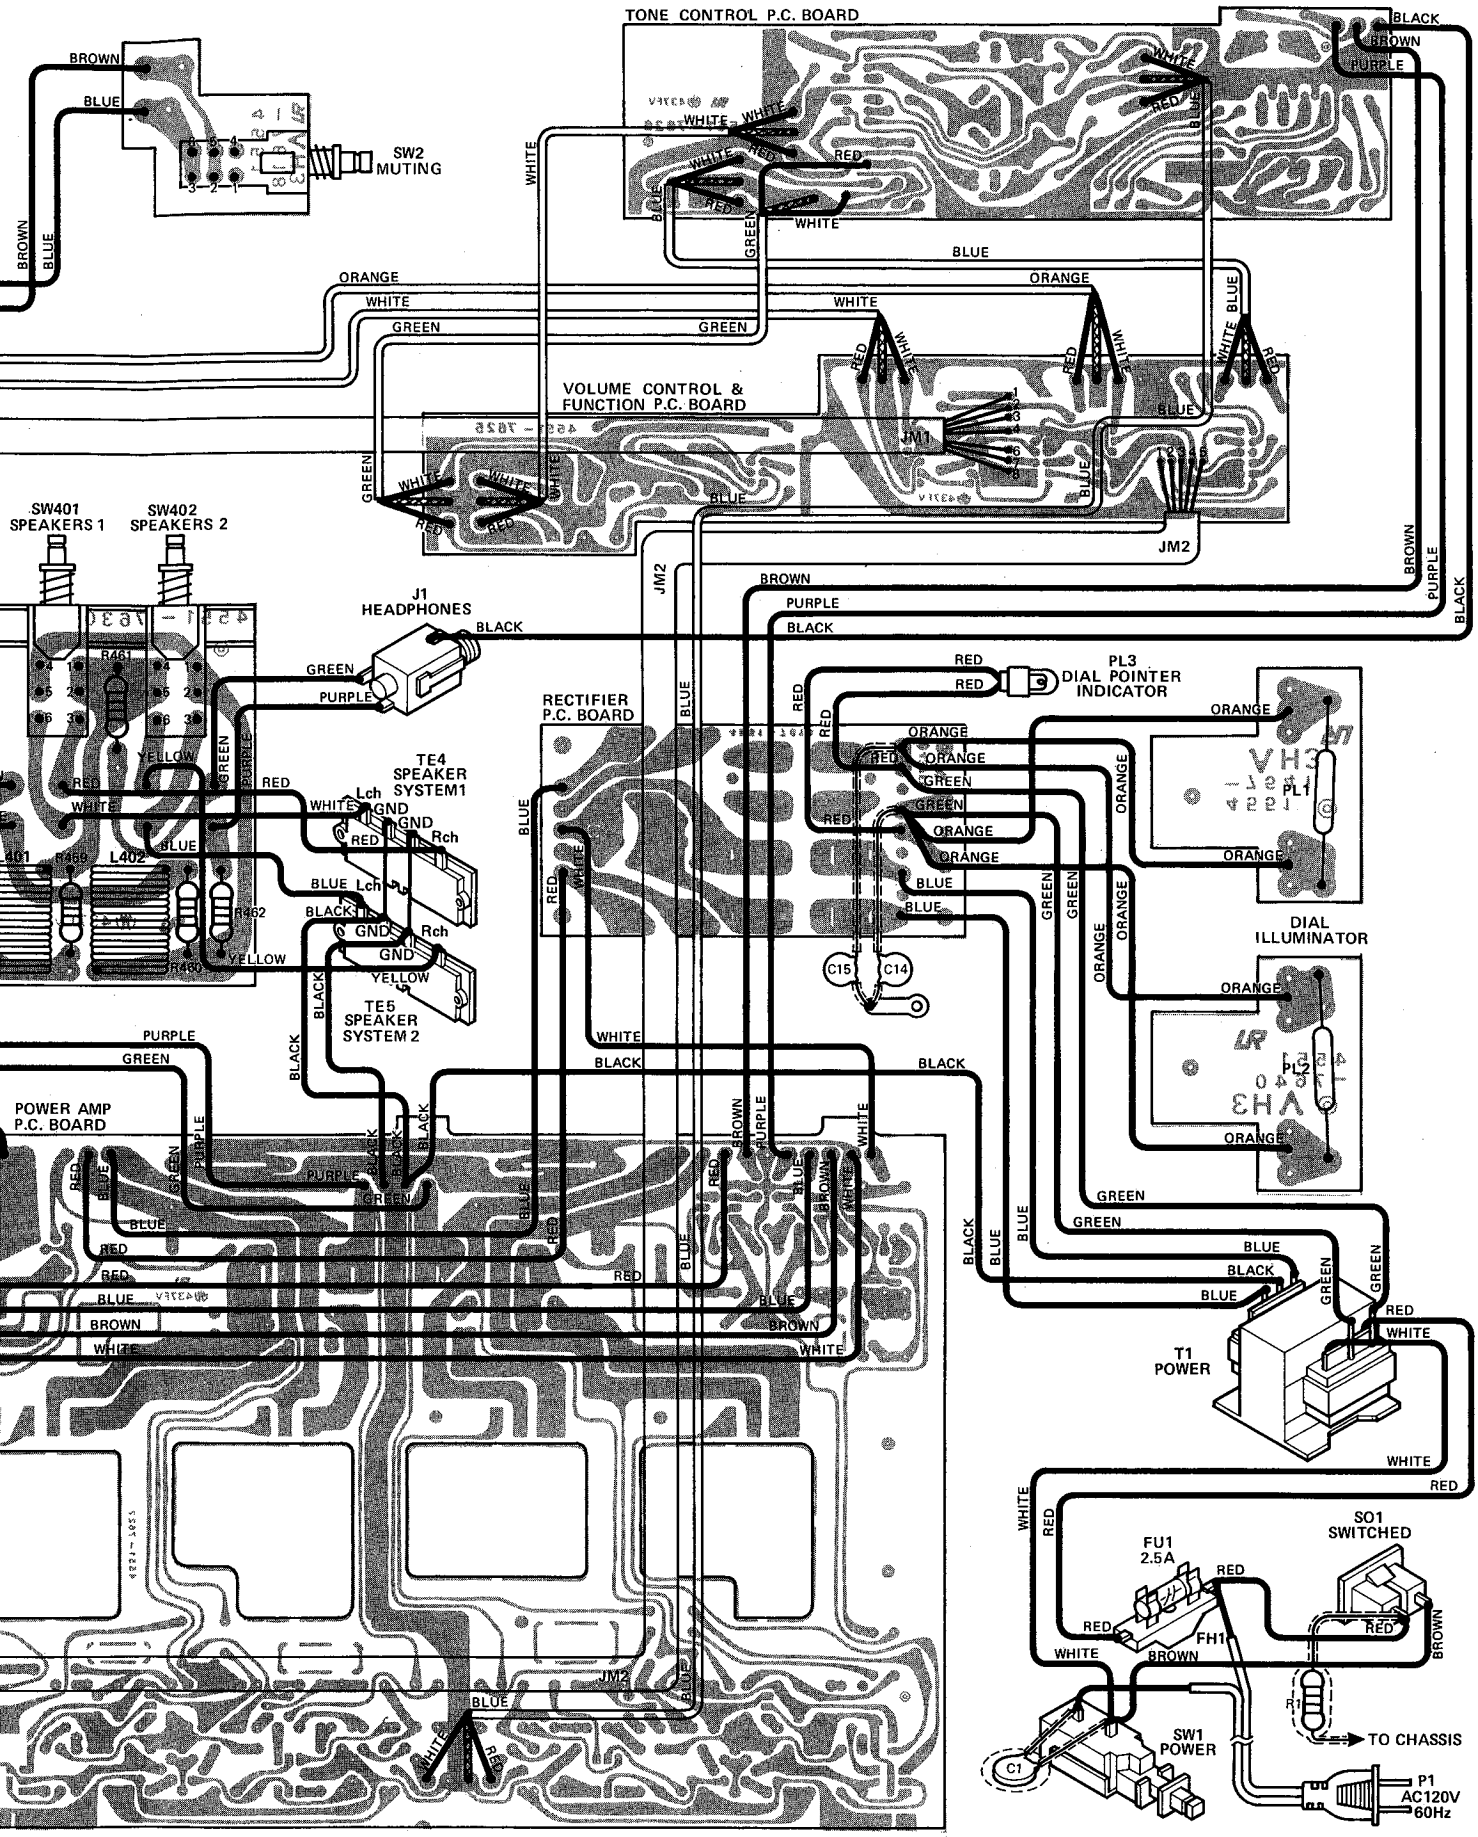
TONE CONTROL P.C. BOARD
SW2
MUTING
VOLUME CONTROL &
FUNCTION P.C. BOARD
JM1
JM2
SW401
SPEAKERS 1
SW402
SPEAKERS 2
J1
HEADPHONES
RECTIFIER
P.C. BOARD
PL3
DIAL POINTER
INDICATOR
DIAL
ILLUMINATOR
TE4
SPEAKER
SYSTEM1
TE5
SPEAKER
SYSTEM 2
POWER AMP
P.C. BOARD
T1
POWER
SO1
SWITCHED
FU1
2.5A
FH1
SW1
POWER
TO CHASSIS
P1
AC120V
60Hz
BROWN
BLUE
WHITE
RED
GREEN
ORANGE
PURPLE
BLACK
YELLOW
Lch
Rch
GND

GENERAL UNIT EXPLODED VIEW

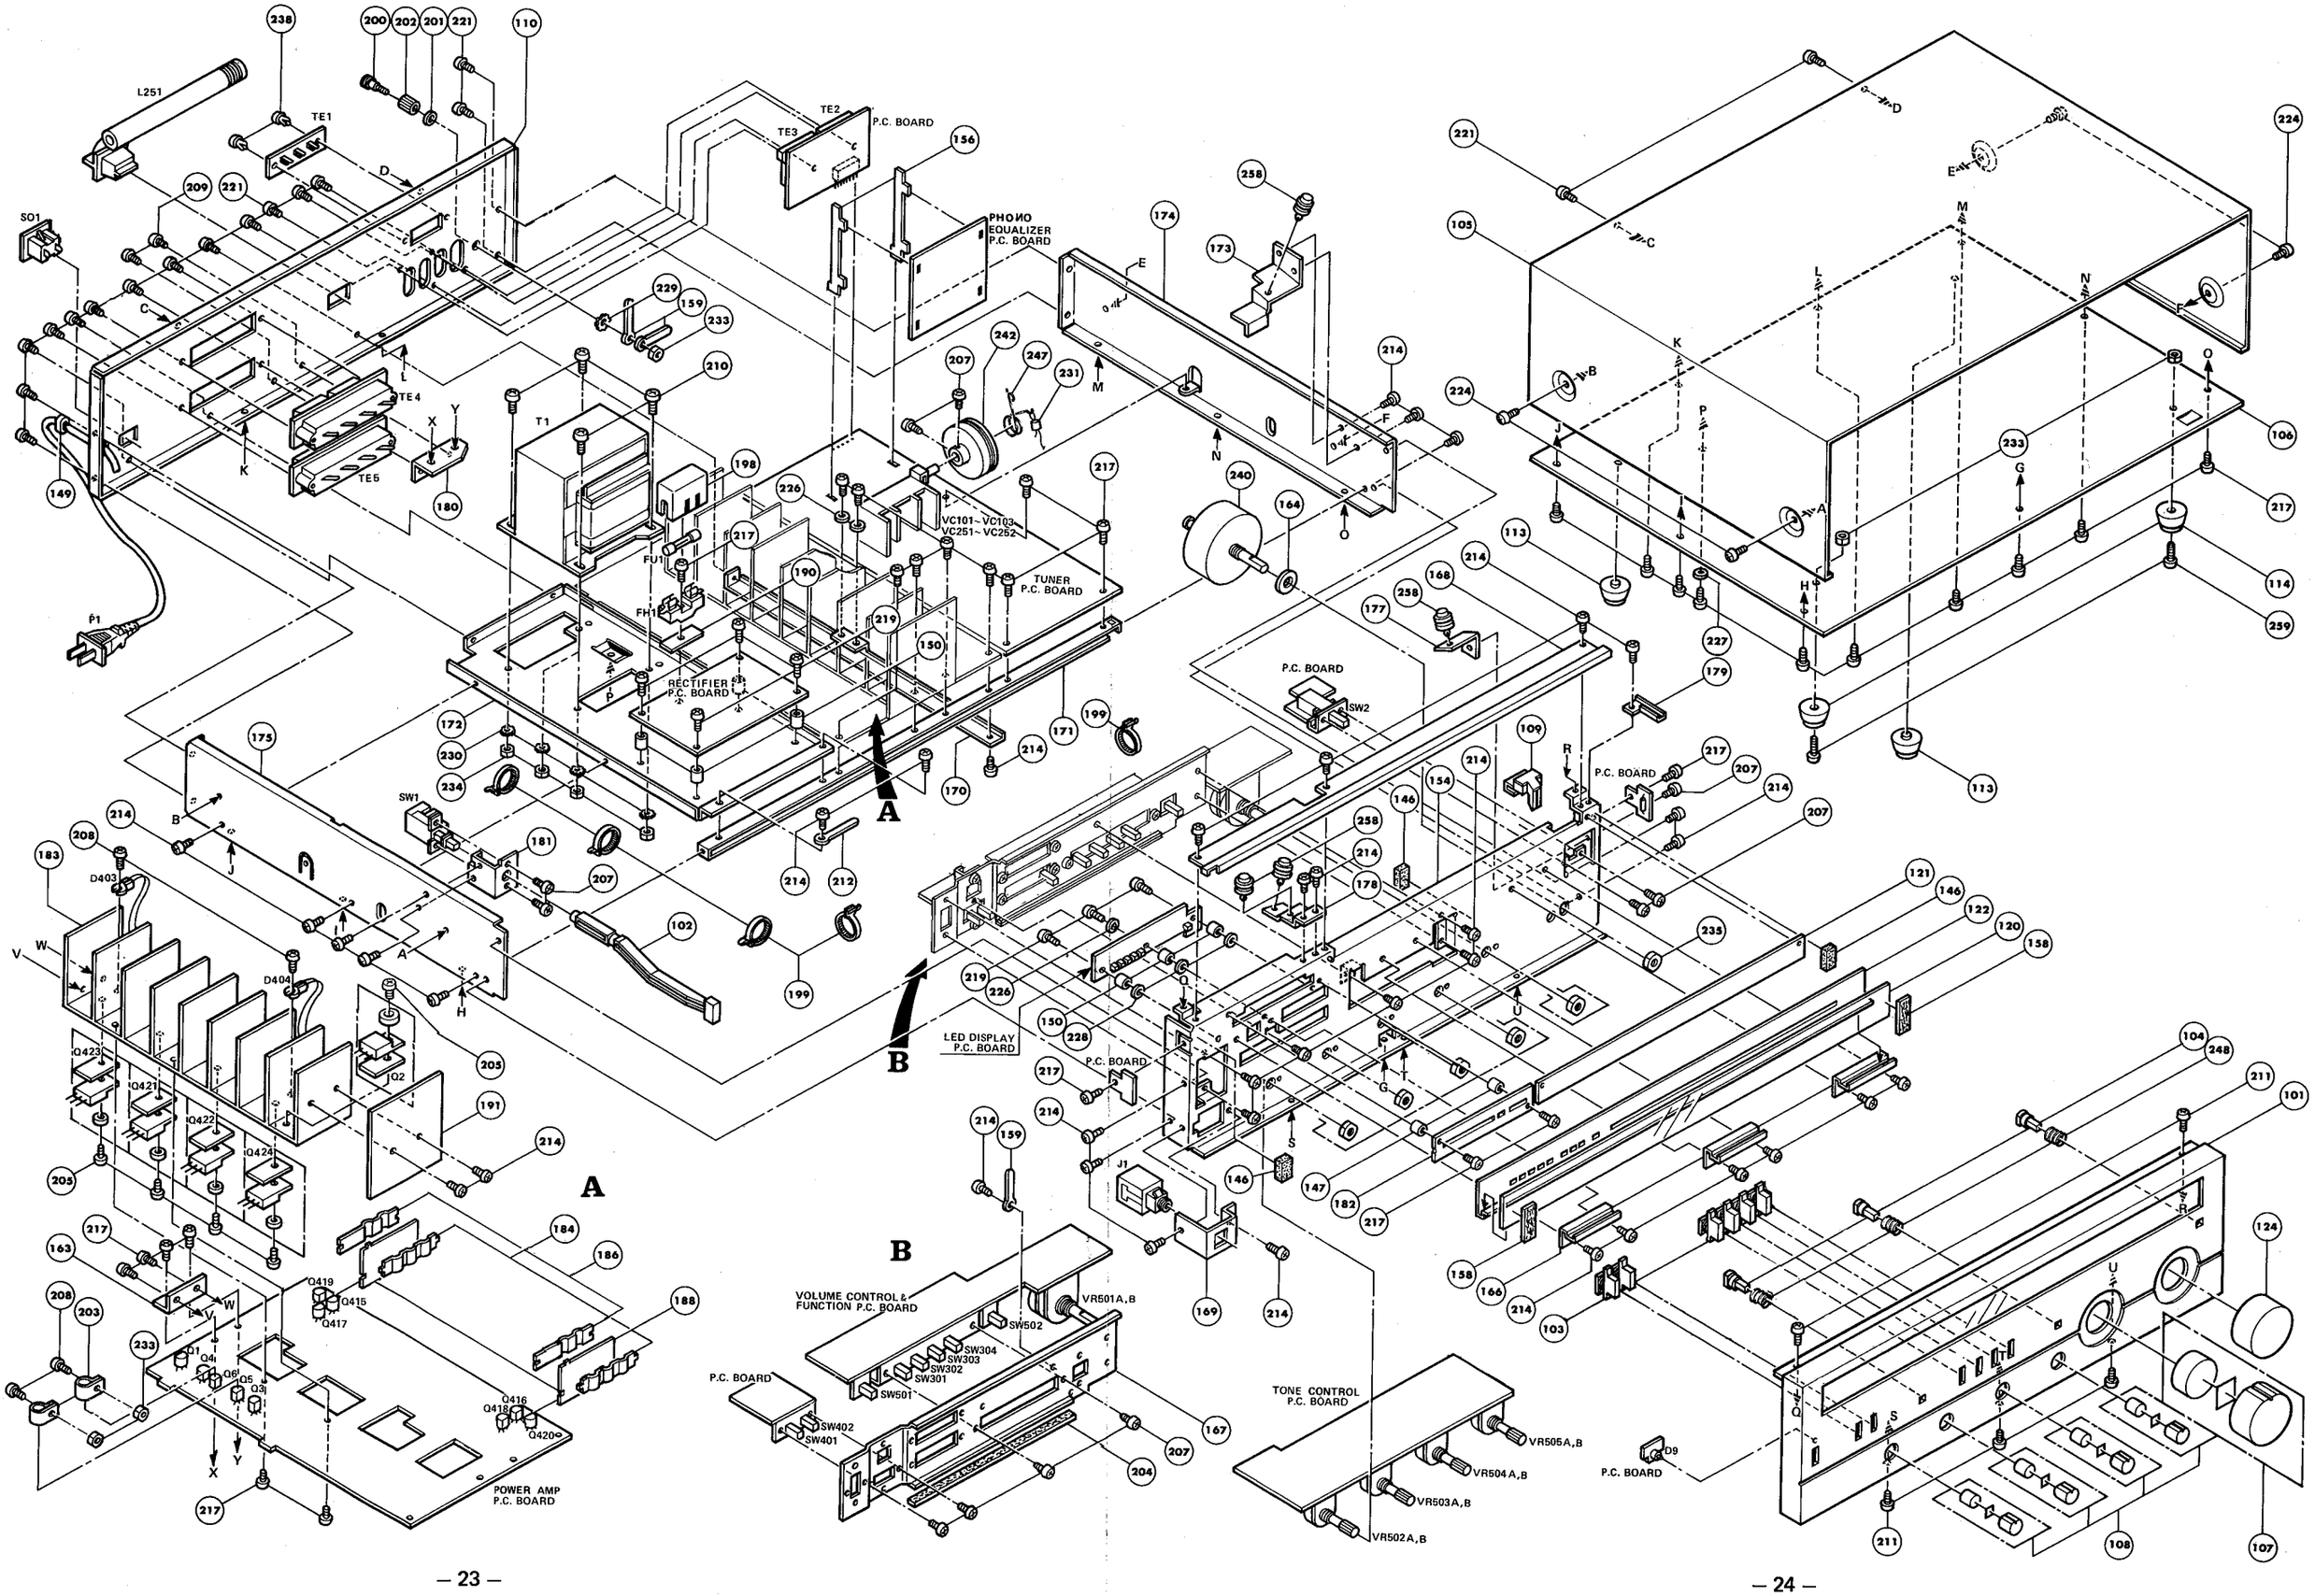

GENERAL UNIT EXPLODED VIEW

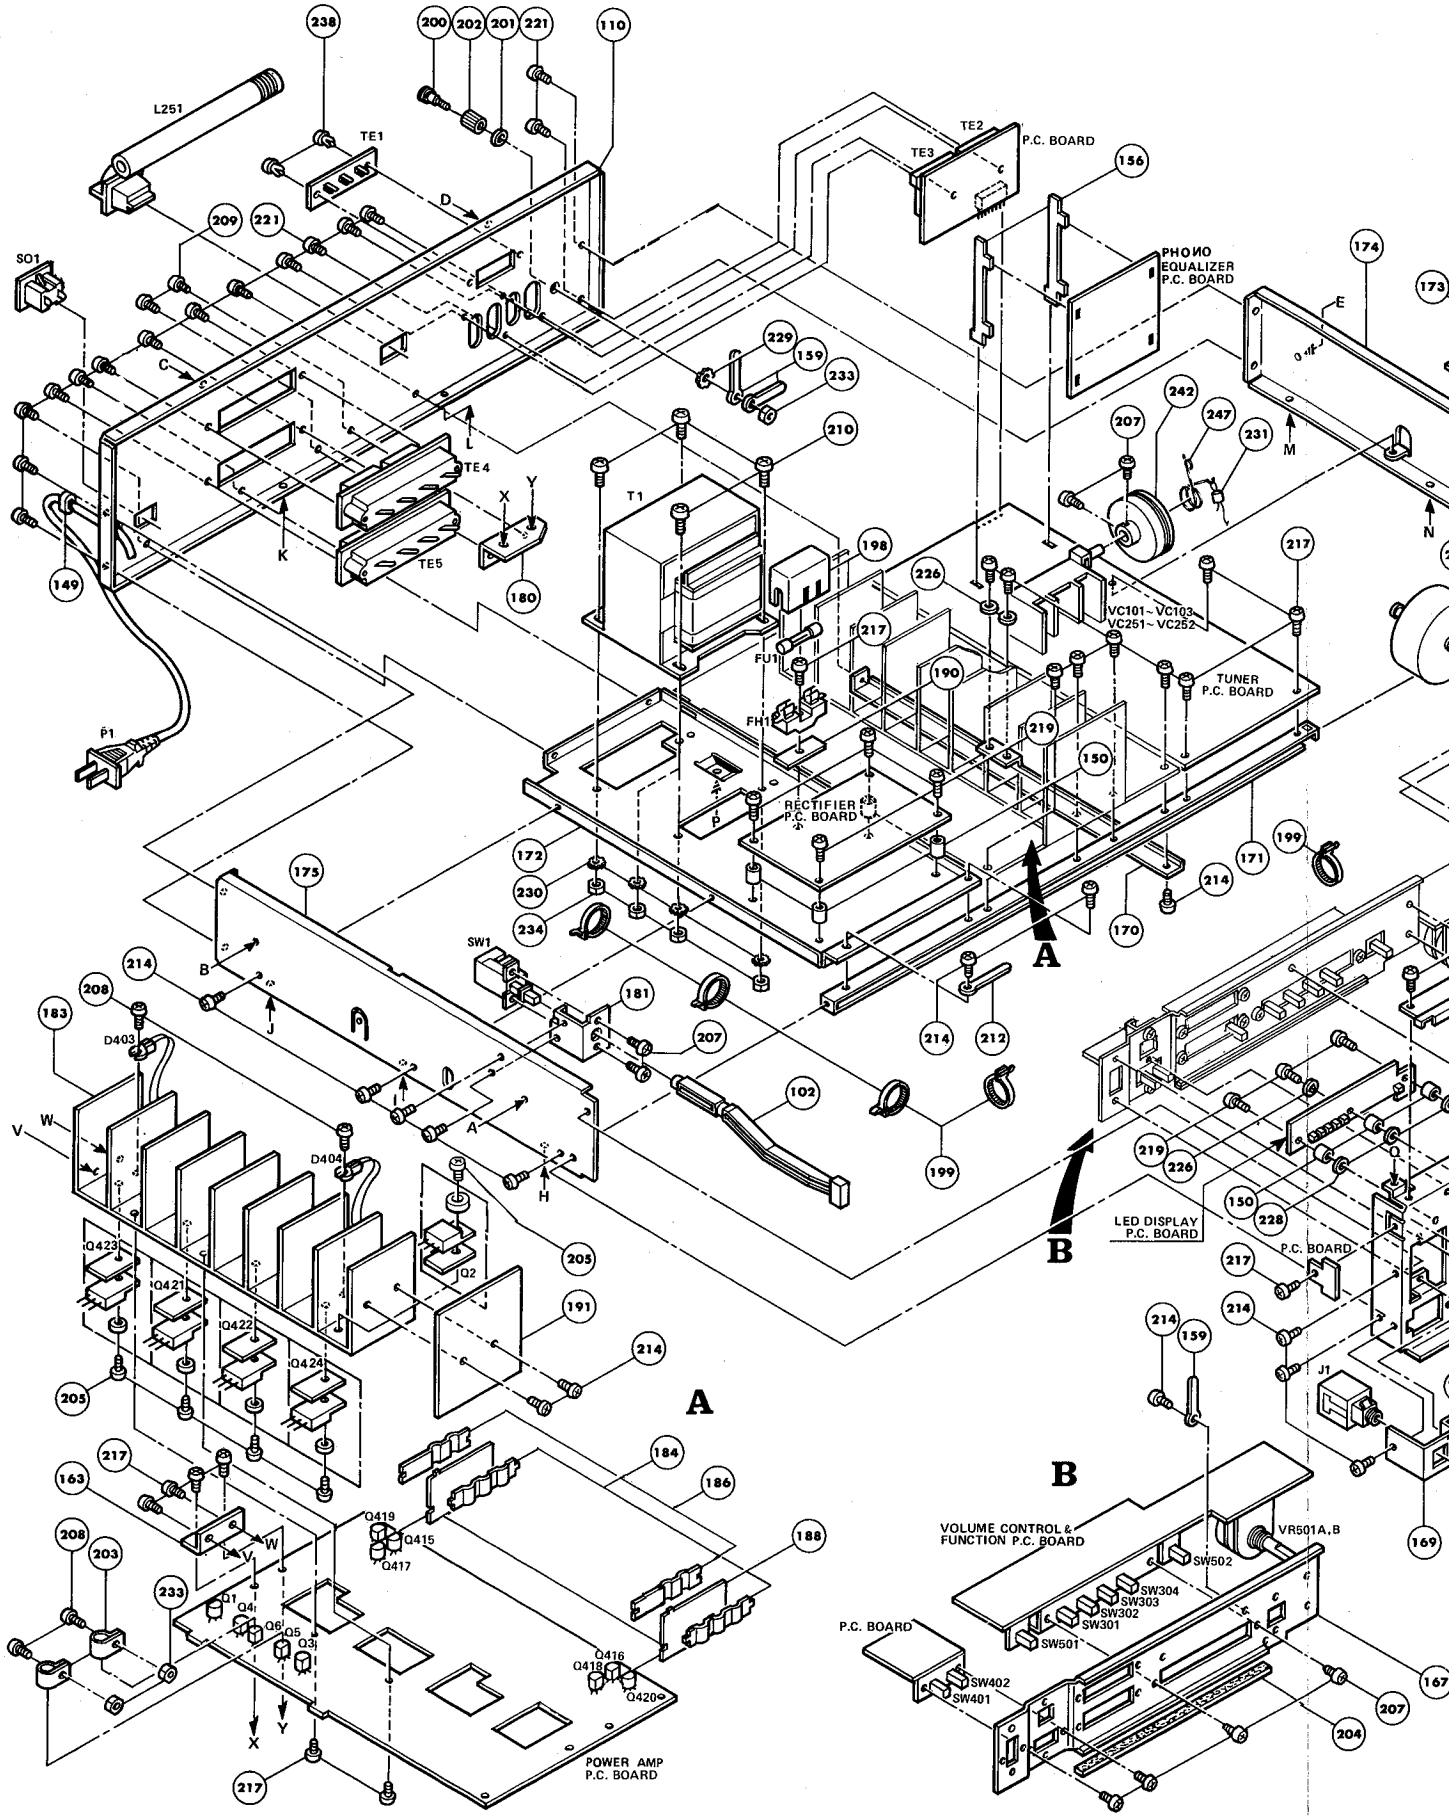

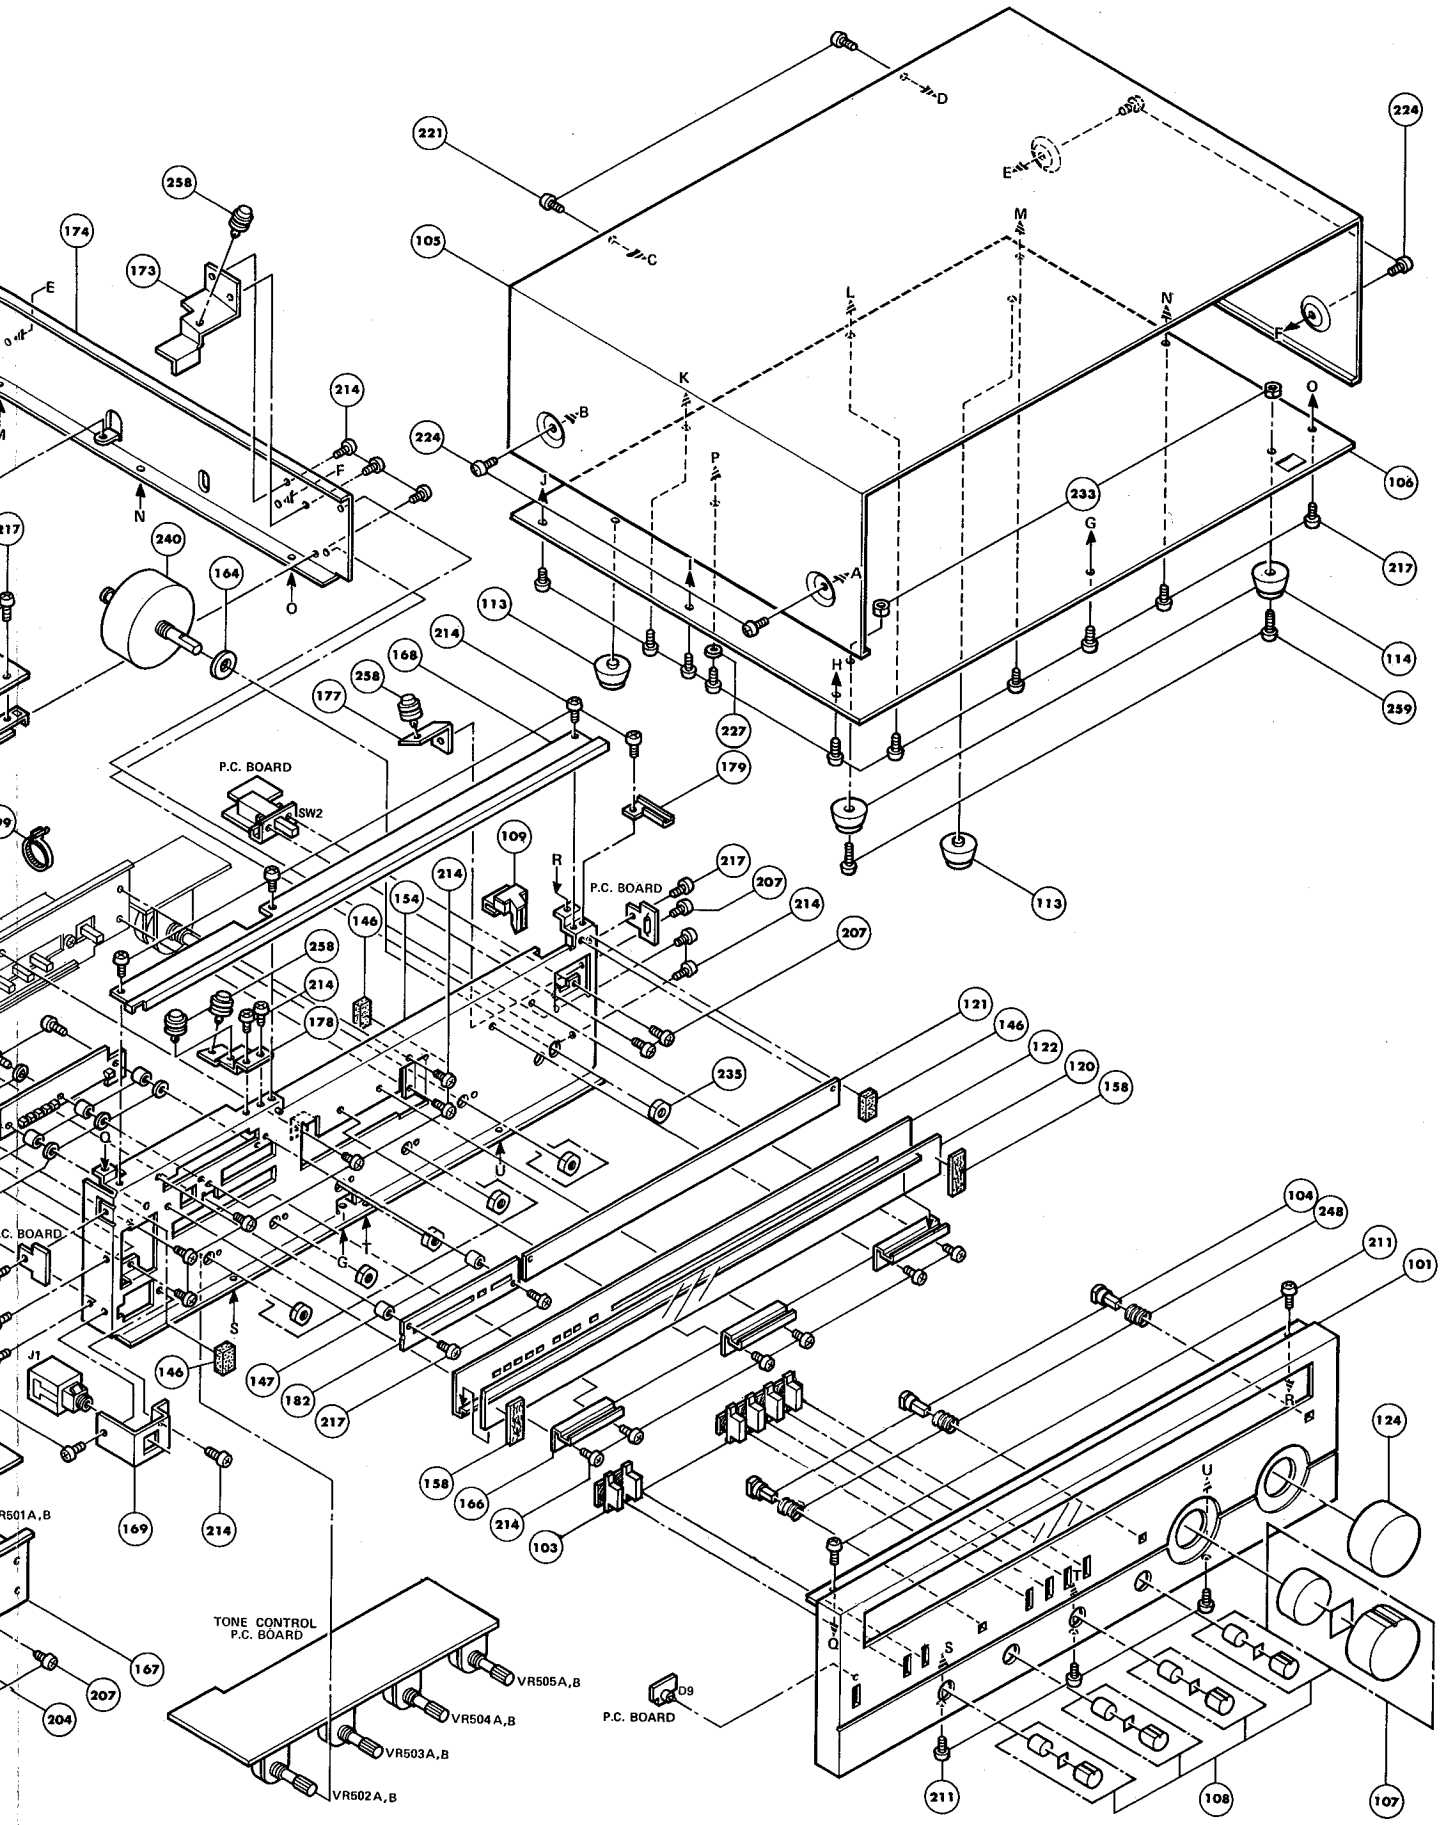
P.C. BOARD
SW2
P.C. BOARD
P.C. BOARD
TONE CONTROL
P.C. BOARD
VR505A,B
VR504A,B
VR503A,B
VR502A,B
D9
P.C. BOARD

CHASSIS PARTS LIST

Ref. No.	Part No.	Description
	GENERAL UNIT	
101	A443-HK350	Front Panel Assembly
102	A662-HK350-A	Push Button Assembly, Power
103	A662-HK350-B	Push Button Assembly, Speakers, Function
104	A662-HK350-C	Push Button Assembly, Tape Monitor, Loudness, Muting
105	A414-HK350	Cabinet Top Assembly
107	A634-HK350-A	Knob Assembly, Volume
108	A634-HK350-B	Knob Assembly, Bass, Treble, Balance, Blend
109	A672-HK350	Dial Pointer Assembly
110	A424-HK350	Cabinet Back Assembly
113	1319-0139	Foot, Cabinet Bottom Rear
114	1319-7138	Foot, Cabinet Bottom Front
120	1541-01003	Dial Panel
124	1634-01601	Knob, Tuning
240	2602-007109	Tuning Shaft
242	2611-7157	Dial Drum
258	2612-7001	Pulley, Dial Cord
	ELECTRICAL	
T1	5584-701310	Power Transformer
SW1	4431-01017358	Push Switch, Power
SW2	4431-01027294	Push Switch, Muting
SW401, 402	4431-02047551	2-Gang Push Switch, Speakers 1, Speakers 2
FU1	5732-252031	Fuse, 2.5A 125V
FH1	4472-0125	Fuse Holder, FU1
P1	4161-0487	AC Line Cord
TE1	4214-102	FM/AM External Antenna Terminal
TE2, 3	4484-26	4-Pin Jack, Phono, Aux., Tape In, Tape Out
TE4, 5	4214-7034	Speaker Output Terminal, Speaker System 1 & 2
SO1	4474-108	External AC Socket, Switched
J1	4451-0085	Headphones Jack
PL1, 2	5731-1507245	Lamp, 15V 100mA Dial Illuminator
PL3	5731-1207149	Lamp, 12V 60mA Dial Pointer Indicator
L101	5995-703027	Coil, FM RF Balun
L251	5911-211	AM Ferrite Bar Antenna
L401, 402	5991-7125	Coil, RF Choke
D9	5637-GL9PR20	Light Emitting Diode, GL9PR20 Power Indicator
	1397-6	T-Type Feeder Antenna

DIAL CORD STRINGING

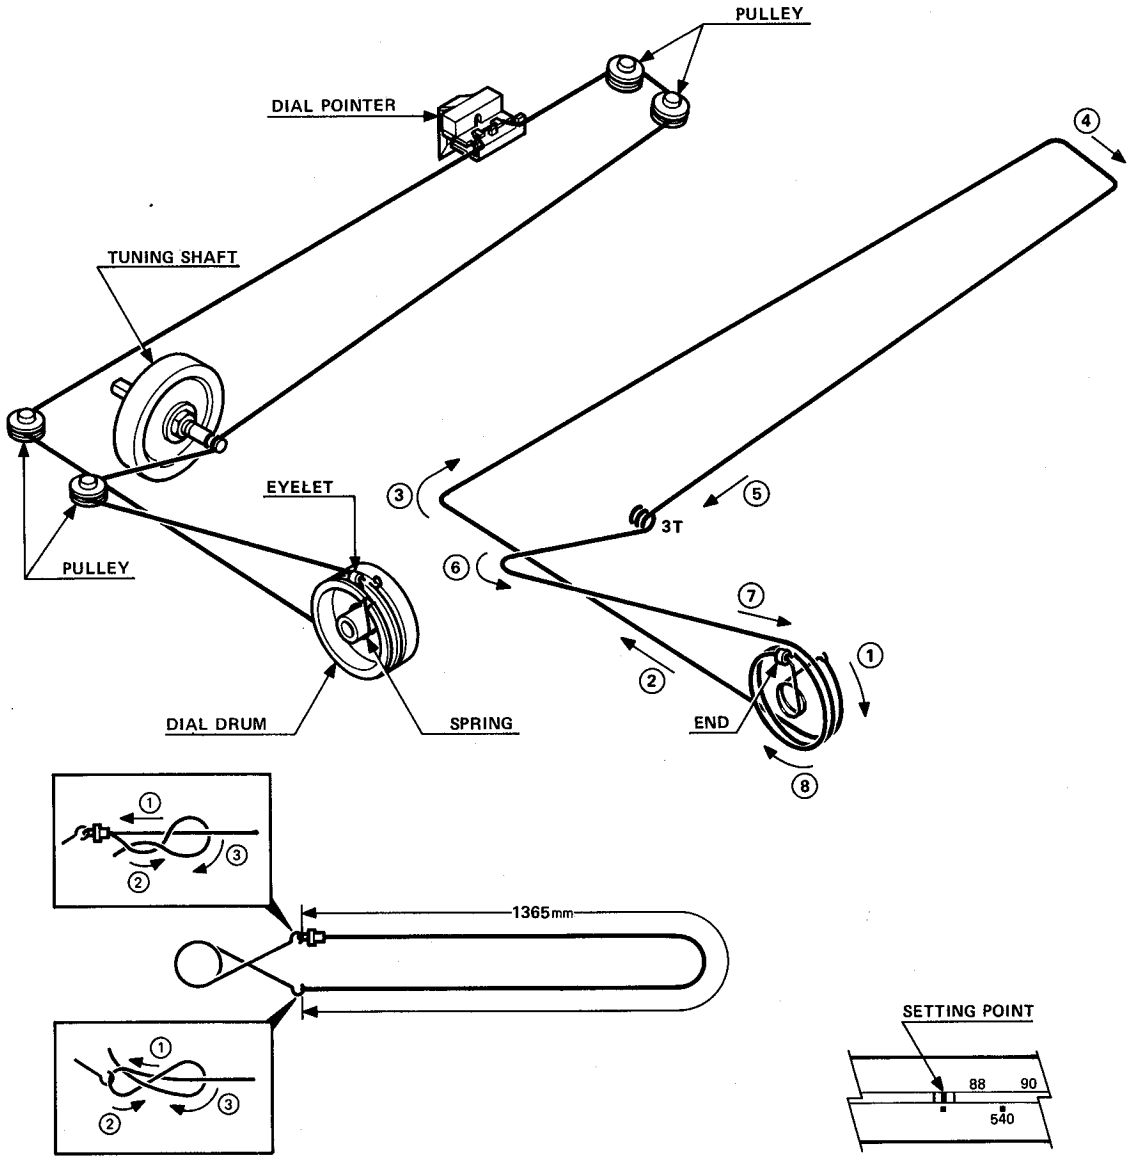

Start stringing with variable capacitor in closed position.

80.9. 1000 P-01 1112-H15211 Printed in Japan

SCHEMATIC DIAGRAM – Model hk350i 120V Units

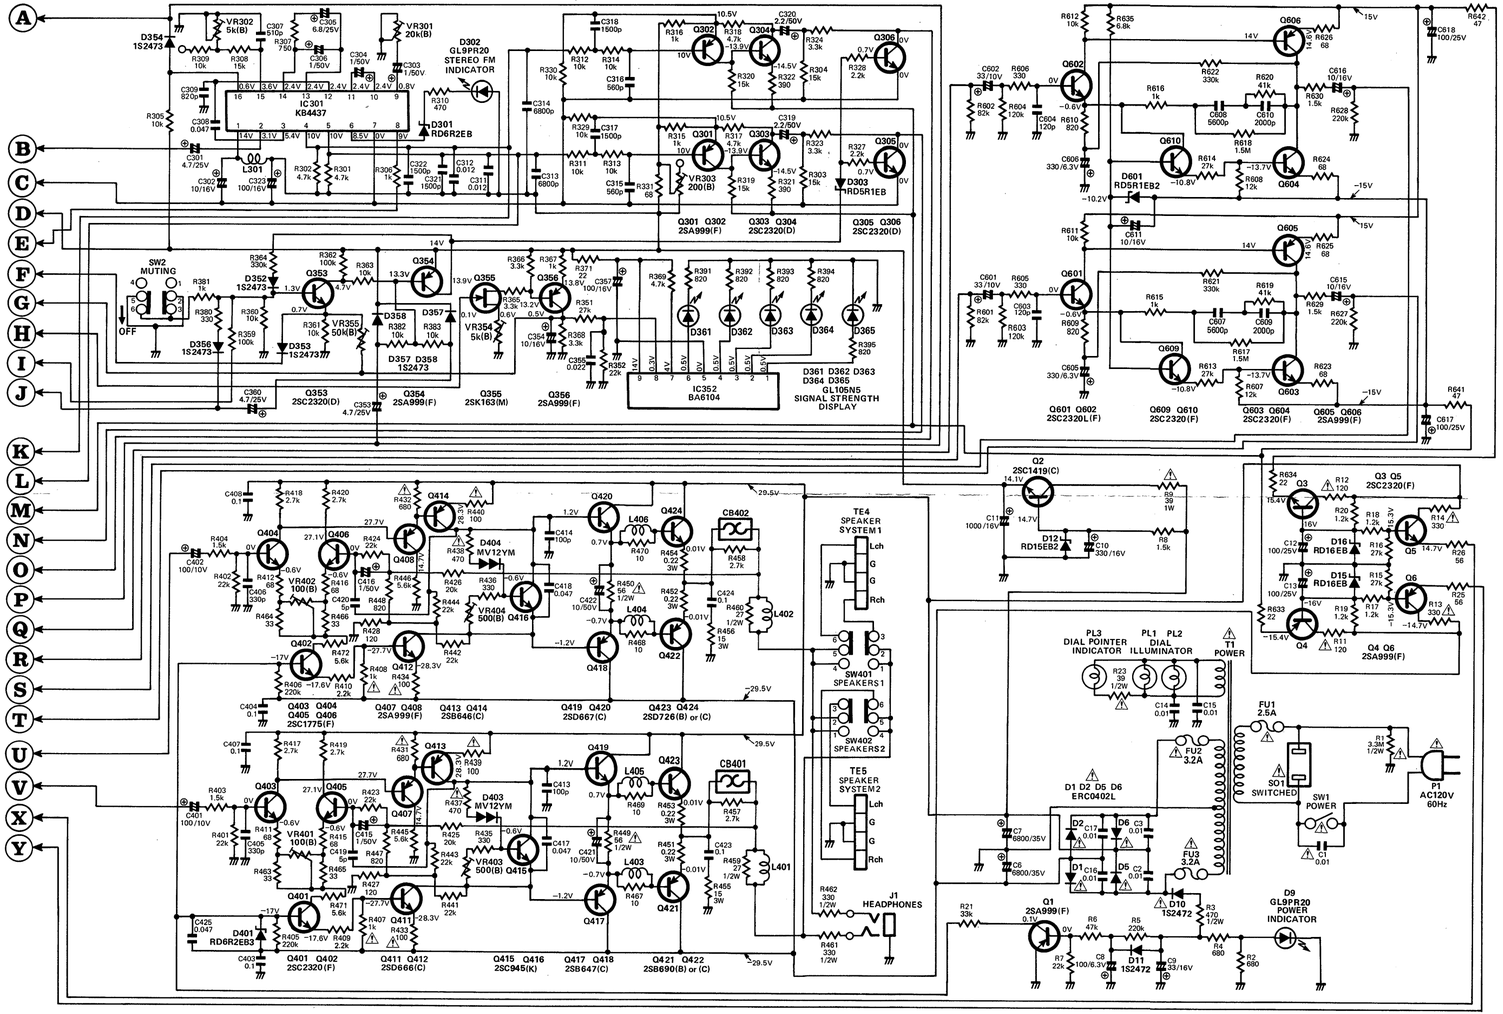

SCHEMATIC DIAGRAM – Model hk350i Multi Voltage Units

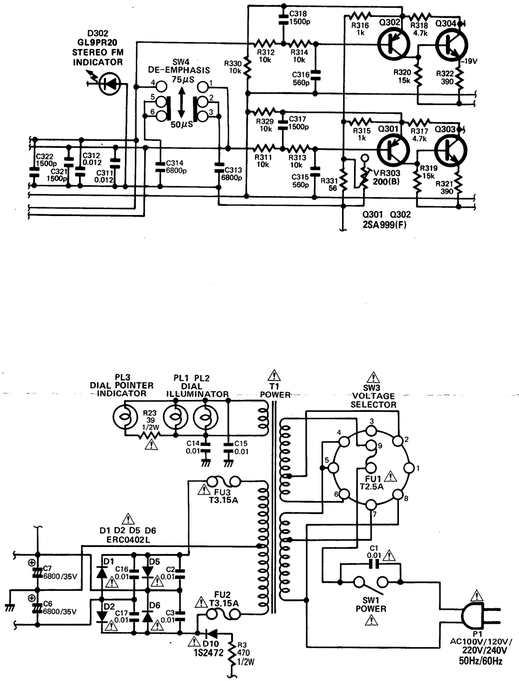

SCHEMATIC DIAGRAM – Model hk350i 120V Units

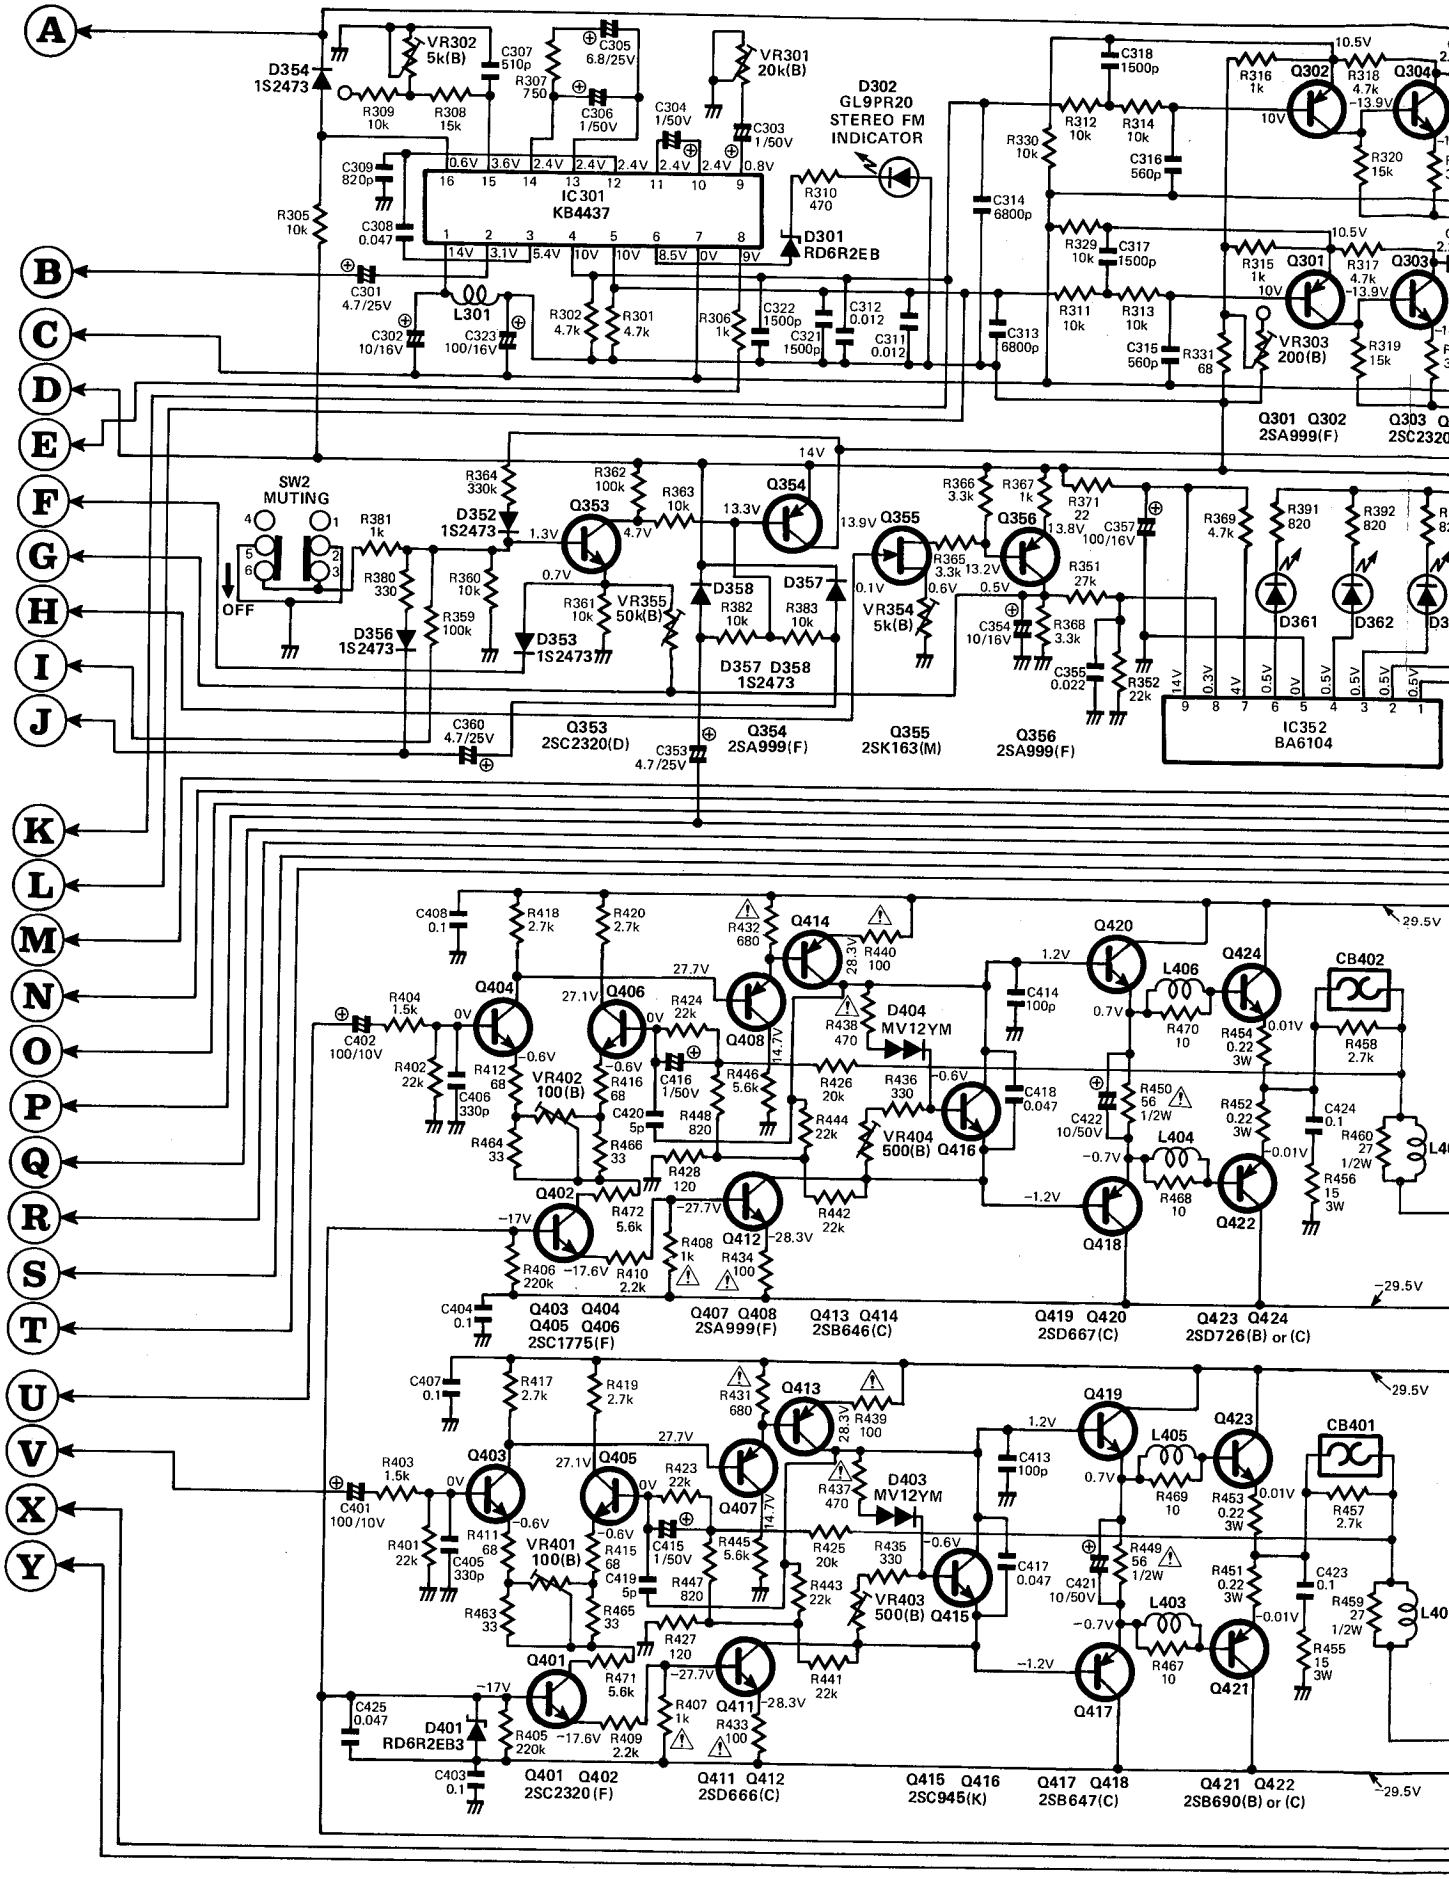

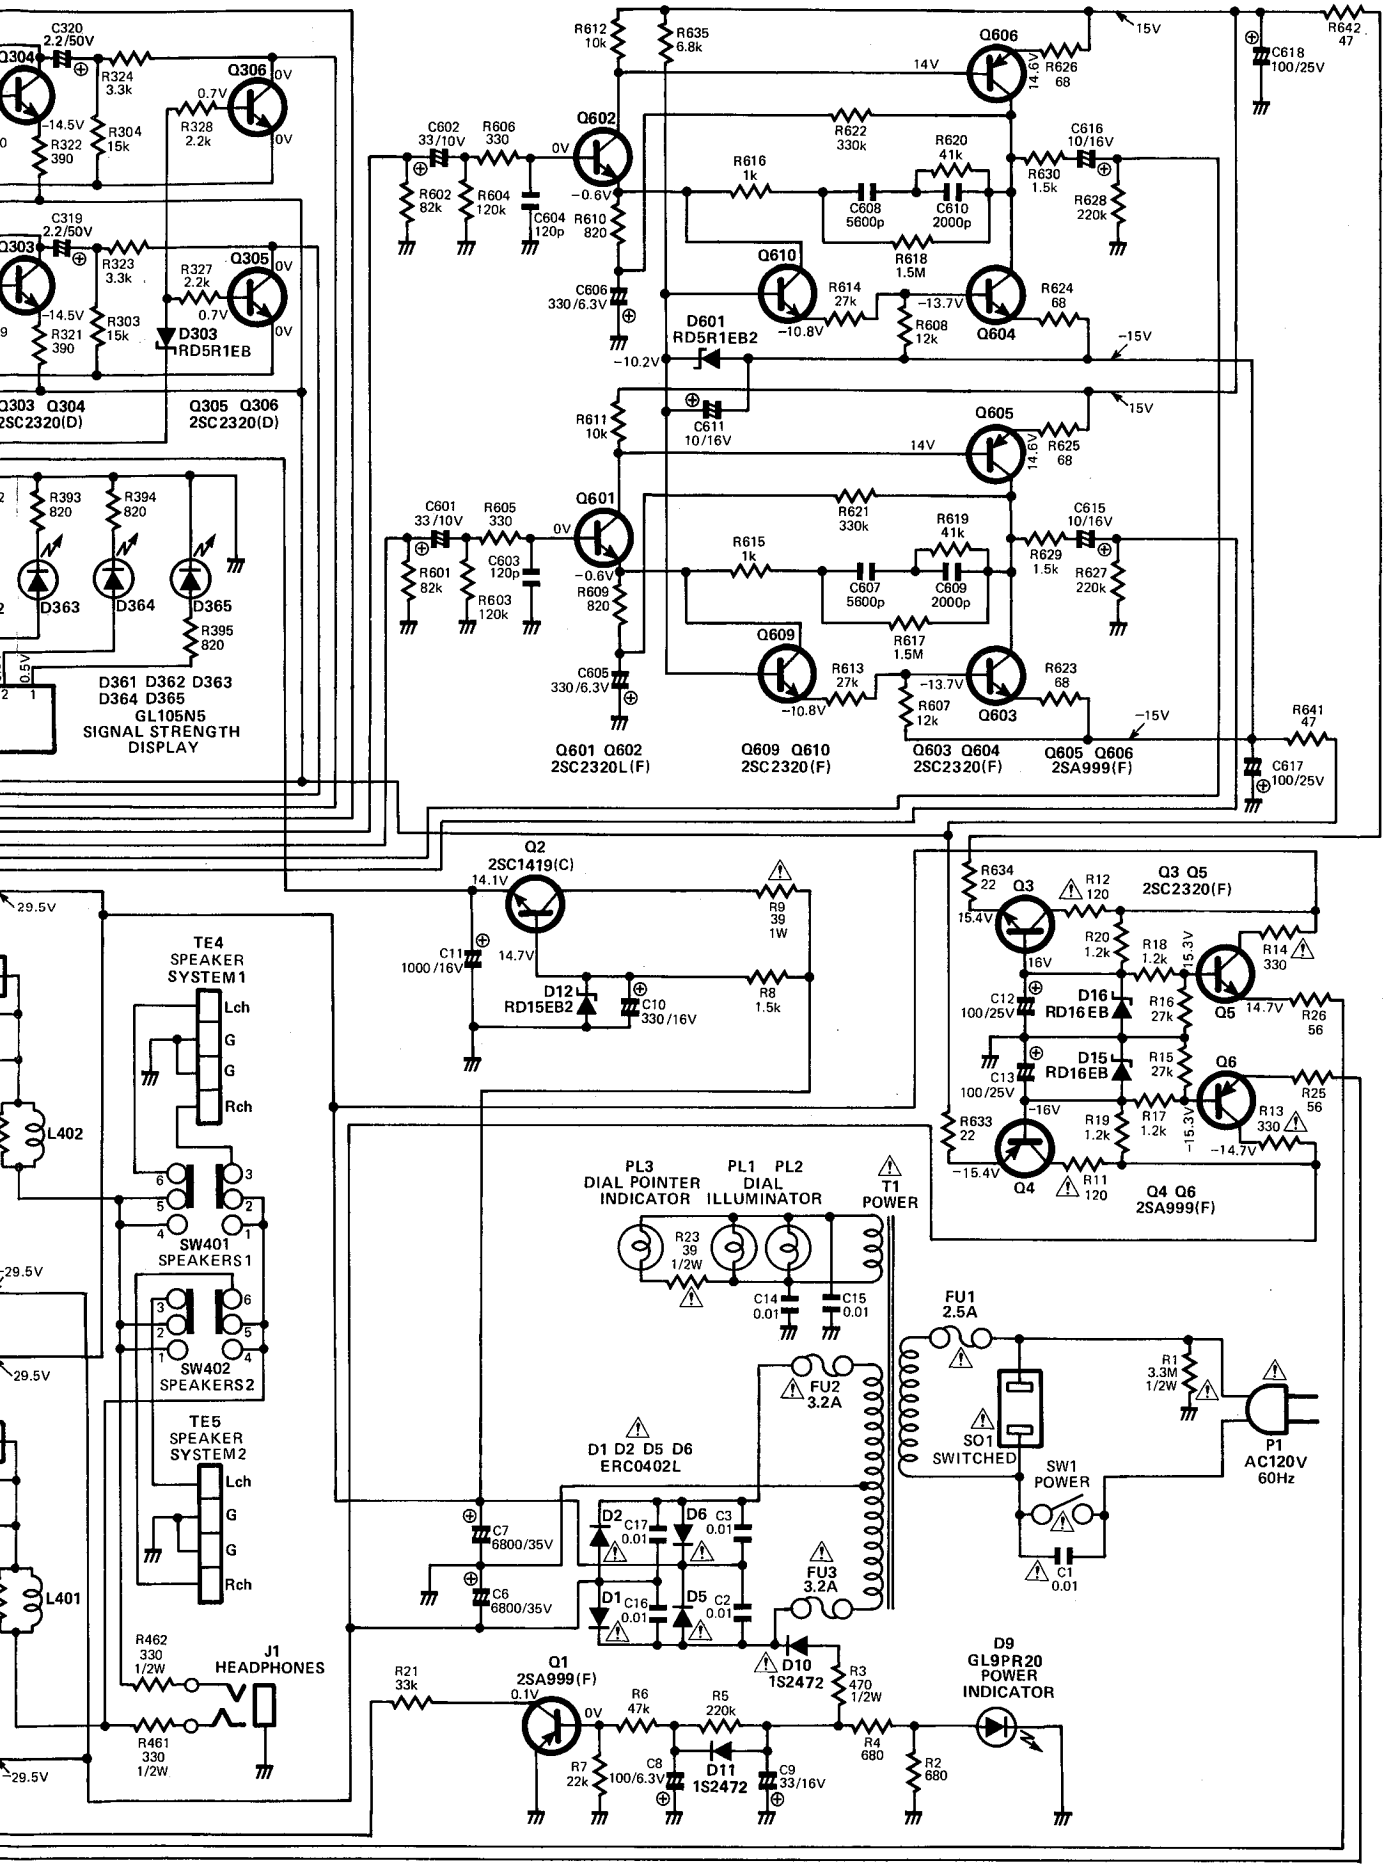
Q303 Q304
2SC2320(D)
Q305 Q306
2SC2320(D)
D303
RD5R1EB
D361 D362 D363
D364 D365
GL105N5
SIGNAL STRENGTH
DISPLAY
Q601 Q602
2SC2320L(F)
Q609 Q610
2SC2320(F)
Q603 Q604
2SC2320(F)
Q605 Q606
2SA999(F)
D601
RD5R1EB2
Q2
2SC1419(C)
D12
RD15EB2
D16
RD16EB
D15
RD16EB
Q3 Q5
2SC2320(F)
Q4 Q6
2SA999(F)
TE4
SPEAKER
SYSTEM1
TE5
SPEAKER
SYSTEM2
SW401
SPEAKERS1
SW402
SPEAKERS2
PL3
DIAL POINTER
INDICATOR
PL1 PL2
DIAL
ILLUMINATOR
T1
POWER
D1 D2 D5 D6
ERC0402L
FU1
2.5A
FU2
3.2A
FU3
3.2A
SO1
SWITCHED
SW1
POWER
P1
AC120V
60Hz
J1
HEADPHONES
D9
GL9PR20
POWER
INDICATOR
D10
1S2472
D11
1S2472
Q1
2SA999(F)

SCHEMATIC DIAGRAM – Model hk350i Multi Voltage Units

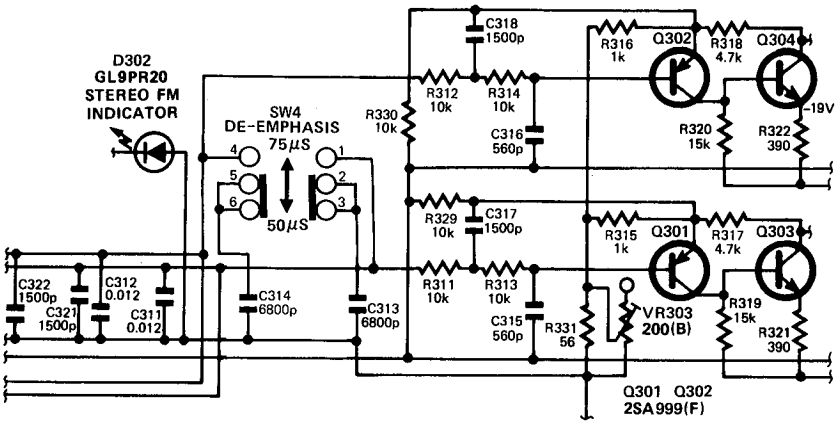

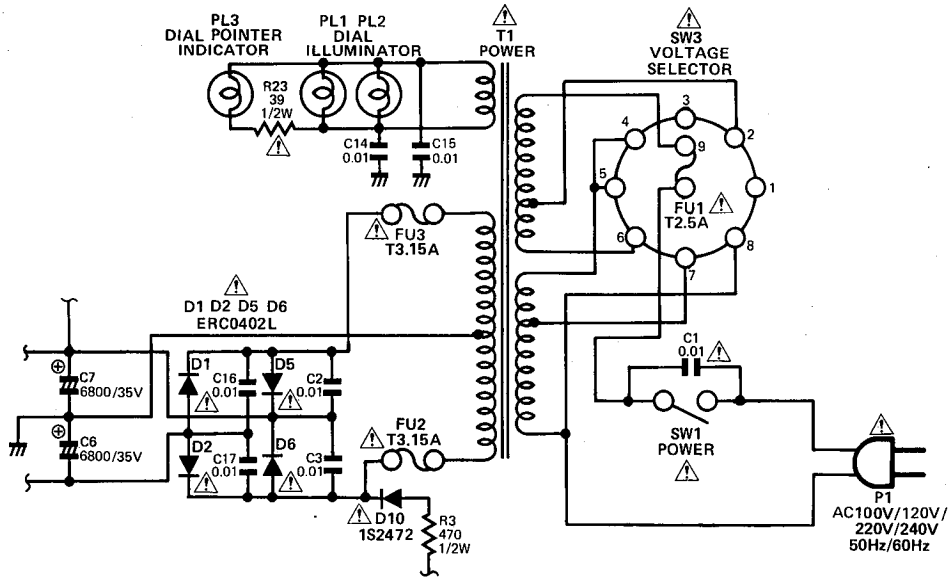

SCHEMATIC DIAGRAM – Model hk350i 120V Units

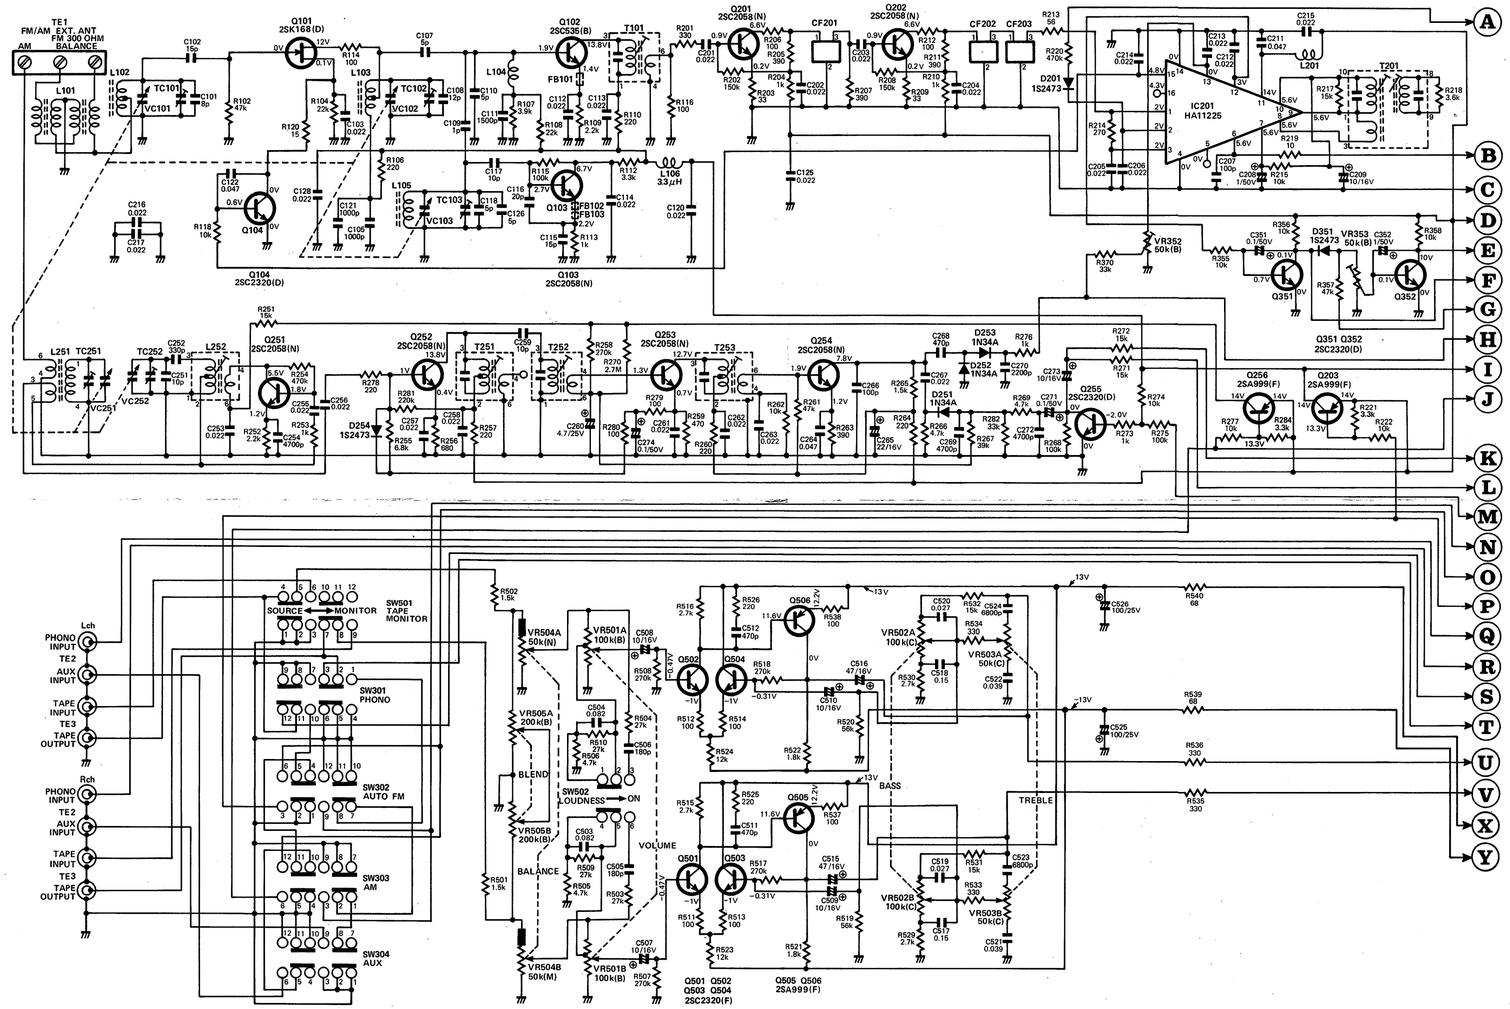

NOTES:

1. ALL RESISTANCES ARE 1/4 WATTS, UNLESS OTHERWISE NOTED, VALUES ARE IN Ω.
   K = 1000Ω, M = 1000KΩ
2. ALL CAPACITANCES VALUES ARE IN μF UNLESS OTHERWISE NOTED. pF = μμF
3. ALL VOLTAGES READING FROM CHASSIS ARE MEASURED WITH V.T.V.M. UNDER NO SIGNAL CONDITIONS.
4. ⚠ SAFETY-REQUIREMENTS COMPONENTS IN ACCORDANCE WITH PRESENT SAFETY REGULATIONS; THESE COMPONENTS MUST ONLY BE REPLACED BY ORIGINAL PARTS.

SCHEMATIC DIAGRAM – Model hk350i 120V Units

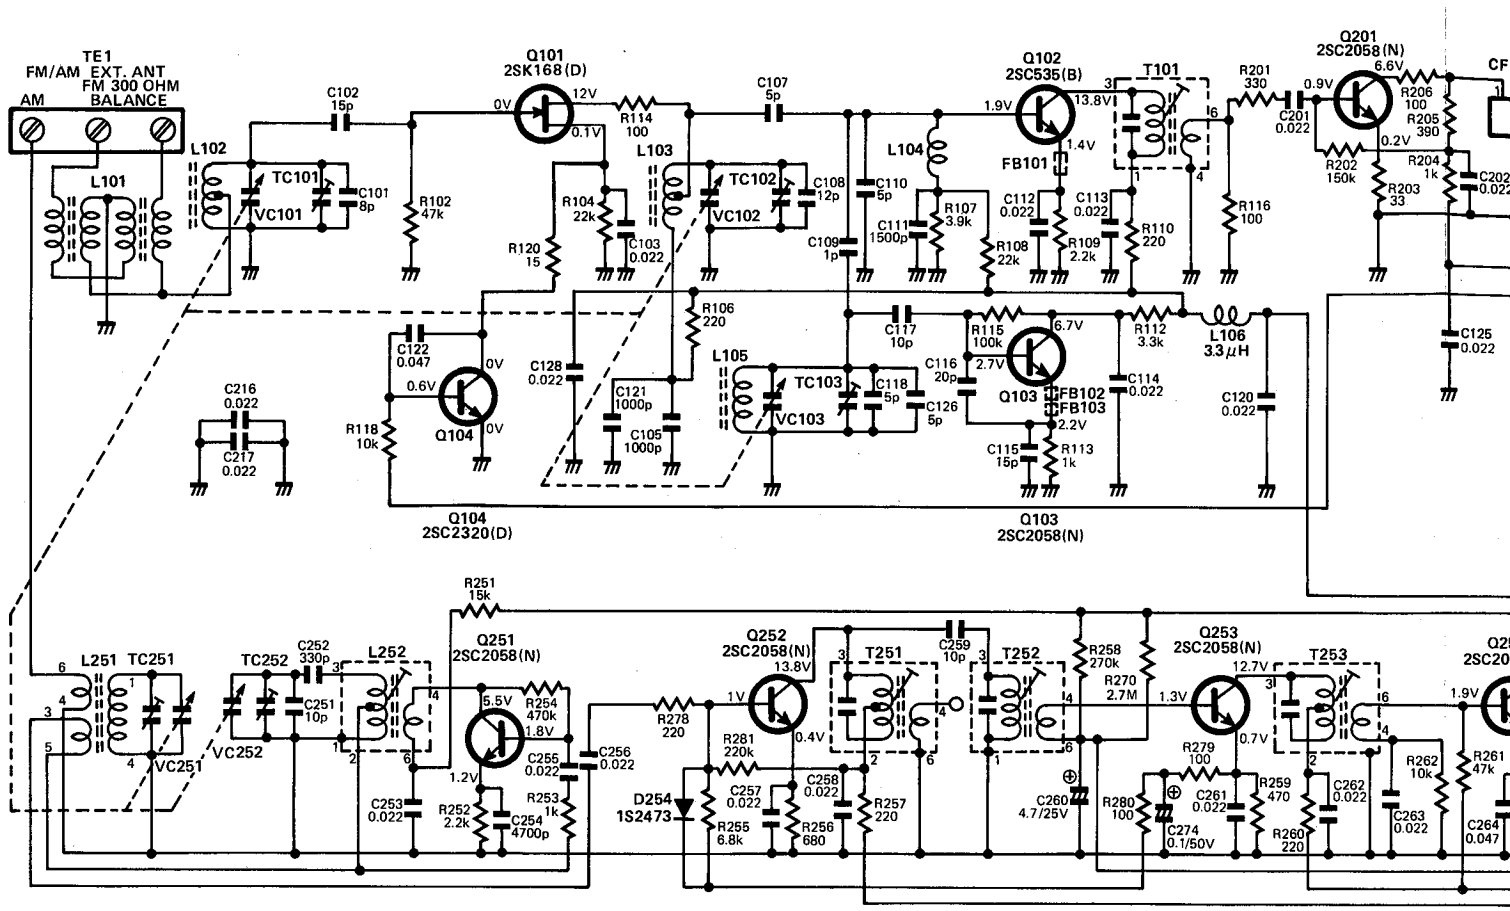

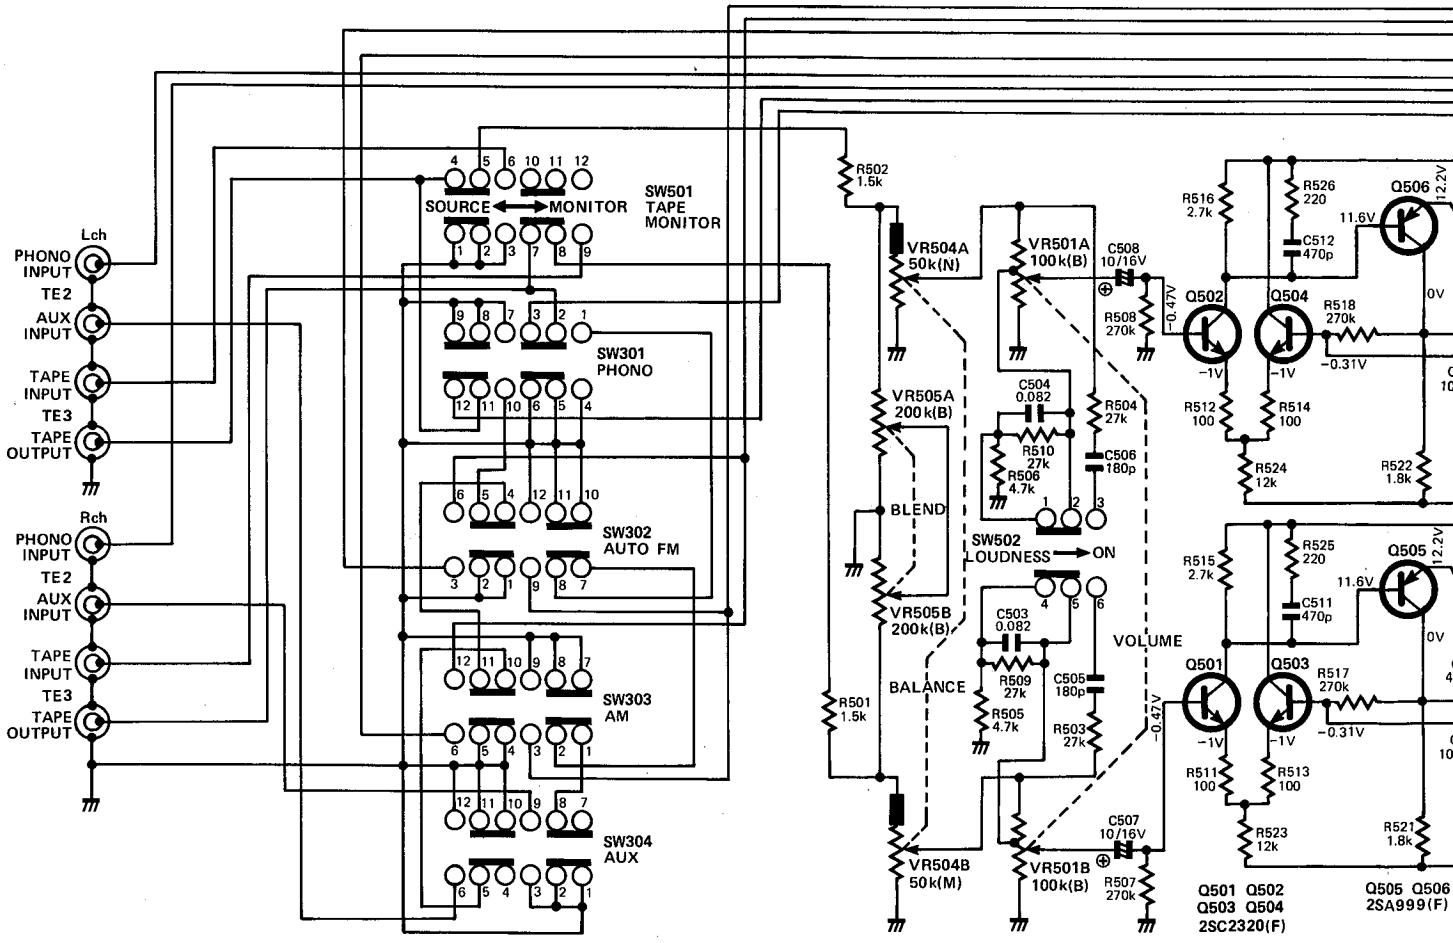

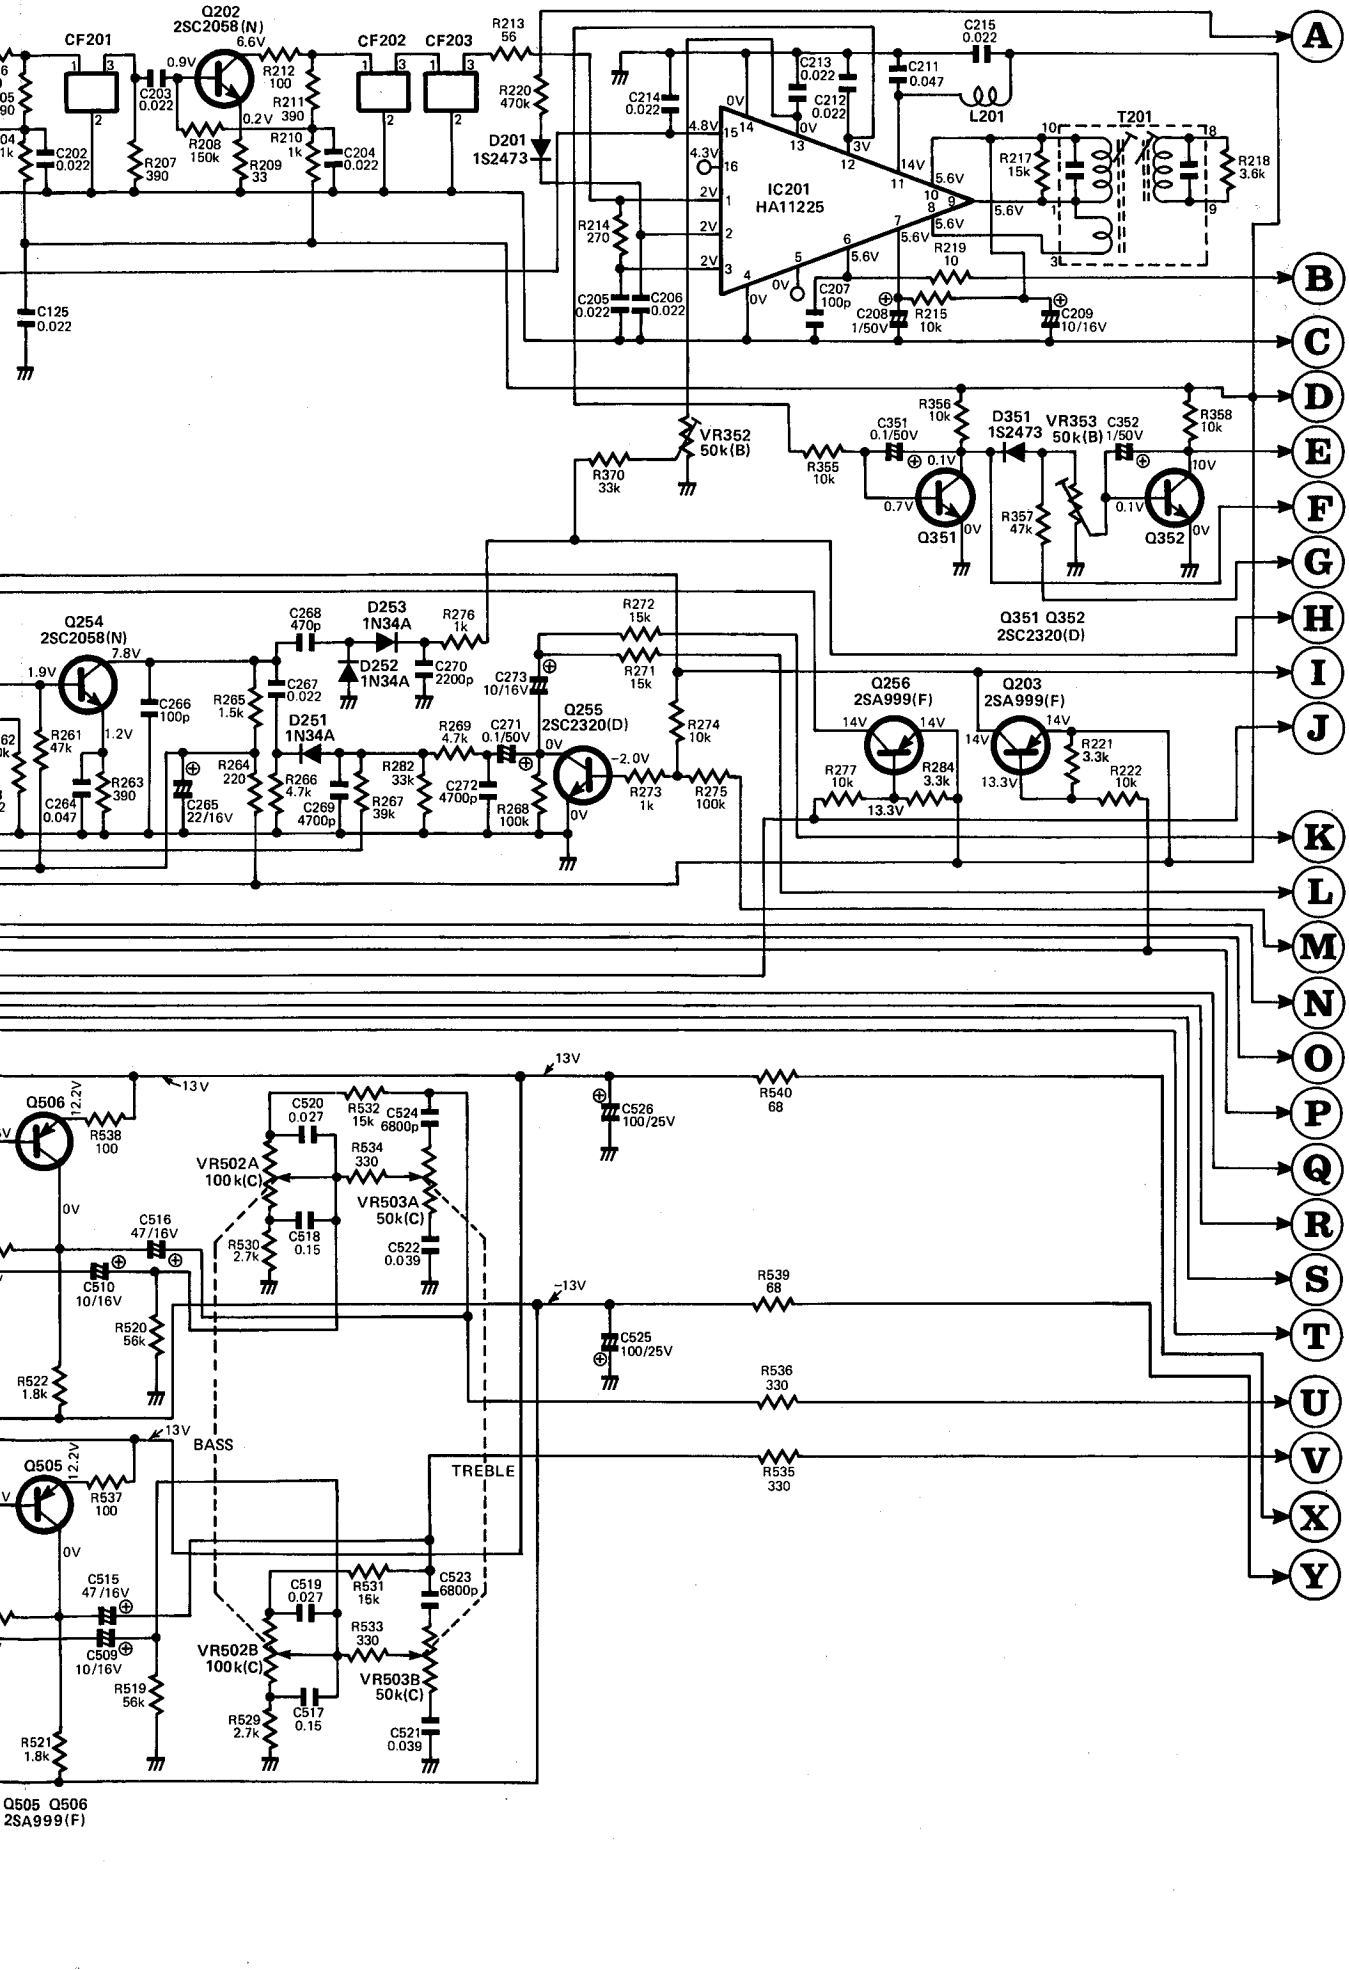
Q202
2SC2058(N)
CF201
CF202
CF203
D201
1S2473
IC201
HA11225
L201
T201
VR352
50k(B)
D351
1S2473
VR353
50k(B)
Q351
Q352
Q351 Q352
2SC2320(D)
Q254
2SC2058(N)
D253
1N34A
D252
1N34A
D251
1N34A
Q255
2SC2320(D)
Q256
2SA999(F)
Q203
2SA999(F)
Q506
Q505
VR502A
100k(C)
VR503A
50k(C)
VR502B
100k(C)
VR503B
50k(C)
BASS
TREBLE
Q505 Q506
2SA999(F)
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
X
Y

NOTES:

1. ALL RESISTANCES ARE 1/4 WATTS, UNLESS OTHERWISE NOTED, VALUES ARE IN Ω.
   K = 1000Ω, M = 1000KΩ
2. ALL CAPACITANCES VALUES ARE IN μF UNLESS OTHERWISE NOTED. pF = μμF
3. ALL VOLTAGES READING FROM CHASSIS ARE MEASURED WITH V.T.V.M. UNDER NO SIGNAL CONDITIONS.
4. ⚠ SAFETY-REQUIREMENTS COMPONENTS IN ACCORDANCE WITH PRESENT SAFETY REGULATIONS, THESE COMPONENTS MUST ONLY BE REPLACED BY ORIGINAL PARTS.